

# Mina Wall

700WSMINA

1.0



## WALL

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is suitable for damp locations.

This product can be dimmed with most ELV or TRIAC dimmers.

This instruction shows a typical installation.



### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.




7400 Linder Ave, Skokie, IL 60077

847.410.4400

[www.techlighting.com](http://www.techlighting.com)


© 2020 Tech Lighting, L.L.C. All rights reserved.

Visual Comfort Group

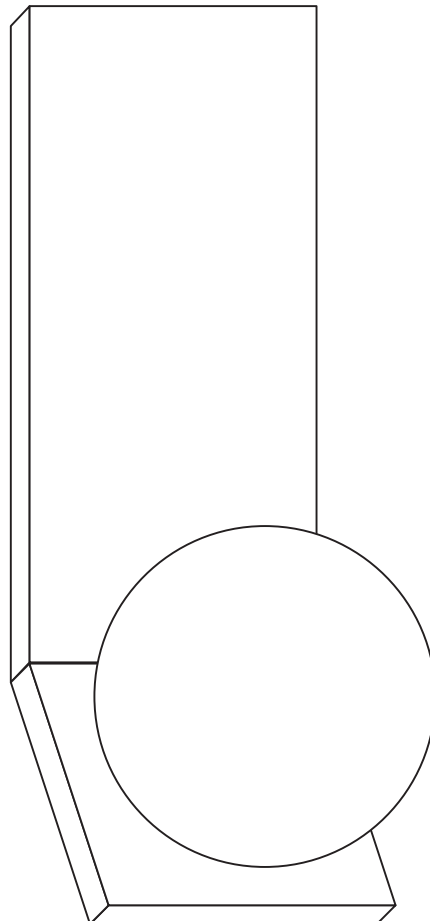

**SAVE THESE INSTRUCTIONS!**

## Install the Fixture

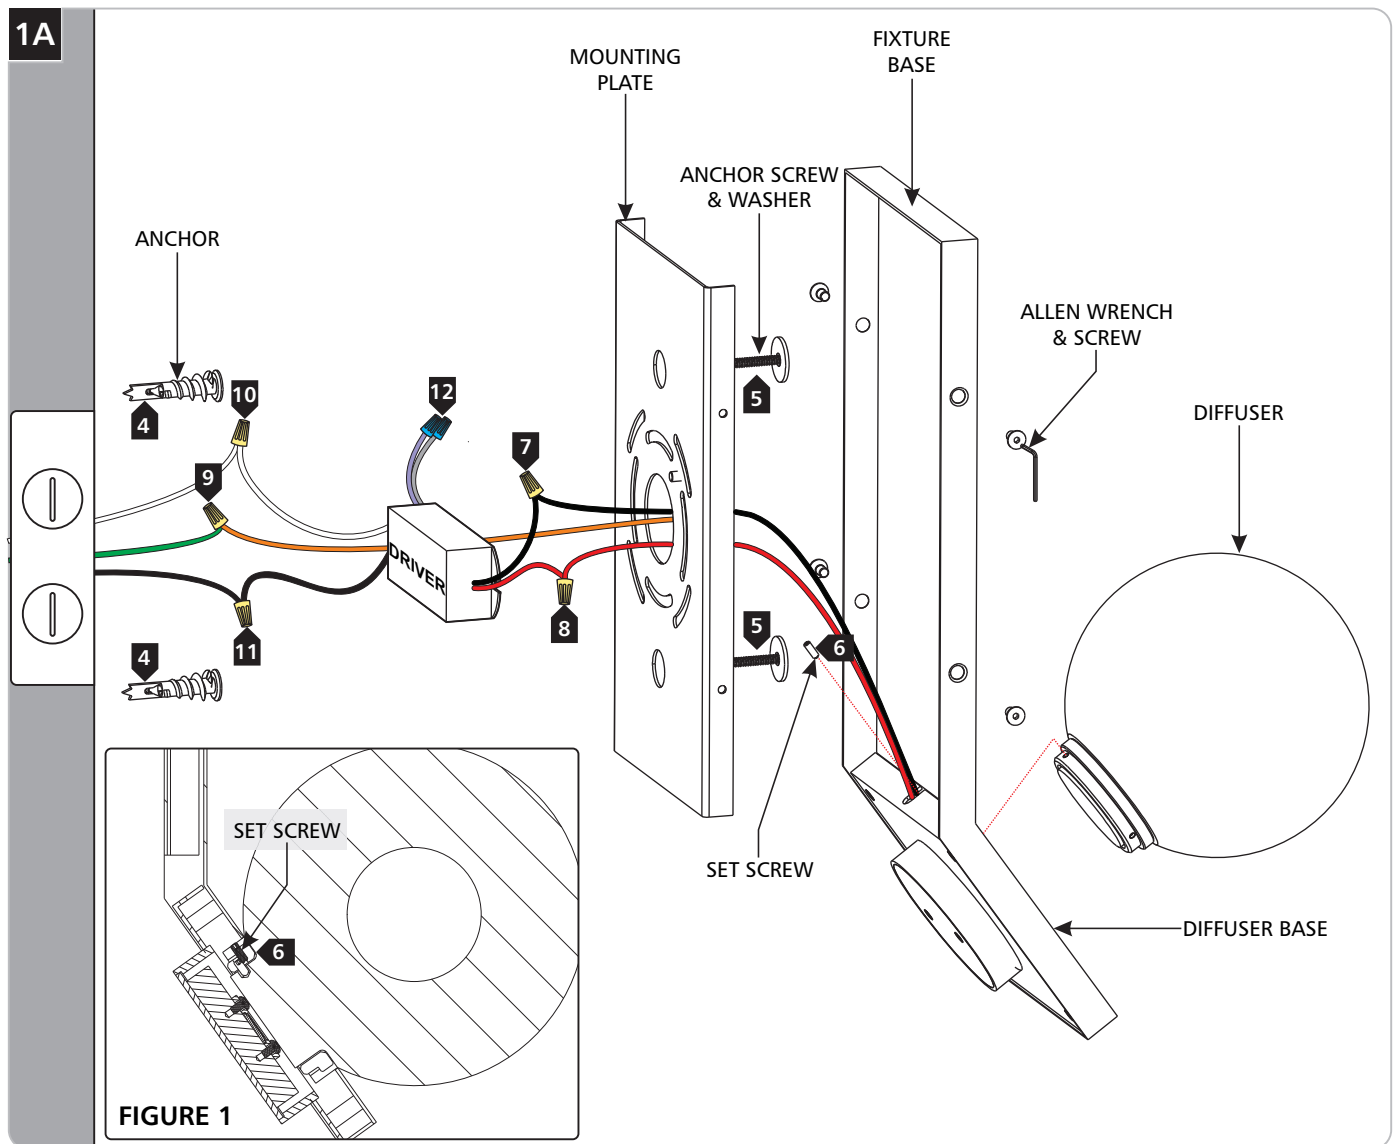

- 1 With the provided Allen wrench, remove the Allen screws on the fixture base.
- 2 Remove the mounting plate from the fixture base.
- 3 Level the mounting plate and secure it to the wall with the two #8-32 screws provided.
- 4 Line an anchor tip with the center of an anchor hole, and push the anchor into the wall up to the threads. Screw the anchor in the rest of the way with a Phillips-head screwdriver. Repeat for the other anchor hole.
- 5 Slide an anchor screw through a washer, and screw it into an anchor to secure the fixture base to the wall. Repeat for the other anchor.
- 6 Install the diffuser by placing it into the diffuser base and securing it in with the set screw using the provided Allen wrench (see Figure 1). **Make sure diffuser is fully secured before releasing.**
- 7 Connect the black/blue driver wire to the black/blue fixture wire with a wire nut.
- 8 Connect the red driver wire to the red fixture wire with a wire nut.
- 9 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10 Connect the white driver wire to the neutral power line with a wire nut.
- 11 Connect the black driver wire to the hot power line with a wire nut.
- 12 **For 277V Only:** Connect the purple and gray wires to a compatible dimmer. If not using 0-10V dimming, cap off the purple and gray wires.
- 13 Properly place the driver, all wires, and wire nut connections into the junction box.
- 14 Mount the fixture base onto the mounting plate and secure it in place by reinstalling the Allen screws using the provided Allen wrench.