

Acrylic Laser Engraver Enclosure User Manual


MONPORT has carefully checked the contents of the manuals, but there may still be errors or omissions. MONPORT is committed to continually improving the functionality of its products and the quality of its services, and therefore reserves the right to change any manuals and the products or software described in the contents of the manuals without prior notice.


Security Statement

- 1. To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- 2. Do not place objects filled with water such as a vase or the like, on top of or inside the apparatus.
- 3. The enclosure is not intended to be used as a stepping object or table; objects may be placed on top of the enclosure that amount to no more than a total of 2 lbs.c

Parts List and Installation

1. Framing Brackets and Hardware.

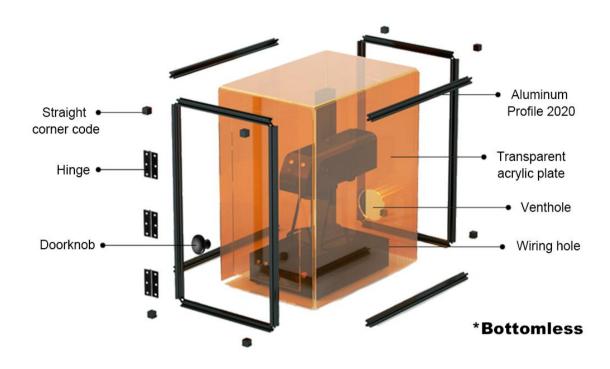

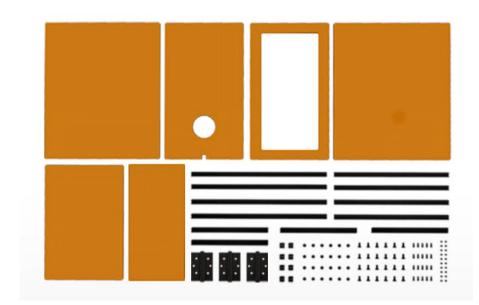


2. Assembly Procedure

1) First tear off the film on the acrylic board.



② Assemble from the bottom panel frame first ,splicing tow long aluminum profiles and two short aluminum profiles,and fix them with right angle pieces and screws

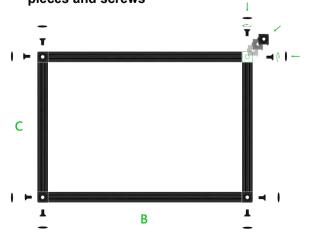

* Notice:


Align the small holes of the right angle pieces with the aluminum profiles and secure them with screws.


The large holes of the right angle pieces face the outside and bottom for easy screwing.

Use a hexagonal wrench to screw through the large hole of the right angle piece




③ Next, use the same method of fixing the right-angle pieces and aluminum profiles to assemble the four side frames

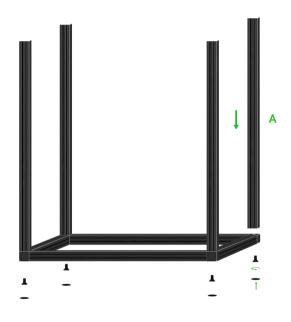


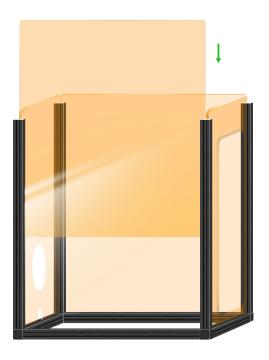

4 Insert the four side panels along the grooves of the aluminum profile


(5) Assemble Top Panel
a. Using the above method of
combining aluminum profile
frames, first combine the
three sides of the top frame

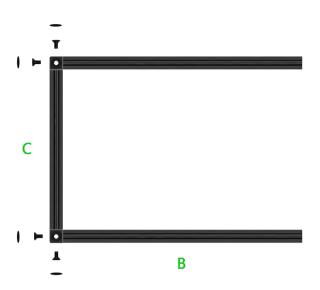

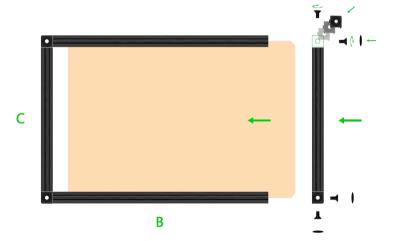



b. Insert the top panel along the groove of the aluminum profile frame, and finally assemble the unassembled side aluminum profile, aligning its groove with the acrylic panel, so that the complete top part can be assembled.

⑥ Install the top part
Fix the assembled top panel to the four support frames at the four corners with screws.
Note that the grooves of the four aluminum profiles on the top are aligned with the acrylic panels of the four sides.

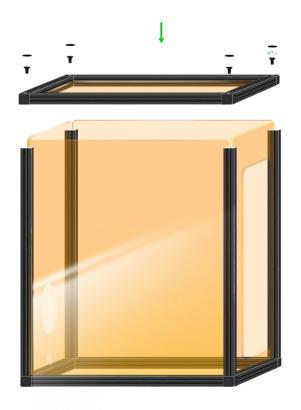

② Assemble the door
Secure the door handle with screws from the back of the acrylic panel.

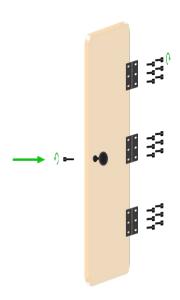

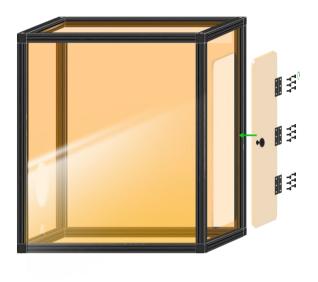

® Align the hinge with the hole of the door and fix it with screws, install the door.

Now the ComMarker Enclosure is all assembled!

CONTACT US

Thank you for choosing the monport!

MONPORT PROVIDES US-BASED TECH SUPPORT.

please restassured that machines purchased from any platform are eligible for comprehensive and professional technical support through Monport's official after-sales support department.

System: https://app.helpdesk.com/tickets/all



Note

please submit to the Help desk along with your order number and a description of the issue if you have any questions about the machine.



https://monportlaser.com