

# Canam X3 2017+ All Models Installation Guide

## Fitment: 2 Seat and 4 seat Models

**TO INSURE YOUR SAFETY AND THE SAFETY OF OTHERS AND AVOID PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTES REGARDING THE USE AND CARE OF THIS PRODUCT**

**STEP 1:** Remove the stock seats by pulling the cushion off and removing the 4 bolts under the seat cushion.

**STEP 2:** Remove the OEM Slider assembly by removing the bolts circled in Red. (Figure 1)

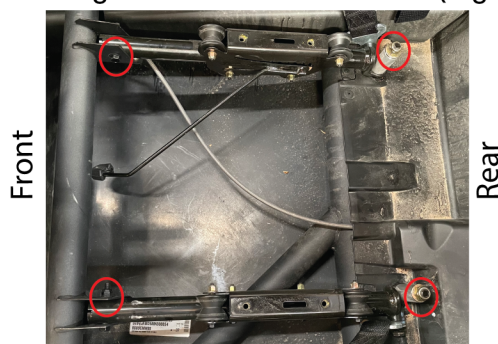


Figure 1

**STEP 3:** Mount the included square tubes to the included plate using the carriage bolts, washers, and nuts. (Figure 2) The taller side of the square tubes should be facing towards the rear.

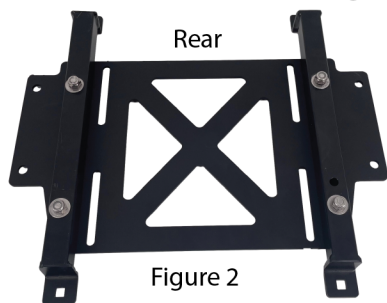


Figure 2

**STEP 4:** Mount the square tubes and flat plate to the OEM slider assembly. (Figure 3)

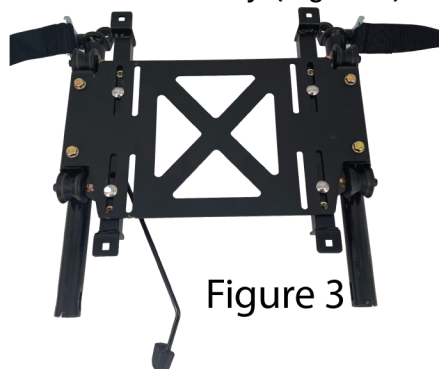


Figure 3

**STEP 4:** Mount the seats to the square tubes using 4 carriage bolts, 4 Lock nuts, and 4 washers. There are 2 sets of slots on your new seats, use the two slots that are forward. If you prefer more of a sitting up position, use the included spacer. Mount the spacer between the seat and the square tubes in the rear. (Figure 4)



**NOTES:** There are 2 different mounting options. Option "A" requires no modifications to your X3. However, option "A" puts the seat in the highest seating position. Option "B" requires you to cut the seat bracket on your X3. This puts the seat at the lowest position and we recommend this option.

**Option A:** Mount the OEM slider and seat into your X3 the exact same way that you removed the slider mechanism.

**Option B:** Cut the top of the bracket as shown in (figure 5). Remove the rear oem spacer and mount the seat at the lowest position. (Figure 6)

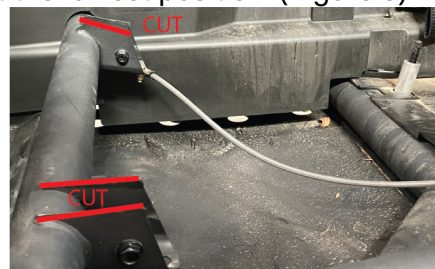


Figure 5



Figure 6