


## PARTS INCLUDED

- 4 - Brackets
- 8 - 5/16" -18 Nyloc nuts
- 8 - Carriage Bolts
- 8 - 5/16" Flat Washers
- 8- M6-1.0x20 Bolts

TO INSURE YOUR SAFETY AND THE SAFETY OF OTHERS AND AVOID PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTES REGARDING THE USE AND CARE OF THIS PRODUCT

**STEP 1:** Remove the stock driver seat and place face-down on a clean surface. Start by removing the bottom cushion from the stock seat by pulling the release handle. You will need to remove the 4 screws circled below (figure 1). Once these bolts are removed you can pull the seat out. After you remove the seat, the seat base in the KRX should like (figure 2)

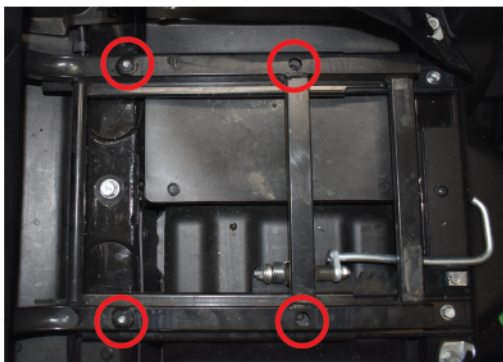


(Figure 1)




(Figure 2)

**STEP 2:** Remove the hardware from the stock seat. You will need to re-use the lever assembly along with the two plastic end caps. (Figure 3)

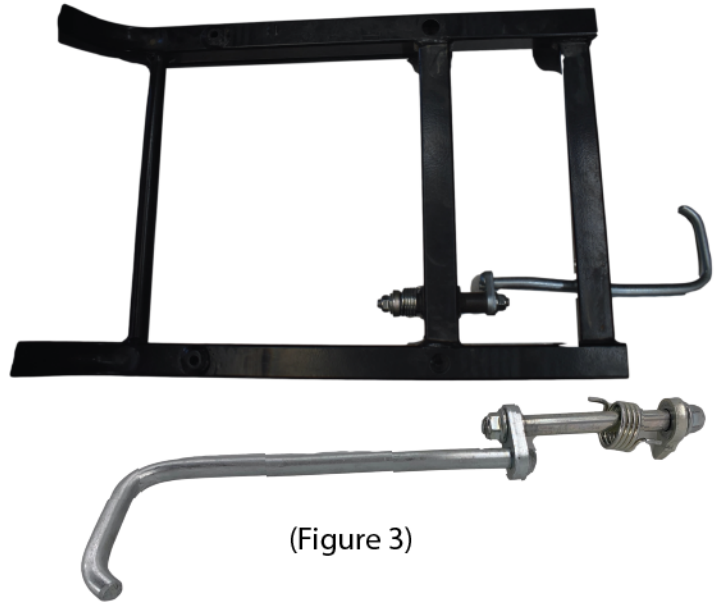

(Figure 3)

**STEP 3:** Mount the lever assembly to the included bracket. The lever will stick out from the taller side on the bracket. Be sure to use the plastic end caps from the stock seats. (Figure 4)

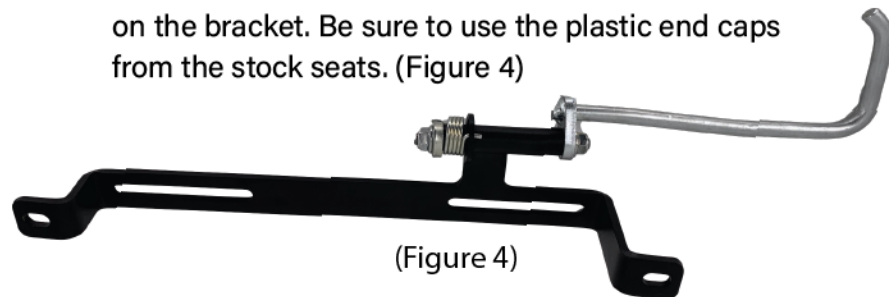

(Figure 4)




# TERYX KRX 1000

**STEP 4:** Mount the bracket to your new seats. There are two different brackets that come with your new seats. The bracket that holds the slider mechanism will mount to the passenger side of each seat. Use the carriage bolts, washers and nuts to mount the brackets to your new seats. Hand tighten the carriage bolts so you will be able to find the correct spacing to mount to your KRX. (Figure 5)



(Figure 5)

**STEP 5:** Mount your new seat and brackets into your KRX. Make sure to leave the carriage bolts hand tightened to find the correct spacing. Use the included M6 bolts to mount the brackets to the slider plate circled below. You will need to turn the slider lever to get the seat to sit flat. There is adjustment in the included brackets to allow you to slide further forward or slide further backward. Set according to your favored seating position. (Figure 6)

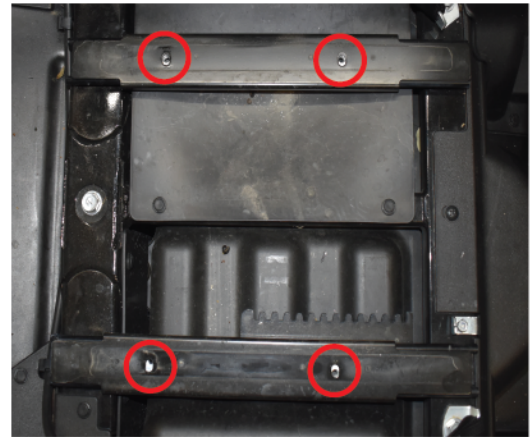

(Figure 6)

**STEP 6:** Tighten the 4 carriage bolts once the seat brackets have been fastened to the KRX.

**STEP 7:** Repeat the previous steps to install the passenger side seat.

## WARNING

It is the users responsibility to comply with local laws and regulations. This product shall be used for off-highway use only.



## WARNING:

This product can expose you to chemicals, which are known to the State of California to cause cancer. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## Warning

RACING IS DANGEROUS. INCIDENTS WILL OCCUR RESULTING IN INJURY AND DEATH. IN BEST CONDITIONS THIS PRODUCT MAY LIMIT TRAUMA. THIS PRODUCT WILL NOT PREVENT TRAUMA ASSOCIATED WITH RACING INCIDENTS. ONLY INSTALL OR USE THIS PRODUCT WITH THE GUIDANCE OF A CERTIFIED ENGINEER OR THE USERS SANCTIONING ORGANIZATION. REPLACE THIS PRODUCT AFTER ANY CRASH, FIRE OR ANY EVIDENCE OF WEAR TO ANY OF ITS MATERIALS OR COMPONENTS. USER IS RESPONSIBLE TO INSPECT THIS PRODUCT BEFORE EVERY USE. THIS PRODUCT IS DISTRIBUTED WITHOUT ANY WARRANTY. ACES RACING IS NOT LIABLE FOR ANY INCIDENTS