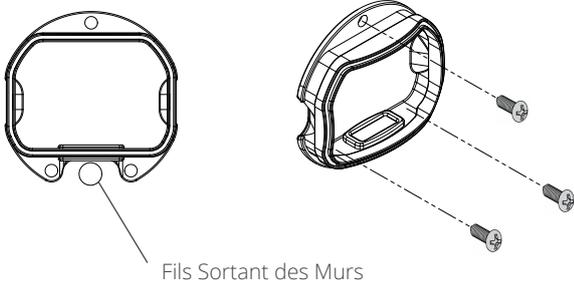
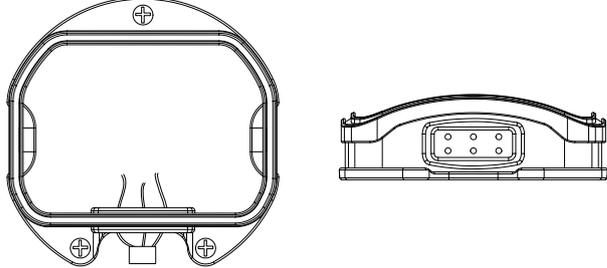
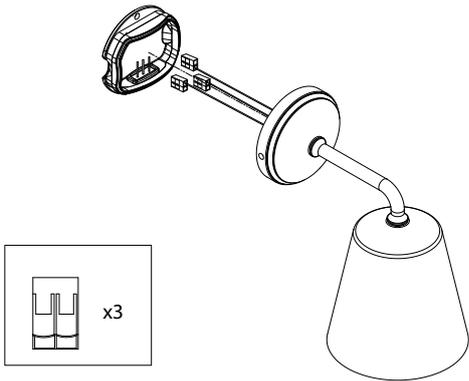
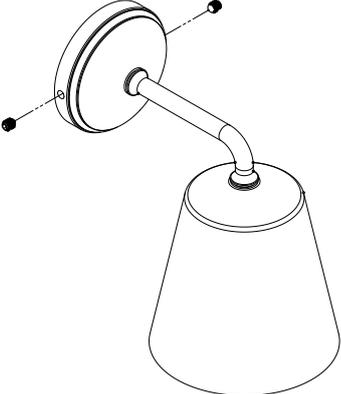
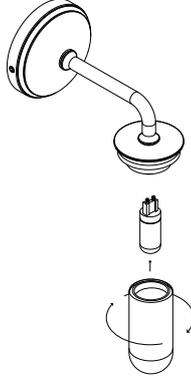
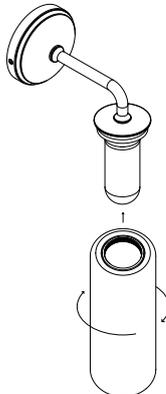
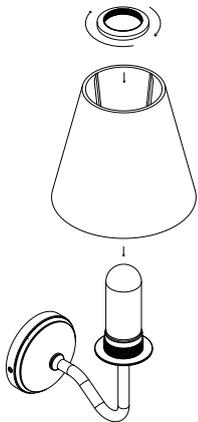
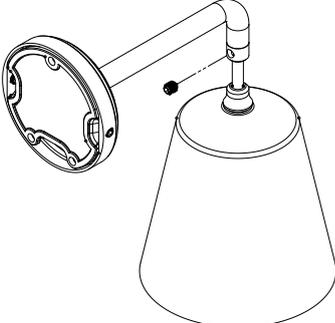


## Instructions pour Petite Applique Murale

<p><b>1. Installez le support mural d'éclairage</b></p>  <p>Fils Sortant des Murs</p>	<p><b>2. Poussez les fils à travers le passant</b></p> 
<p><b>3. Connectez les Wago à l'intérieur de la base</b></p>  <p>x3</p>	<p><b>4. Serrez les vis sans tête</b></p> 
<p><b>5. Dévissez le couvercle de verre pour ajouter l'ampoule</b></p> 	<p><b>6. Visser l'abat-jour Claremont sur le corps</b></p> 

## Instructions pour Petite Applique Murale

7. Utilisez la bague pour fixer l'abat-jour	8. Utilisez la vis sans tête pour régler la hauteur de l'abat-jour
 <p>The diagram illustrates the process of attaching the lampshade to the mounting ring. At the top, a small ring with a central hole is shown with curved arrows indicating it should be rotated. Below it, a conical lampshade is shown with a vertical line indicating its alignment with the ring. At the bottom, the mounting ring is shown attached to a vertical stem, with a small black ring (the lampshade ring) being pushed onto the stem to secure the lampshade.</p>	 <p>The diagram shows the lampshade being adjusted to the desired height. A conical lampshade is attached to a vertical stem. A horizontal arm extends from the stem, holding a circular ring. A small black dot on the arm indicates the adjustment point. The lampshade is shown in a slightly tilted position, indicating it can be rotated to the desired angle.</p>