

# User Manual

Nordic Modern Minimalist  
LED Linear Pendant





WWW.OZARKE.COM

Thank you for shopping with Ozarké, we really appreciate your business. Our goal is to provide an excellent customer service before, during and after delivery. We've included a guide on how to install this light, should you require additional assistance please feel free to email us and one of our customer service reps will reach out to assist you.

You can reach us via email at [info@ozarke.com](mailto:info@ozarke.com) or via phone at +1-(800) 604-7271

## BEFORE YOU GET STARTED

**When working with electrical wiring, follow these safety instructions to prevent injury or damage:**


1. Turn off the power: Before starting any work, turn off the power to the area you will be working in.
2. Use appropriate tools: Only use tools designed for electrical work and in good condition.
3. Wear protective gear: Wear safety glasses, gloves, and other protective gear as necessary.
4. Test for power: Use a non-contact voltage tester to check for electrical current before touching any wires.
5. Avoid wet conditions: Do not work with electrical wiring in wet or damp conditions.
6. Keep a safe distance: Stay away from exposed wires or electrical components.
7. Seek professional help: Consult a qualified electrician if you are unsure about any aspect of electrical wiring or encounter any problems.



## WARNING!


1. Do not use the power supply beyond the specified range (100-240V).
2. Avoid scratching the surface and wires of the light during installation.
3. Do not install the light outdoors.
4. The light should not be close to corrosive chemical objects or gases.
5. It should not be washed with water. It can only be wiped with a clean soft cloth.



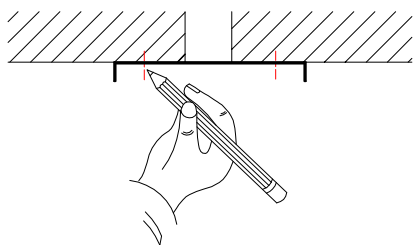


### Step 1:

Use a pencil or pen to mark the drilling position. You can use the silver bracket to mark the position of the light. Ensure you account for the wiring position on your wall or ceiling.

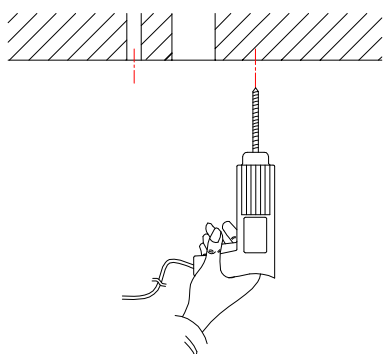


### Step 2:

Using a drill, make holes in the wall where you marked in Step 1.

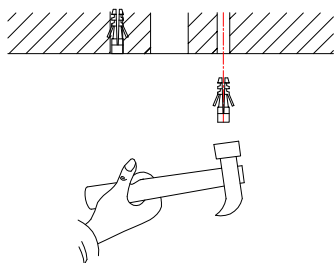

### Step 3:


Insert drywall anchors into each hole. Do not damage or force the anchor into the hole. If the hole is small, try to enlarge it.

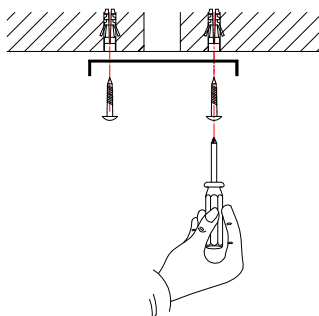

### Step 4:

Using a screwdriver, attach the silver bracket to the wall. Do not attach the lamp at this point. This step should be completed after wiring.



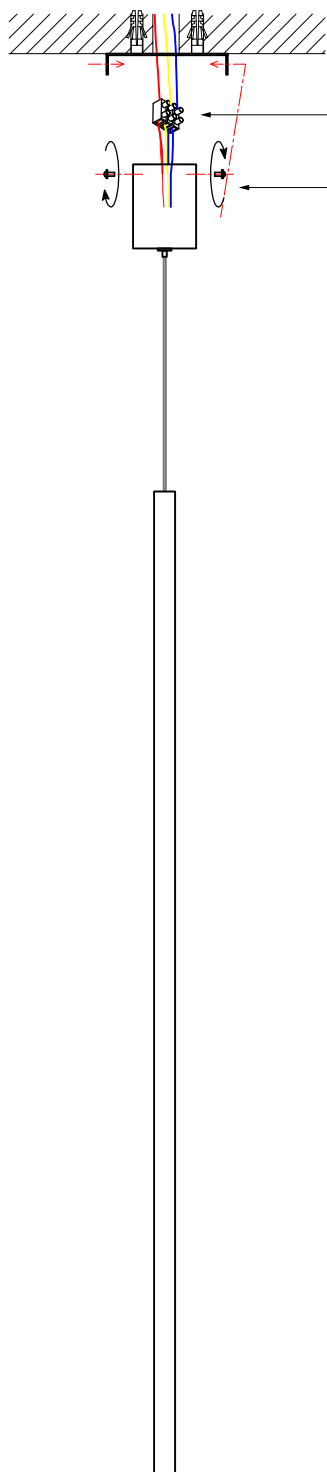

**Step 5:**

(Skip this step if you ordered the plug-in version)

Black Wire: Live, White Wire: Neutral,  
Yellow Wire: Ground

Connect the lamp wires to the wall wires  
and tuck them inside the lamp or the wall.

**Step 6:**

Attach the wall lamp to the silver bracket  
using the provided screws.

Now, you may turn your electrical power  
back on and test the lamp.

