

Assembly Instruction Sheet #IS-1717P50

For Style 1717P50

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.


Light Source: 120V LED *30W DIMMABLE (3000K 4000K 5000K) .

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents




C

Decorative iron frame x1




B

Ceiling Canopy x1




D1

4"*2pcs




D2

6"*1pcs



D3

12"*5pcs

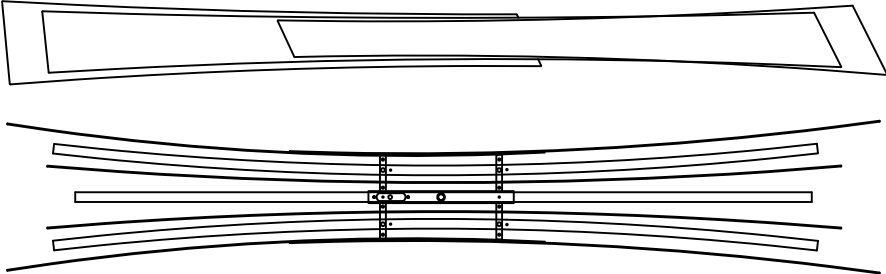


A

Fixture Body x1


Hardware Contents

| PART | DESCRIPTION | QUANTITY |
|------|-------------|----------|
| BB | Wire nut | 2pcs |
| CC | Screw | 2pcs |


BB



CC




STEP 1




B

4- Secure the Canopy: Finish by locking the canopy in place to complete the assembly.




C

3- Attach the Decorative Metal Sheet: Connect the last rod to the decorative metal sheet. Securely fasten part #C to the light body (#A) using screws.




D

2- Install the Rods: Attach the rods (D1, D2, and D3) to the frame one by one, ensuring they are securely in place.



A

1- Open the Metal Frame: Begin by opening both sides of the metal frame.

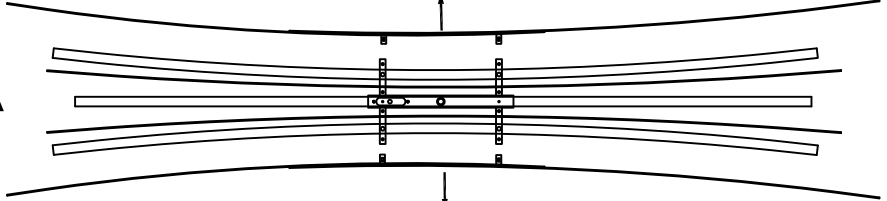

A

1- Open the Metal Frame: Begin by opening both sides of the metal frame.

Figure 1

STEP 2 – Attach Crossbar to Outlet Box.
A.Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

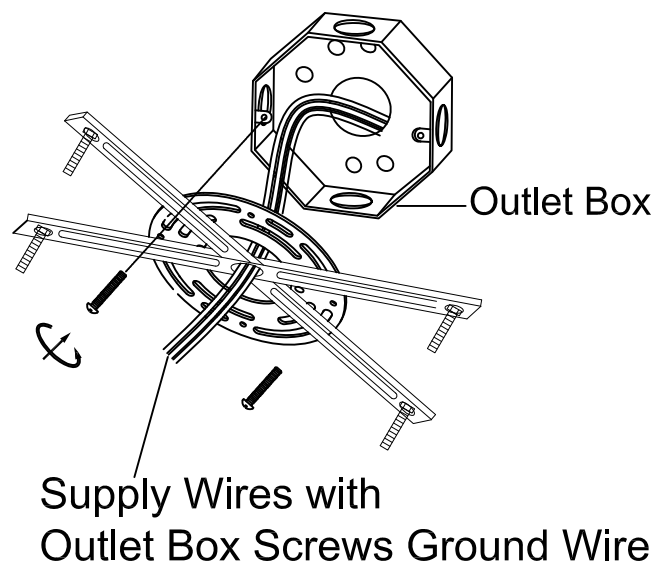


Figure 2

STEP 3 - Wire Connections
A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

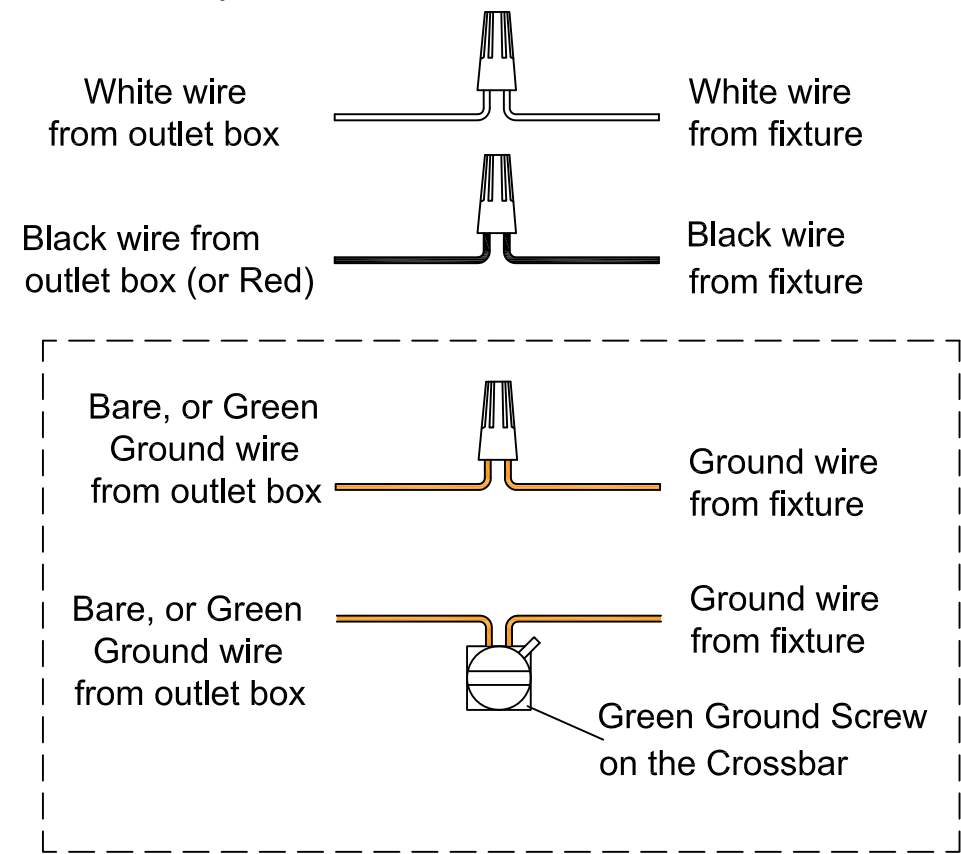


Figure 3

STEP 4

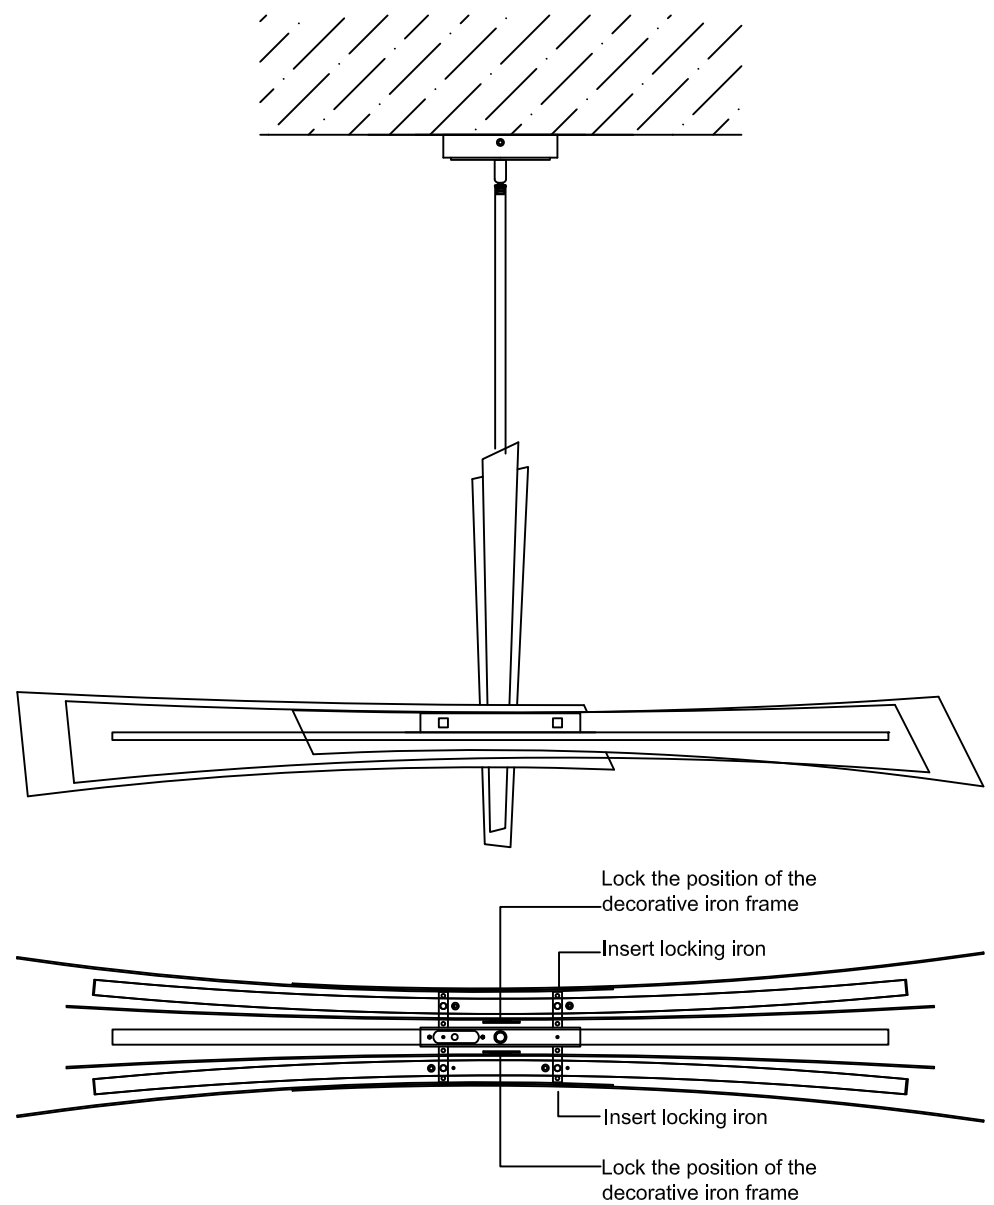


Figure 4

Assembly Instruction Sheet #IS-1717P50

For Style 1717P50

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.


Light Source: 120V LED *30W DIMMABLE (3000K 4000K 5000K) .

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents




C

Decorative iron frame x1




B

Ceiling Canopy x1




D1

4"*2pcs




D2

6"*1pcs



D3

12"*5pcs

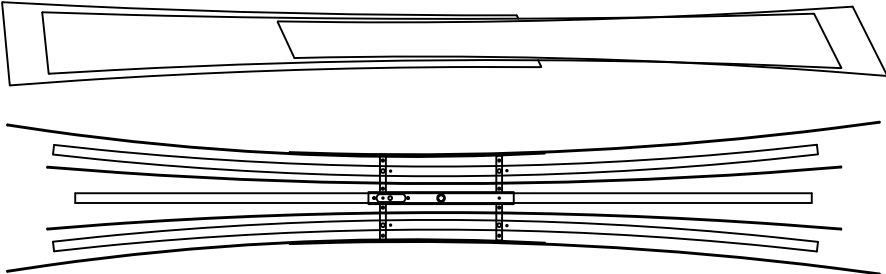


A

Fixture Body x1


Hardware Contents

| PART | DESCRIPTION | QUANTITY |
|------|-------------|----------|
| BB | Wire nut | 2pcs |
| CC | Screw | 2pcs |


BB



CC




STEP 1




B

4- Secure the Canopy: Finish by locking the canopy in place to complete the assembly.




C

3- Attach the Decorative Metal Sheet: Connect the last rod to the decorative metal sheet. Securely fasten part #C to the light body (#A) using screws.




D

2- Install the Rods: Attach the rods (D1, D2, and D3) to the frame one by one, ensuring they are securely in place.



A

1- Open the Metal Frame: Begin by opening both sides of the metal frame.

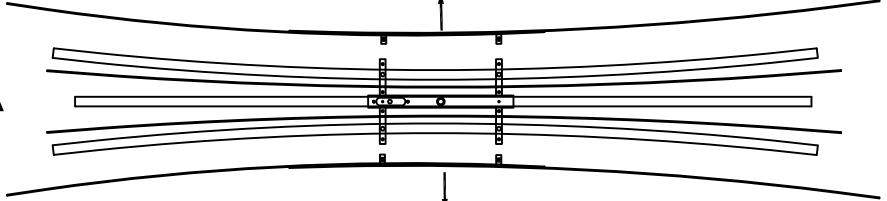

A

1- Open the Metal Frame: Begin by opening both sides of the metal frame.

Figure 1

STEP 2 – Attach Crossbar to Outlet Box.
A.Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

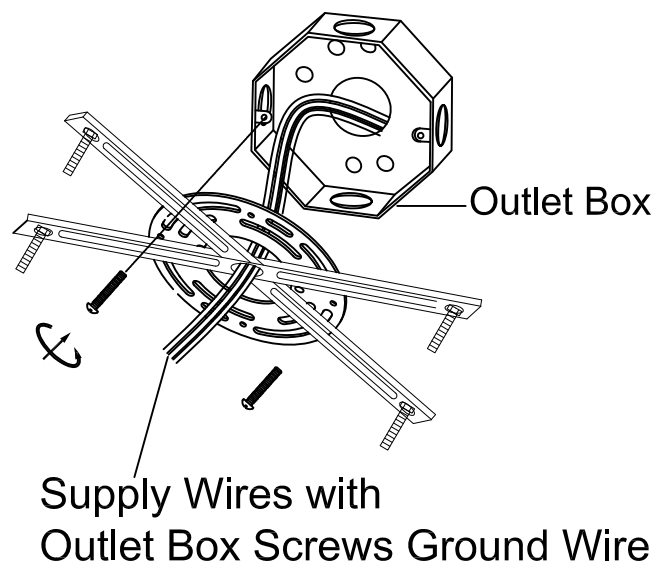


Figure 2

STEP 3 - Wire Connections
A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

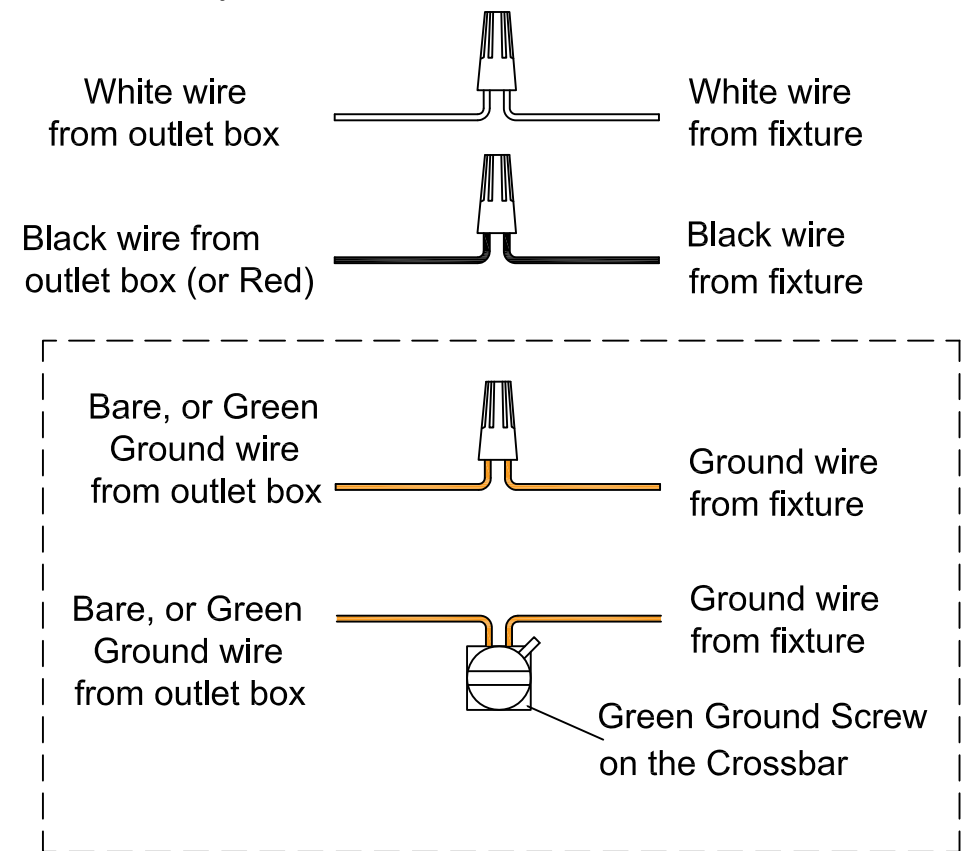


Figure 3

STEP 4

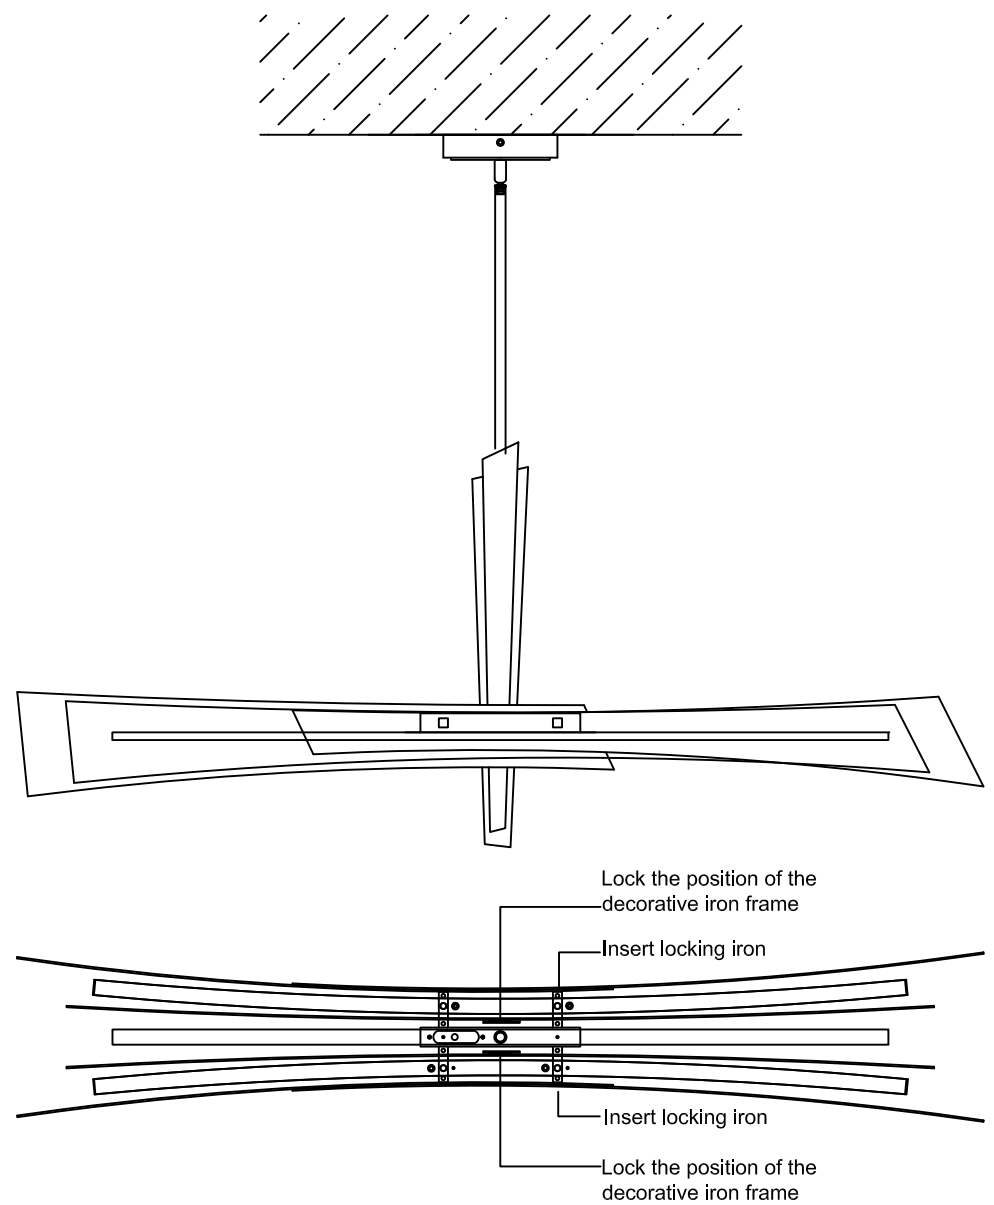


Figure 4