


FRONT BUMPER

User Manual

2022-2024 Chevrolet Silverado 1500;
exclude ZR2

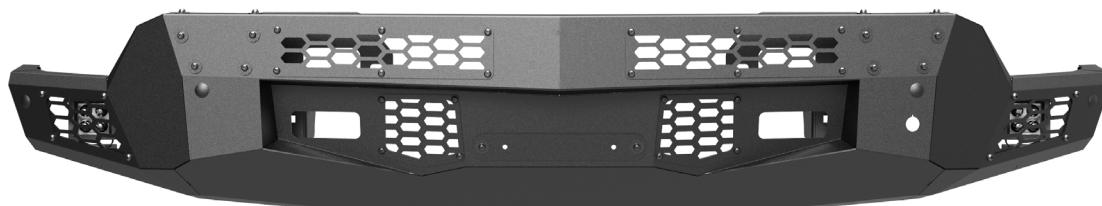

Model:	NSL02A101
Material:	Q235A
Product Dimensions:	78 x 20 x 13.3inch
Package Dimensions:	53.9 x 14.5 x 11.4 inch
Product Weight:	/ lbs

※ Thank you for purchasing the FRONT BUMPER. Please read this manual carefully and keep it properly if you need to refer to it afterward. If you need any support or assistance, please contact us with your product model number and order number, and our support team will help you solve problems.





⚠ WARNING

※ This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety messages and understand all instructions and procedure notices before attempting to install or use this product.






⚠ CAUTION



※ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

REQUIRED TOOLS

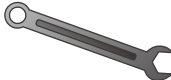Socket 	Ratchet 	Wrench 	Safety Glasses 
Side Cutter 	Needle-Nose Pliers 	Panel Remover 	Flathead Screwdriver 

Parts Information

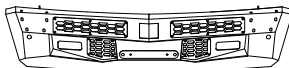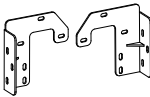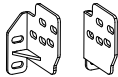	NO.	Parts Name	Size	Line Graph	Qty	Color
①	/	Bumper	/		1	Black
②	/	Side Wing L & R	/		1	Black
③	/	Bracket 1 L & R	/		1	Black
④	/	Bracket 2 L & R	/		1	Black
⑤	/	4 Inch LED light	/		2	/
⑥	/	Cable Wires	/		1	/
⑦	N11	Hexagon Lock Nuts	M6		5	Dacro Black
⑧	B46	Half Head Allen Bolts	M6x40		5	Dacro Black


	NO.	Parts Name	Size	Line Graph	Qty	Color
⑨	B07	Half Head Allen Bolts	M6x20		9	Dacro Black
⑩	W13	Flat Washer	Φ6		9	Dacro Black
⑪	W09	Spring Washer	Φ6		9	Dacro Black
⑫	B32	Hex Bolts	M10x30		23	Dacro Black
⑬	N15	Hex Nuts	M10		23	Dacro Black
⑭	W23	Flat Washer	Φ10		33	Dacro Black
⑮	W22	Spring Washer	Φ10		23	Dacro Black
⑯	B78	Hex Bolts	M10x120 (30)		11	Blue Zinc Plating
⑰	N26	Hex Nuts	M10		11	Blue Zinc Plating
⑱	W33	Flat Washer	Φ10		21	Blue Zinc Plating
⑲	W32	Spring Washer	Φ10		11	Blue Zinc Plating

※ **Note 1: spare parts such as N11、B46、B07、W13、W09、B32、N15、W23、W22、B78、N26、W33 and W32 are provided with 1PCS each (included in the number of parts details).**

Installation Instructions

1. Park your vehicle on a clean flat surface, engage the parking brake and block the rear tires.
2. Remove the screws in the hood latch handle to remove it. **(Fig 1)**

Fig 1

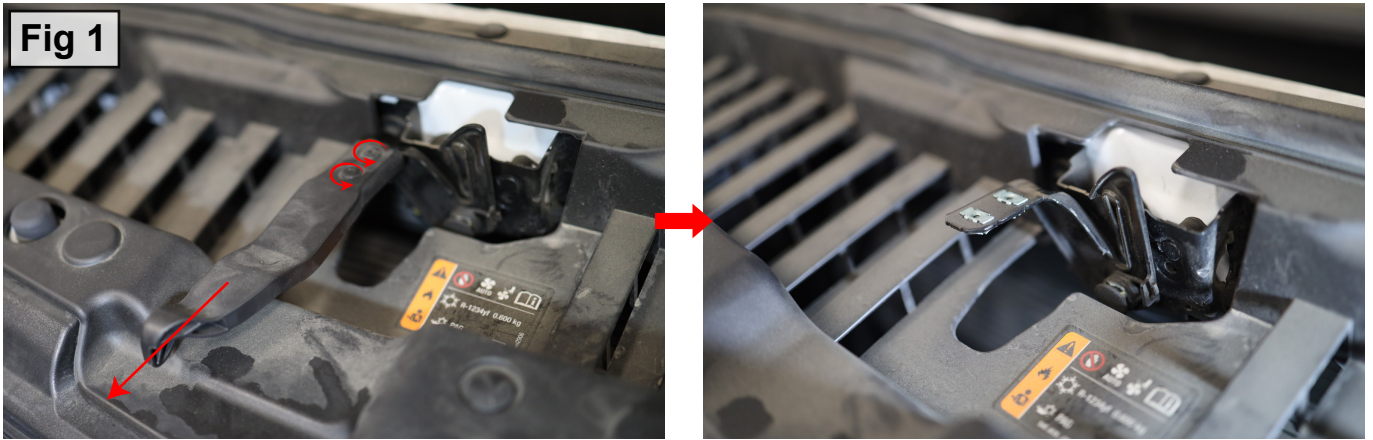


3. Remove the push pins in the under-hood cowl to remove it. **(Fig 2)**



Fig 2



4. Remove the screws across the top of the grille. **(Fig 3)**

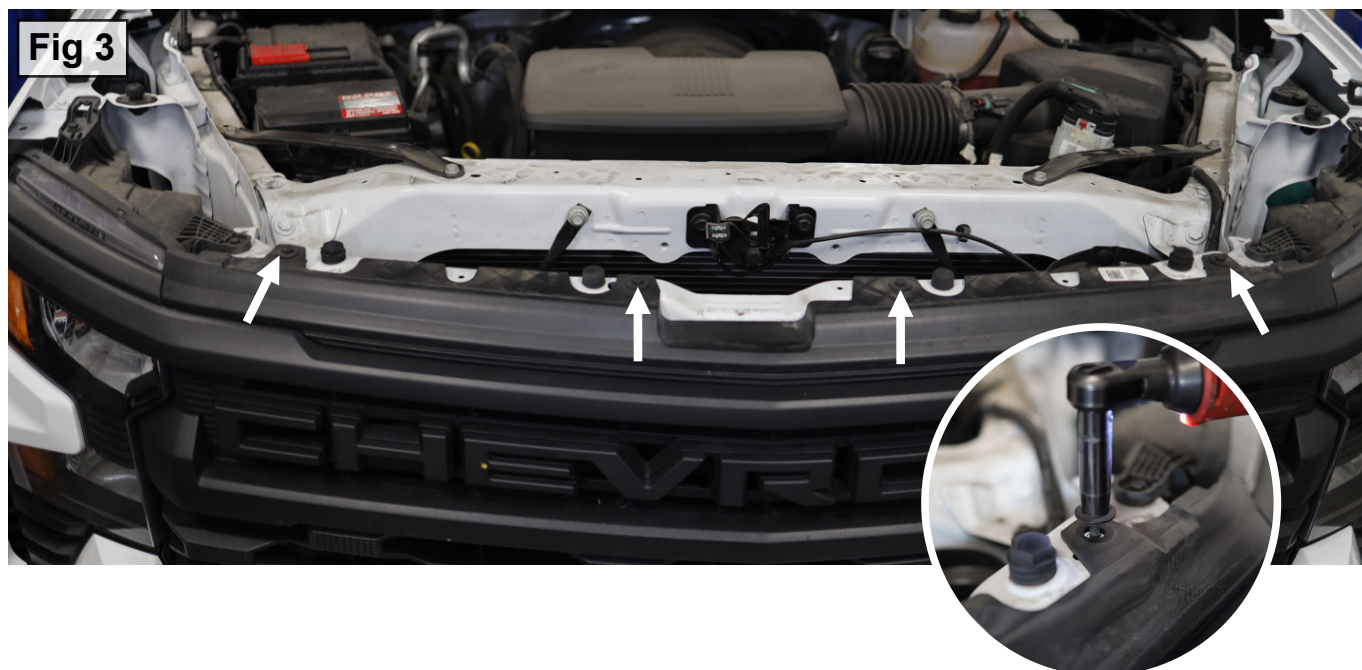

5. Remove the lowest forward most screws in each front inner fender. **(Fig 4~5)**

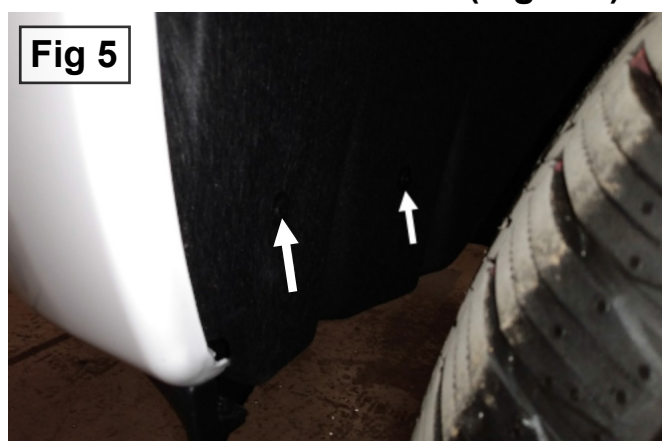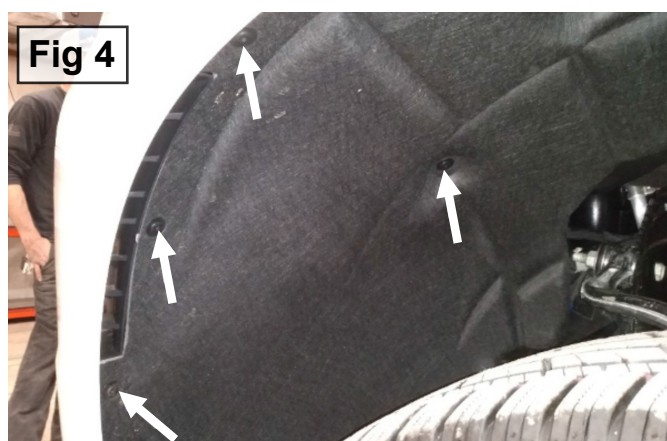



6. Starting on one side of the vehicle, pull outward on the valence to release the clips which attach it. The seam where the valence meets the fender has clips, using a panel pry tool you can help release these clips while pulling outward on the valence. Once the seam clips are released there are several other clips along the valence that can be released simply by pulling outward. **(Fig 6~7)**



7. Now the grille can be removed by pulling outward on the pieces over the headlights which have clips first then on the center which has clips. **(Fig 8)**




8. Remove the screws along the perimeter of the upper louvers. Then, release the electrical connectors on the driver's side to remove the louvers. **(Fig 9~10)**

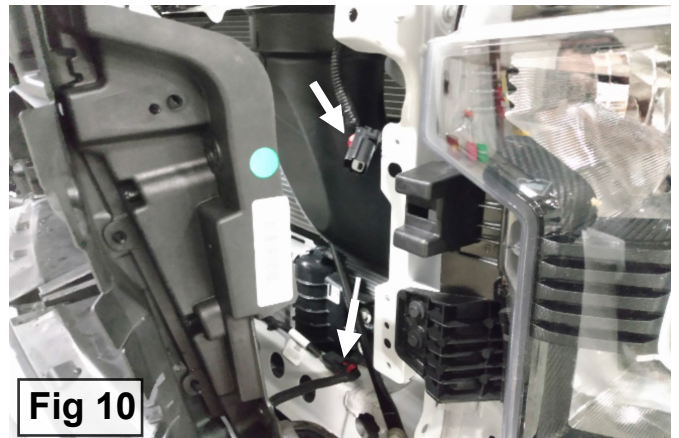
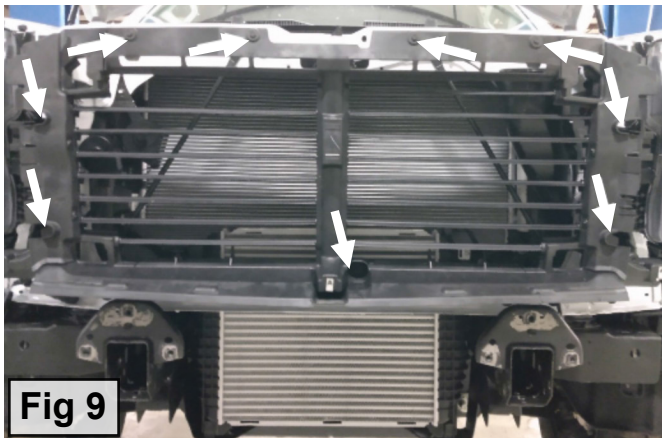


9. Remove the bolts along the top of the bumper. **(Fig 11)**


10. Remove the bolts between the frame rails behind the bumper. **(Fig 12)**

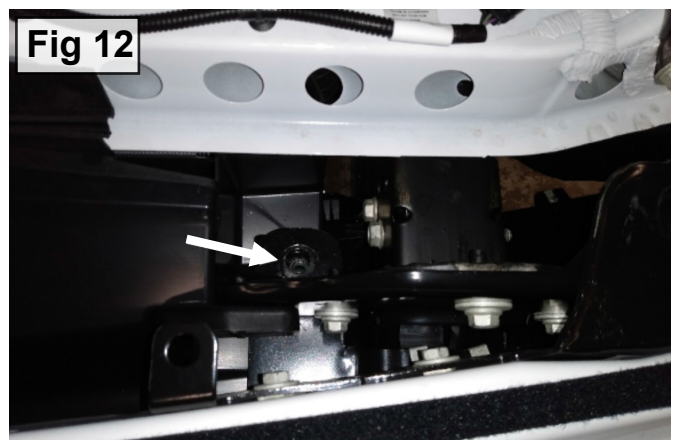

11.Remove the bolts per side holding the bumper supports to the frame and bumper (**Fig 13**). Remove the screws per side holding the bumper supports to the frame and bumper. The bumper can now be removed from the vehicle (**Fig 14**).

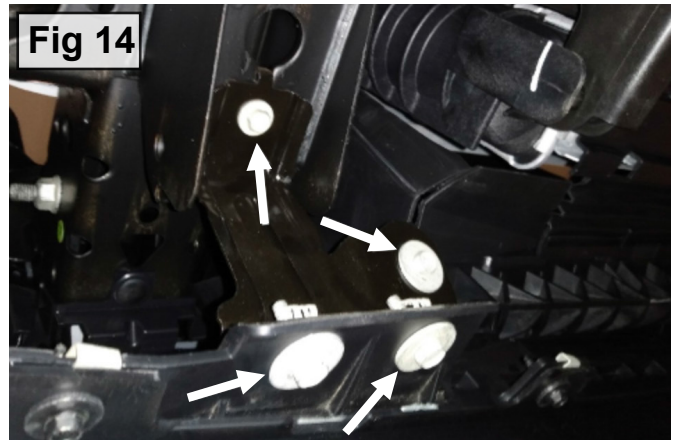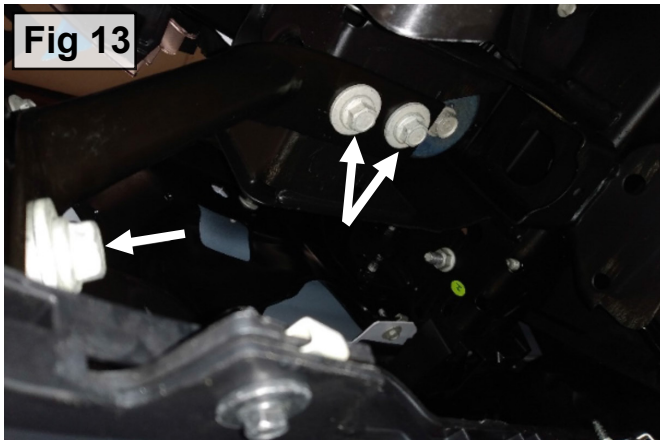


12.Remove the bolts attaching each tow hook to the frame to remove them. Remove the bolts attaching each original mounting brackets to the frame to remove them. (**Fig 15**).

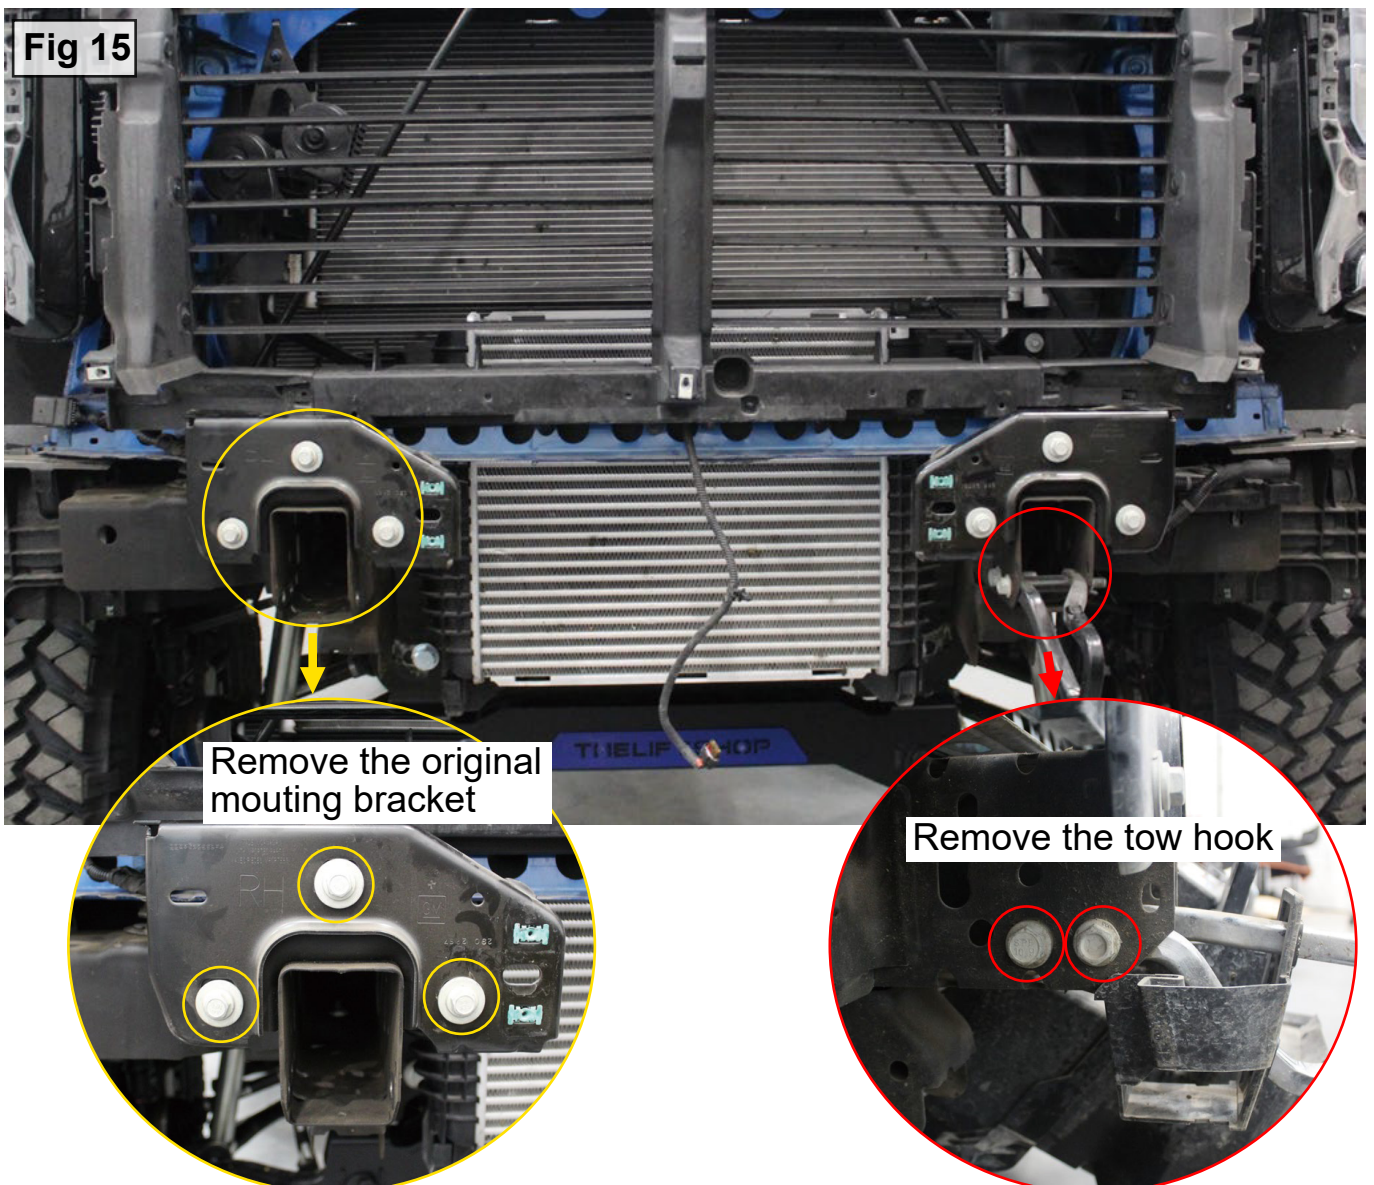


13.Re-install the grill and valence by repeating steps 1-10.

14.Unplug the fog lights and remove the inner mounting structure of the bumper.
Remove the parking sensors from the bezels by spreading the tabs and pulling out. ****CAUTION: Sensor bezels are fragile****. (Fig 16)


Fig 16

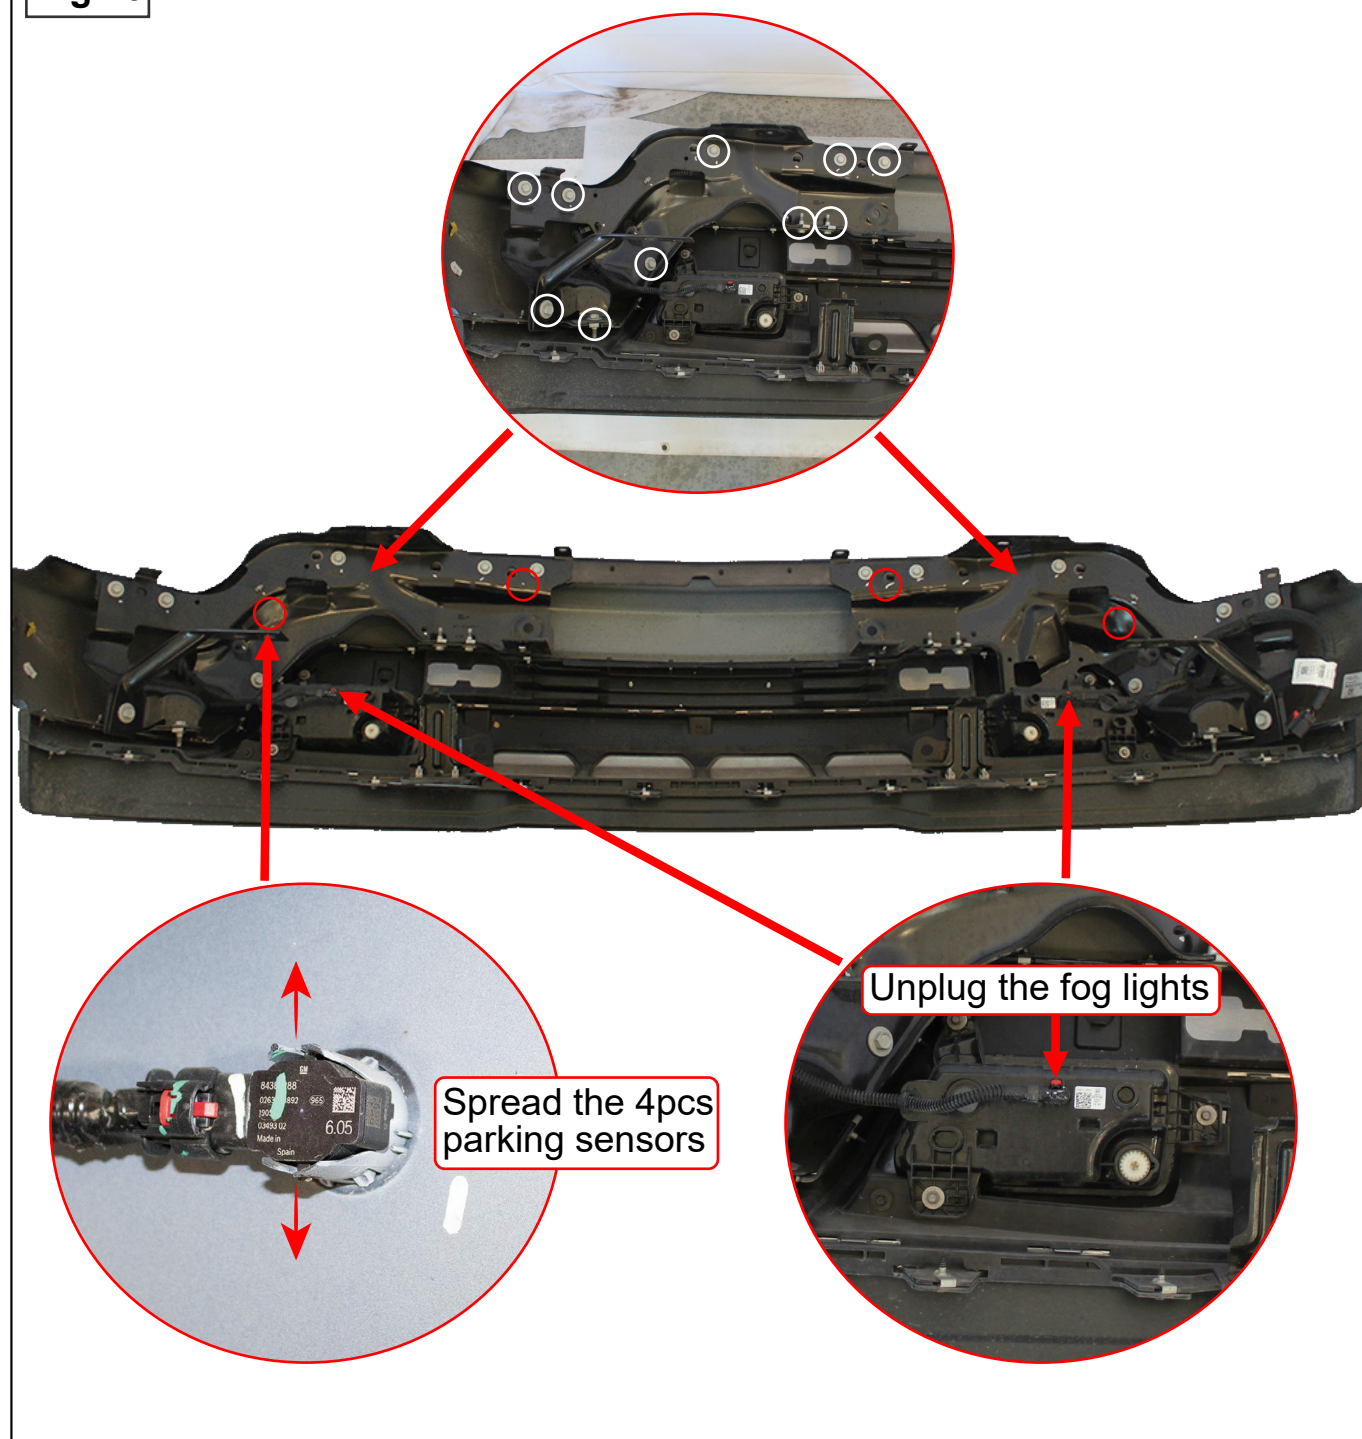

15. Install the ② side wings in the ① bumper. (Fig 17)

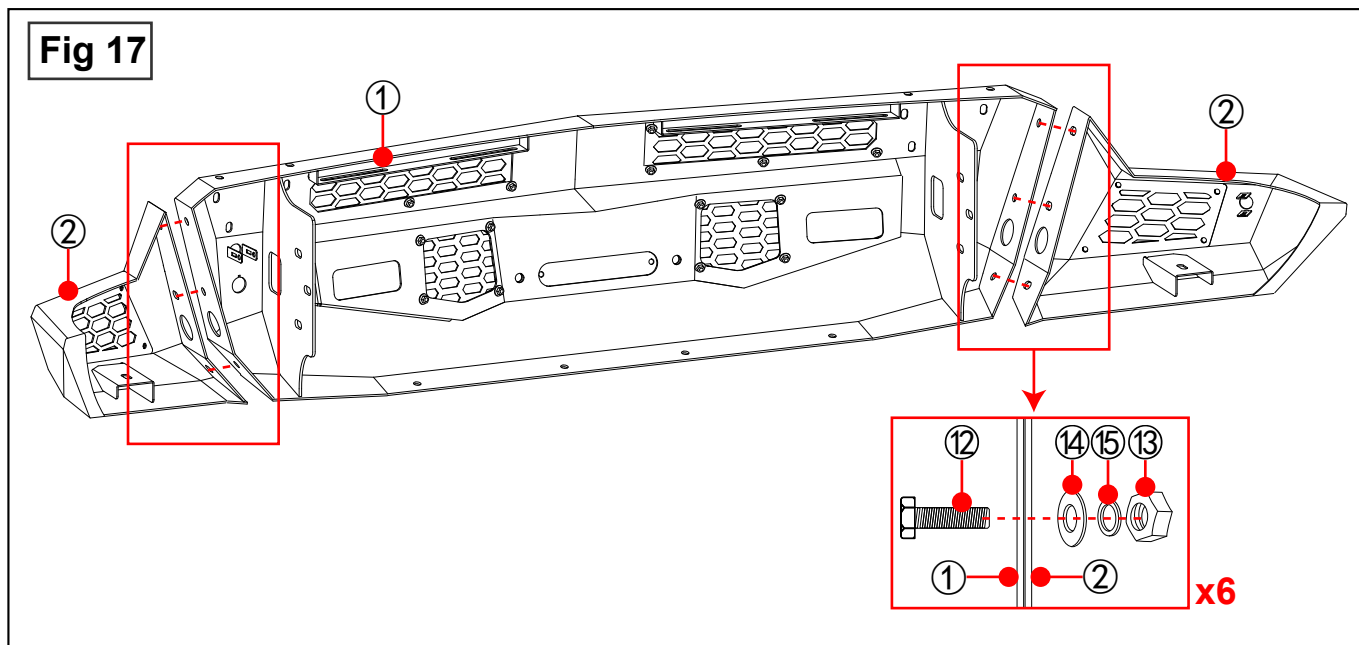


16. Install the ⑥ 4 Inch LED light in the side wings. (Fig 18)

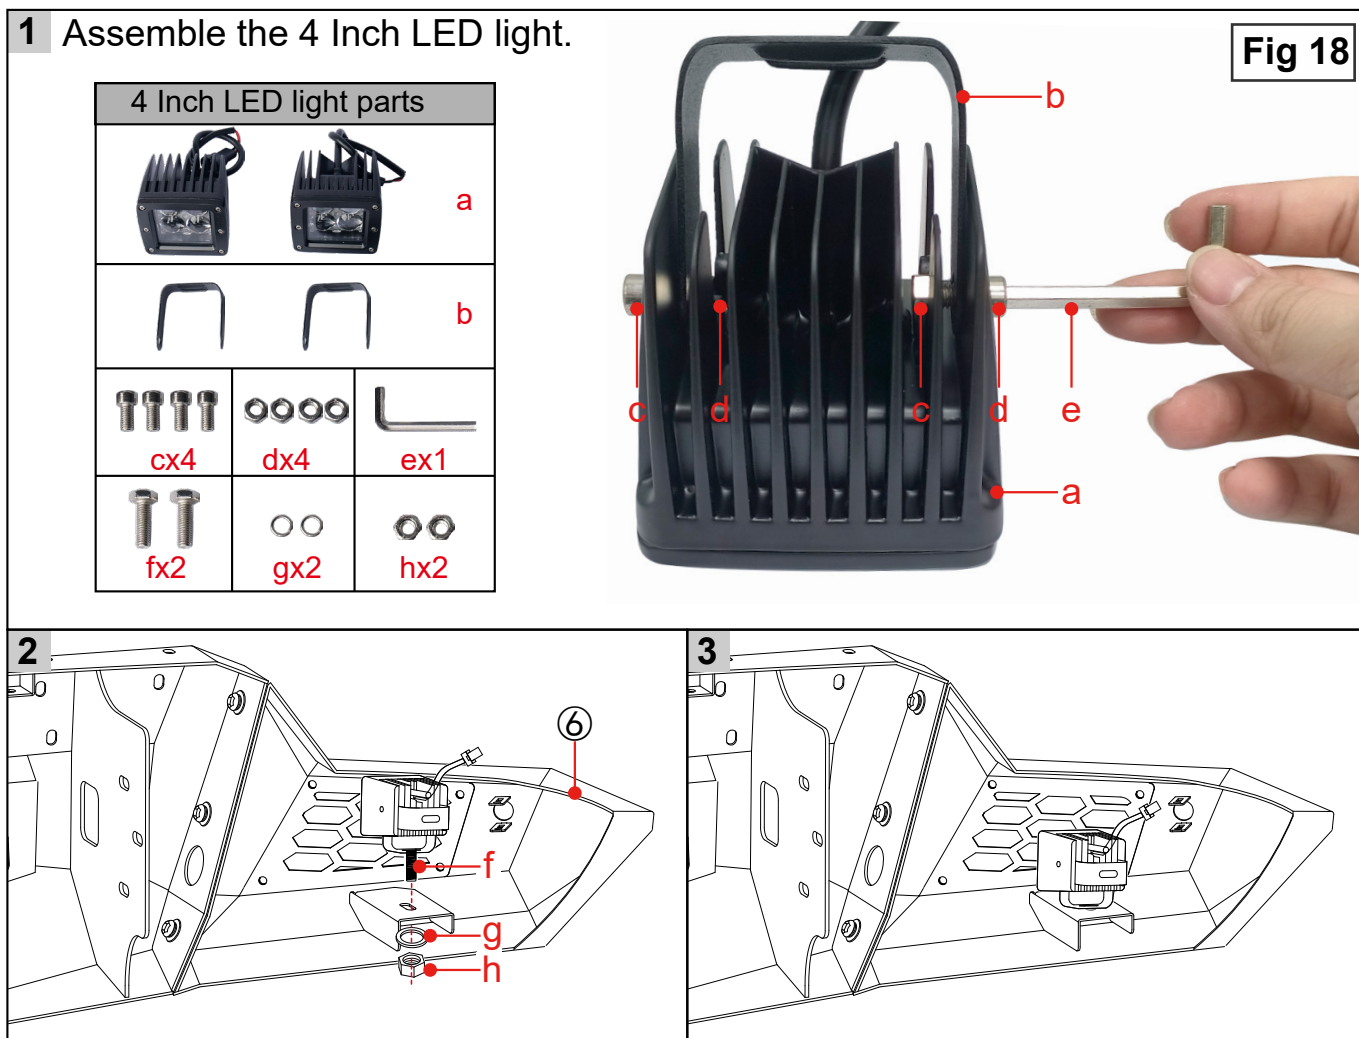

17. Connect the ⑥ 4 Inch LEDlight to the car with the ⑦ Cable Wires. **(Fig 19)**

You can connect the 4inch LEDlight lights wiring harness to the headlight DRLs or fog light wiring. but my suggestion is to connect to the fog lights for on/off control! If your car doesn't have a fog light harness, you can install it using the cable harness we included!


Fig 19

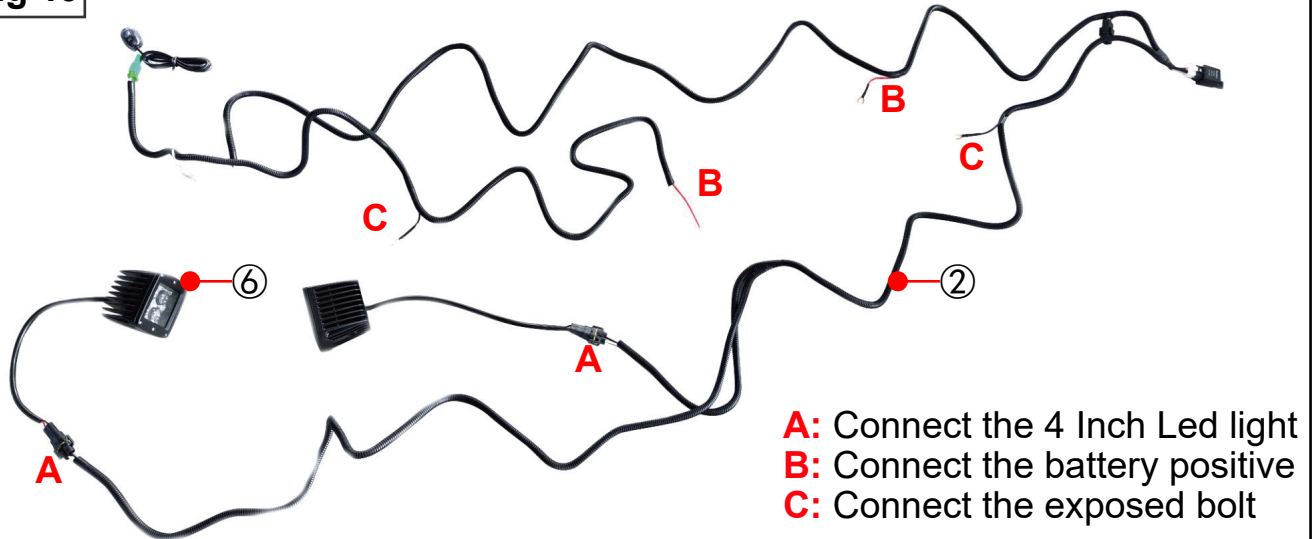

18. Install the parking sensors. **(Fig 20)**

⌘Note: If the car does not have a radar probe, this step can be ignored.

Fig 20

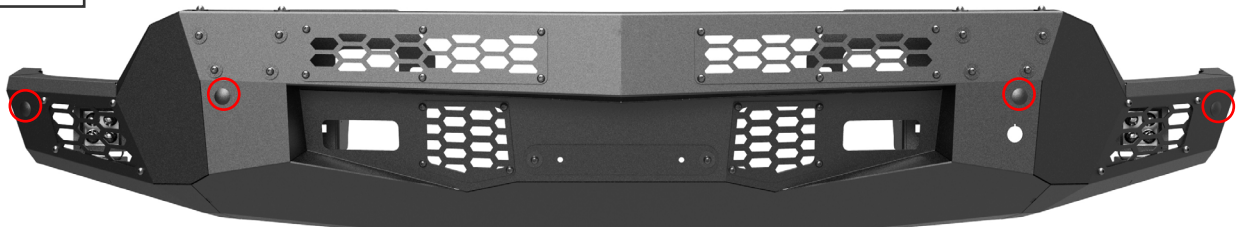


1. Pull out the rubber stoppers.




2. Take the parking sensor in the hole.








3. Using the M6-bolts and nuts install the parking sensor.

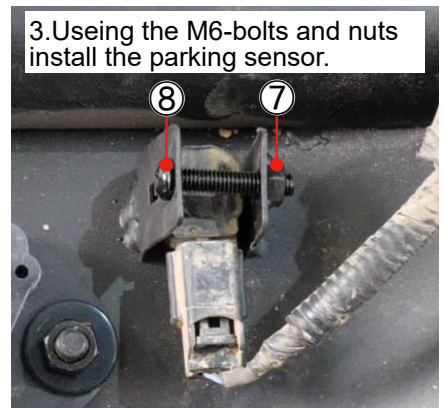

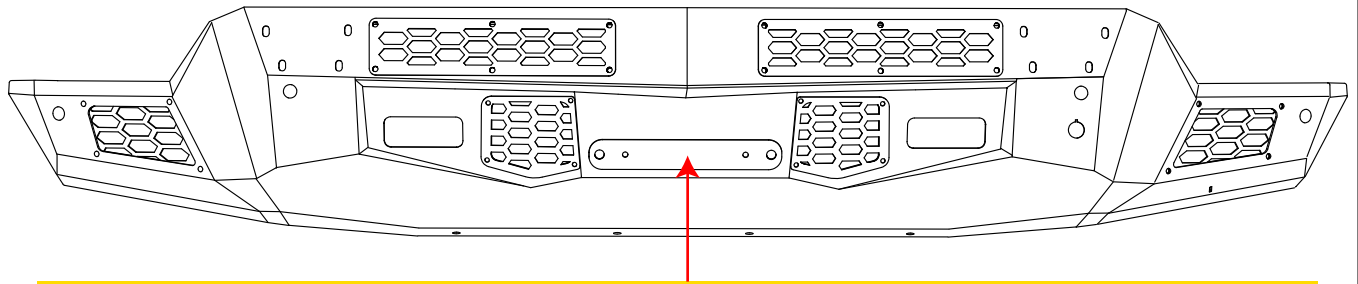


※Note: If your car installed the winch plate, you must remove the guide plate.

19. Install the ③bracket 1 and ④bracket 2 in the frame. (Fig 21~22)

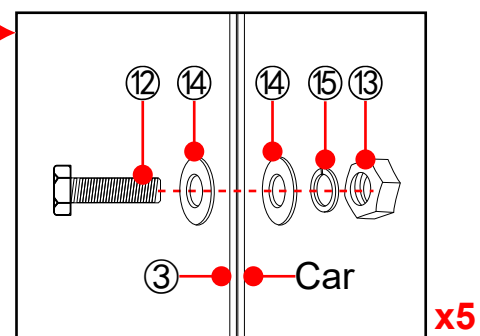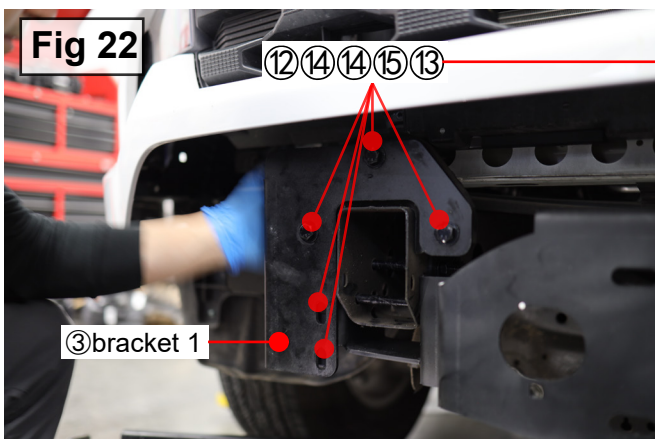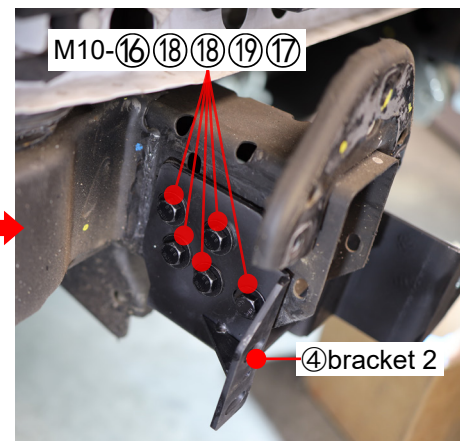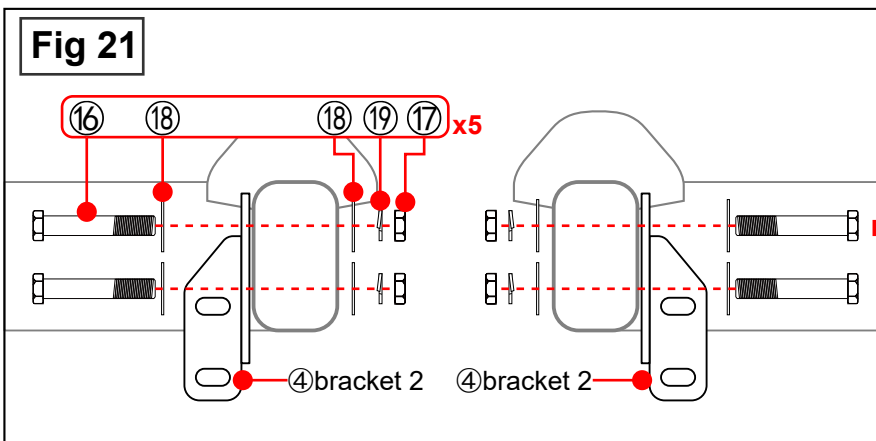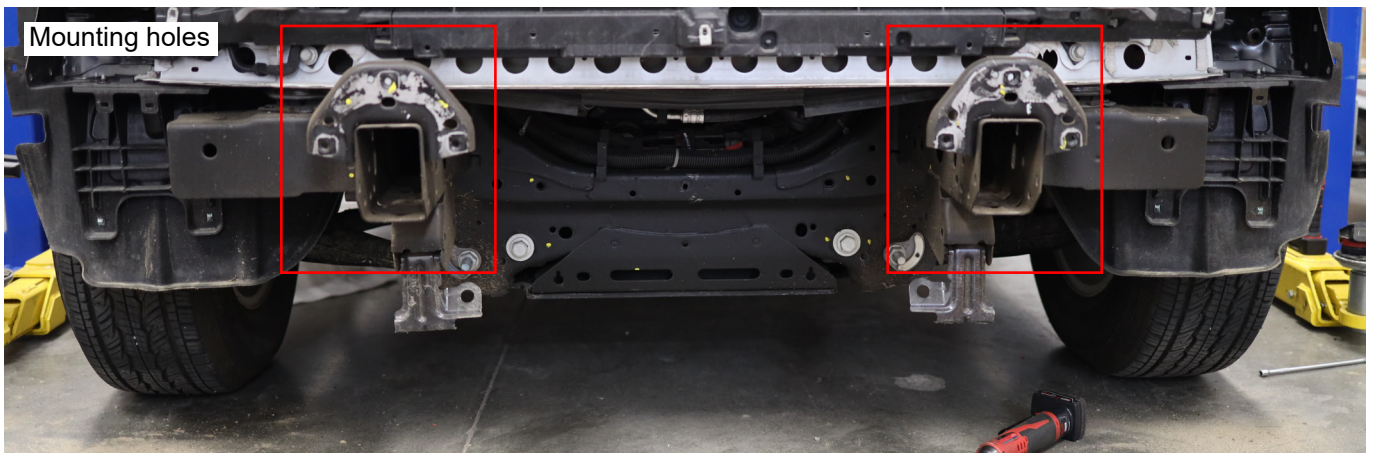

20. With the help from another installer, position the ① bumper on the truck with the M10-bolts and nuts. **(Fig 23)**

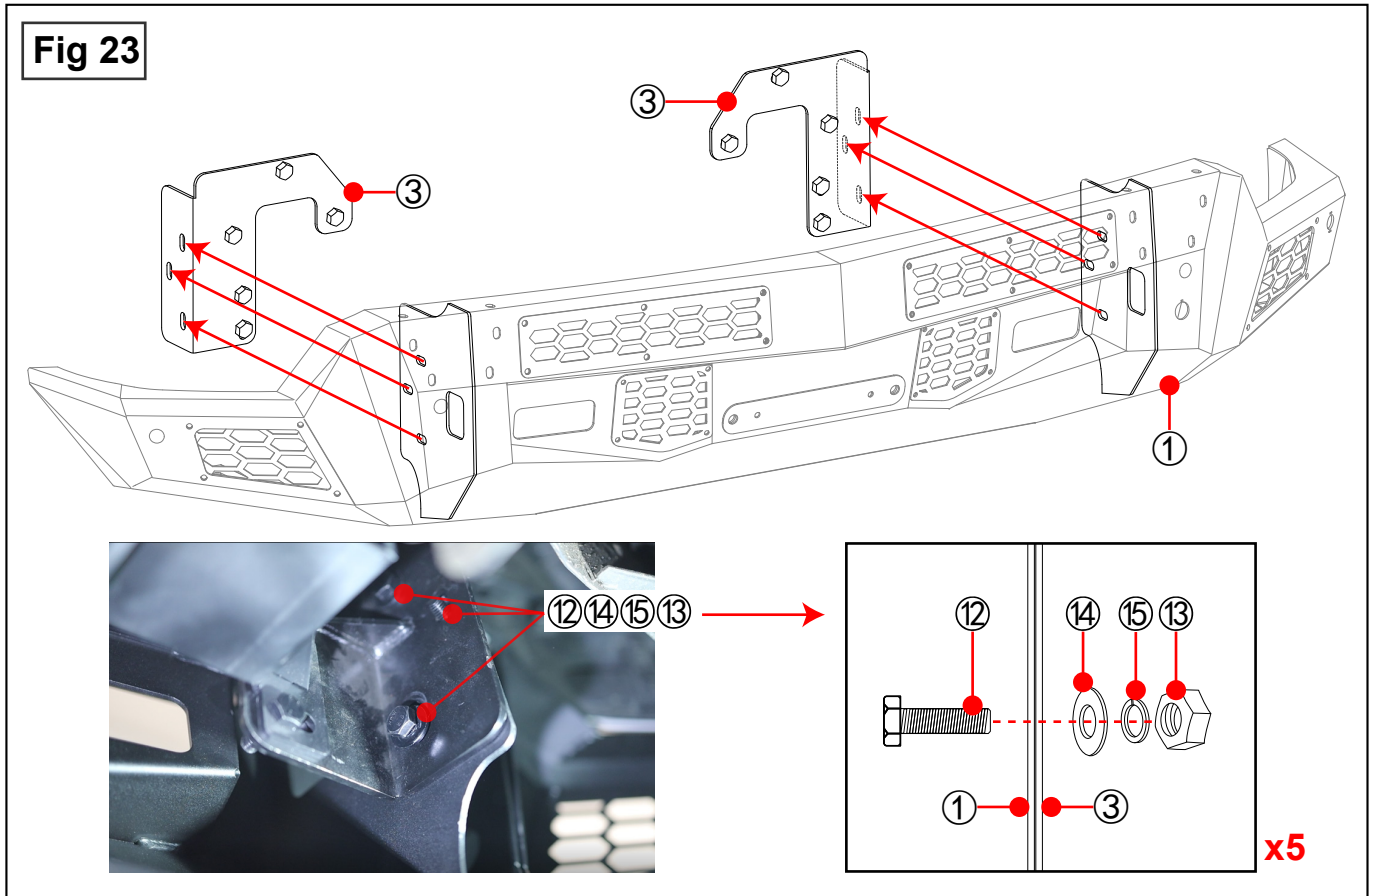

21. Plug in the wire harness. **(Fig 24)**



22. Base on your personal preference, you can cut the liner inside the wheel well using a (razor blade/scissors) or not. **(Fig 25)**



23. The bumper is installed. Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



FRONT BUMPER BULL BAR

————— User Manual —————

2022-2024 Chevrolet Silverado 1500;
exclude ZR2



Model:	NSL02A101-3A
Material:	Q235A
Product Dimensions:	55.1 x 8.5 x 8.5 inch
Package Dimensions:	58.2 x 13.7 x 8.6 inch
Product Weight:	23.7 lbs



※Thank you for purchasing the FRONT BUMPER BULL BAR. Please read this manual carefully and keep it properly if you need to refer to it afterward. If you need any support or assistance, please contact us with your product model number and order number, and our support team will help you solve problems.

⚠ WARNING

※ This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety messages and understand all instructions and procedure notices before attempting to install or use this product.

⚠ CAUTION

※ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

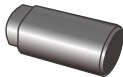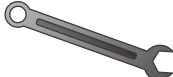REQUIRED TOOLS			
Socket	Ratchet	Wrench	Safety Glasses
			

Parts Information

NO.	Parts Name	Size	Line Graph	Qty	Color
/	Front Bumper Bull Bar	/		1	Black


Installation Instructions

※Note:

This bull bar only suitable for our Front Bumper model of NSL02A101-1A.

1. Open the carton and take out the parts. Check whether the number of components is complete.
2. Remove our front bumper(Model: NSL02A101-1A) bolts to install the bull bar.

Remove the bolts.

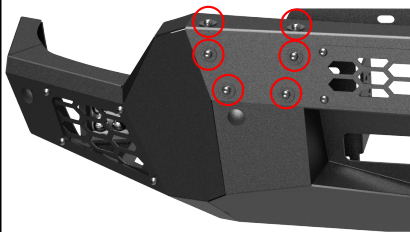

Install the bull bar using the bolts you just removed.



3. The bull bar is installed.



FRONT BUMPER BULL BAR

User Manual

2022-2024 Chevrolet Silverado 1500;
exclude ZR2;



Model:	NSL02A101-3B
Material:	Q235A
Product Dimensions:	44.5 x 24 x 14.5inch
Package Dimensions:	83.5 x 21.6 x 26.6 inch
Product Weight:	58.8 lbs

※ Thank you for purchasing the FRONT BUMPER BULL BAR. Please read this manual carefully and keep it properly if you need to refer to it afterward. If you need any support or assistance, please contact us with your product model number and order number, and our support team will help you solve problems.



⚠ WARNING

※ This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety messages and understand all instructions and procedure notices before attempting to install or use this product.




⚠ CAUTION

※ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

REQUIRED TOOLS

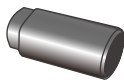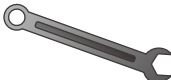Socket 	Wrench 	Allen Wrench 	Safety Glasses 
--	--	---	--




Parts Information

	NO.	Parts Name	Size	Line Graph	Qty	Color
①	/	Bull Bar	/		1	Black
②	/	Left/Right Bull Bar 1	/		1	Black
③	/	Left/Right Bull Bar 2	/		1	Black
④	B15	Half Head Allen Bolts	M8x20		21	Dacro Black
⑤	N14	Hex Flange Nuts	M8		21	Dacro Black
⑥	W43	Flat Washer	Φ8x20x2		21	Dacro Black

※ **Note:** spare parts such as B15、 N14 and W43 are provided with 1PCS each (included in the number of parts details).

Installation Instructions


1. Open the carton and take out the parts. Check whether the number of components is complete.
2. Splicing the Bumper.

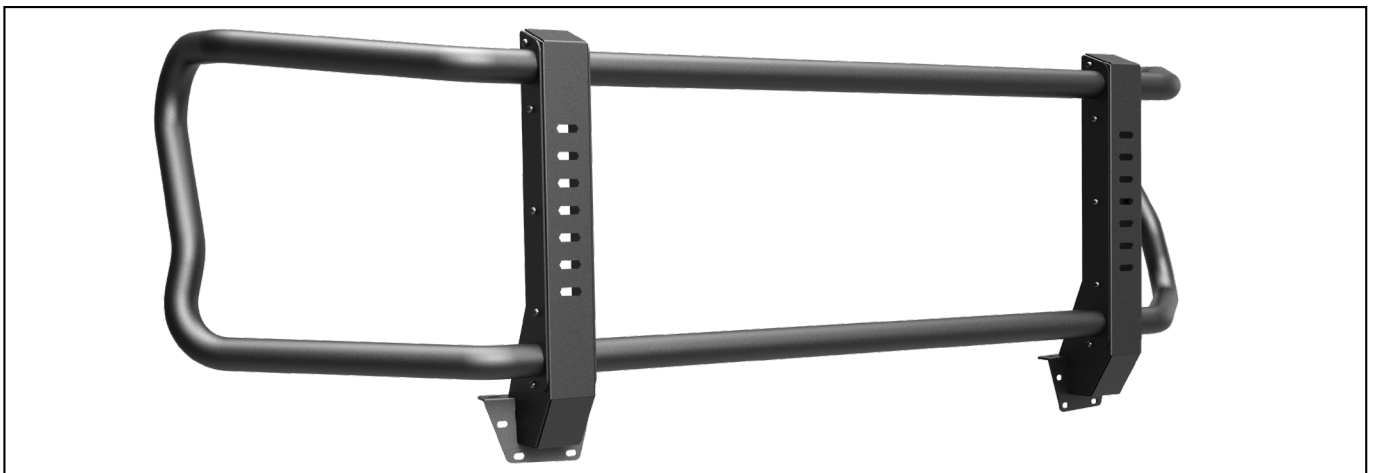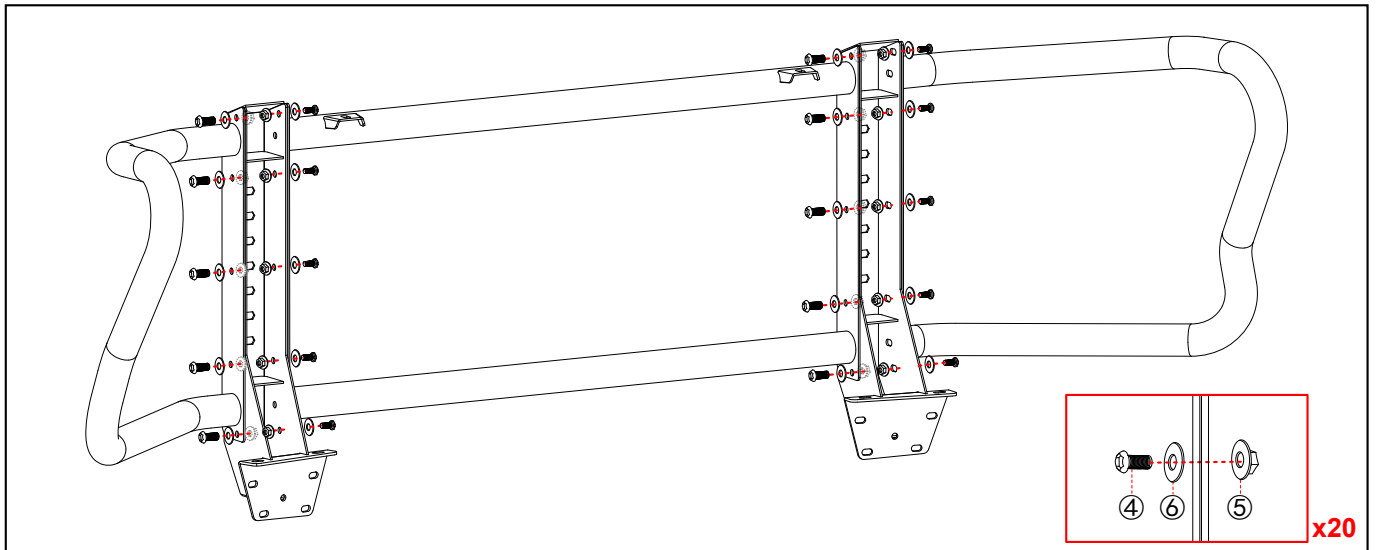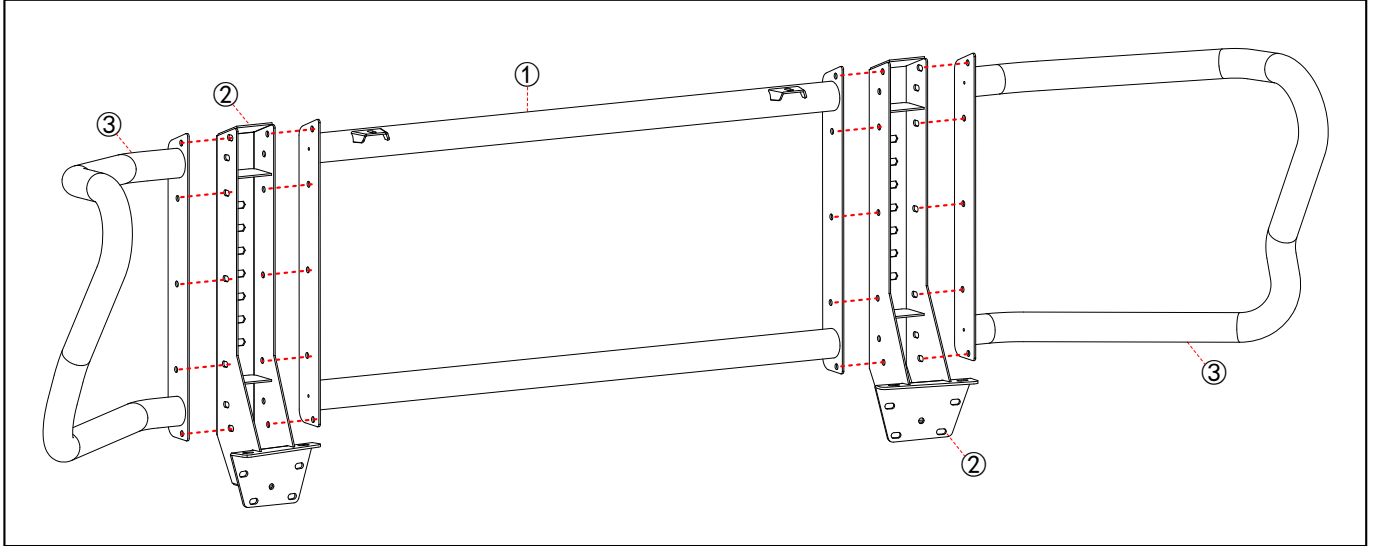


3. Remove our front bumper(Model: NSL02A101-1A) bolts to install the bull bar.

Note: *This Bull Bar only suitable for our Front Bumper model of NSL02A101-1A.*

Remove the bolts.

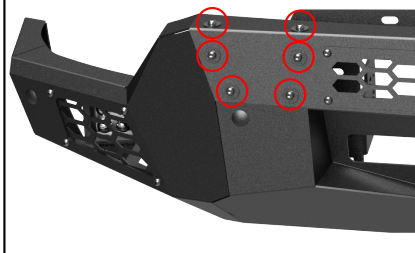

Install the bull bar using the bolts you just removed.

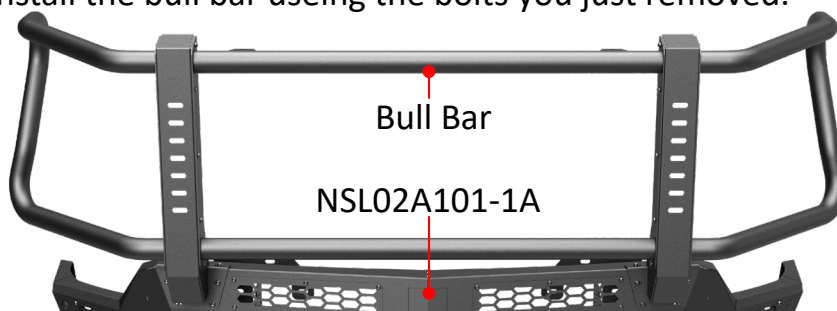

Bull Bar

NSL02A101-1A

4. The bull bar is installed.




NSL02A101-1A + NSL02A101-3B

FRONT BUMPER SKID PLATE

————— User Manual —————

2022-2024 Chevrolet Silverado 1500;
exclude ZR2

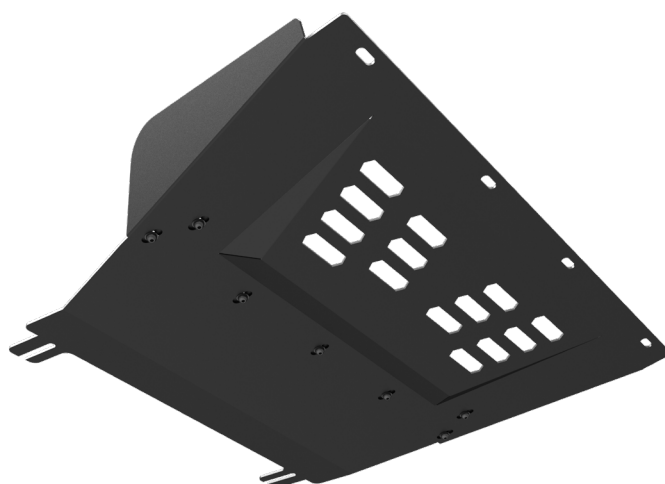

Model:	NSL02A101-4
Material:	Q235A
Product Dimensions:	31.7 x 3.3 x 23 inch
Package Dimensions:	58.2 x 13.7 x 8.6 inch
Product Weight:	/ lbs



※ Thank you for purchasing the FRONT BUMPER SKID PLATE. Please read this manual carefully and keep it properly if you need to refer to it afterward. If you need any support or assistance, please contact us with your product model number and order number, and our support team will help you solve problems.

⚠ WARNING




※ This product is designed primarily to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety messages and understand all instructions and procedure notices before attempting to install or use this product.

⚠ CAUTION

※ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

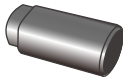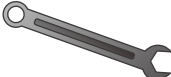REQUIRED TOOLS			
Socket	Ratchet	Wrench	Safety Glasses
			

Parts Information

NO.	Parts Name	Size	Line Graph	Qty	Color
/	Skid Plate 1	/		1	Black
/	Skid Plate 2	/		1	Black
B19	Half Head Allen Bolts	M8x25		12	Dacro Black

※ Note: spare parts such as B19 is provided with 1PCS each (included in the number of parts details).

Installation Instructions

※ Note:

This skid plate only suitable for our Front Bumper model of NSL02A101-1A.

1. Open the carton and take out the parts. Check whether the number of components is complete.
2. Install the skid plate in the bumper(NSL02A101-1A) and car.

