

USER MANUAL

TAIL LIGHTS



Model.: GWJ2020-0005


2014-2015 CHEVROLET SILVERADO 1500 2500 HD/3500 HD
Fits for models with Factory Halogen Taillights

Model.: GWJ2020-0006

2016-2018 CHEVROLET SILVERADO 1500 2500 HD/3500 HD
Fits for models with Factory Halogen Taillights

REQUIRED TOOLS


Socket

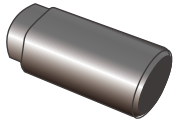




Ratchet



Panel Remover




Installation Instructions

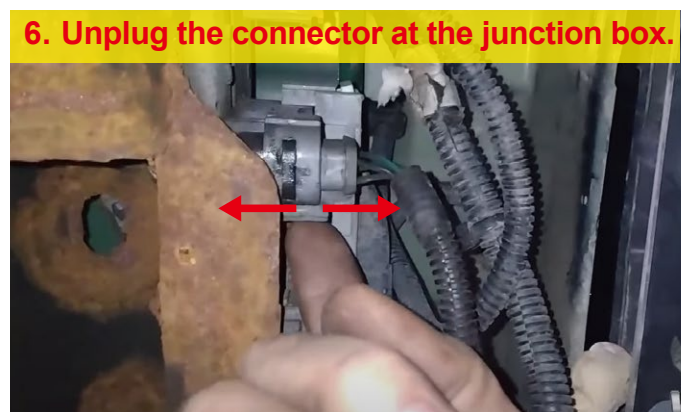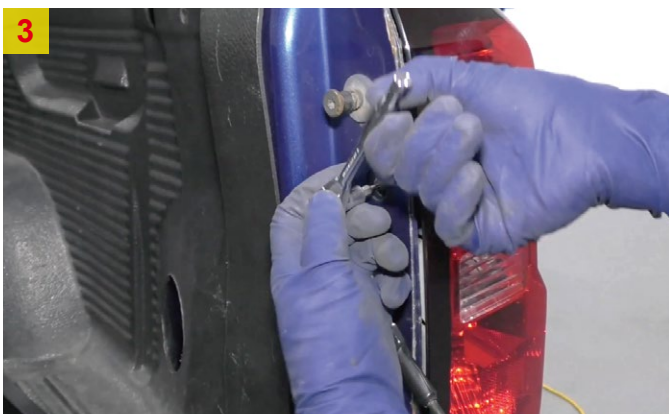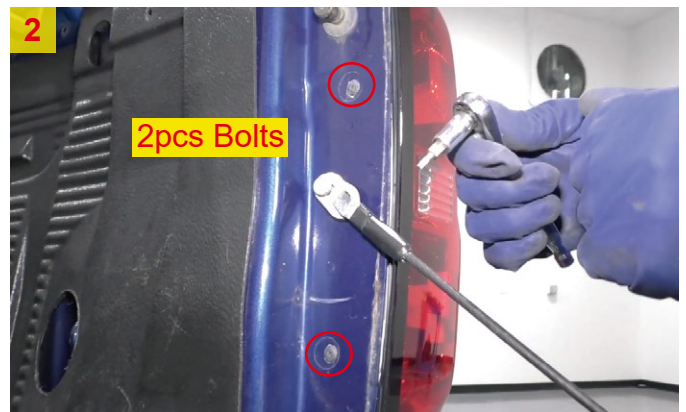

7. Pull all the clips out.




8. Pull out the taillight with the harness.

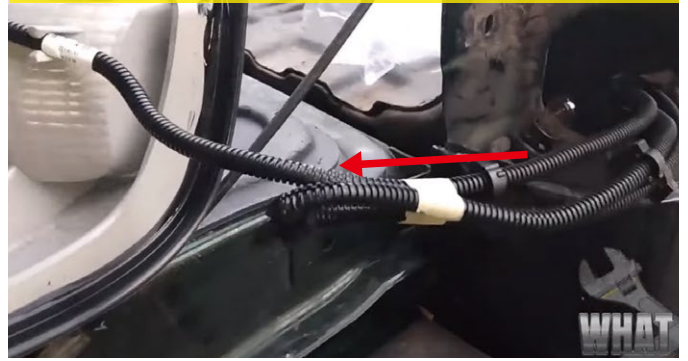

9



10. Put the new harness inside the car.

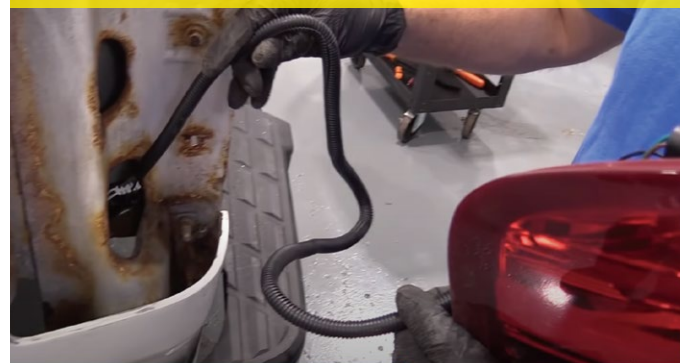

11



12



13. Slide the harness and secure it with the clip.



14. Plug into the junction box.



15. Repeat the steps 2~14 for the other side.

