

USER MANUAL




TAIL LIGHTS

Model.: GWJ2020-0009

2007-2013 chevy silverado 1500 2500 3500 models
with 3047 Reverse bulb

REQUIRED TOOLS


Socket

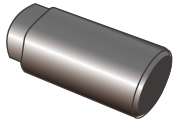


Ratchet



Panel Remover

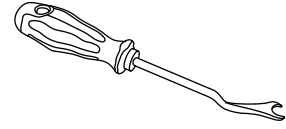

Installation Instructions

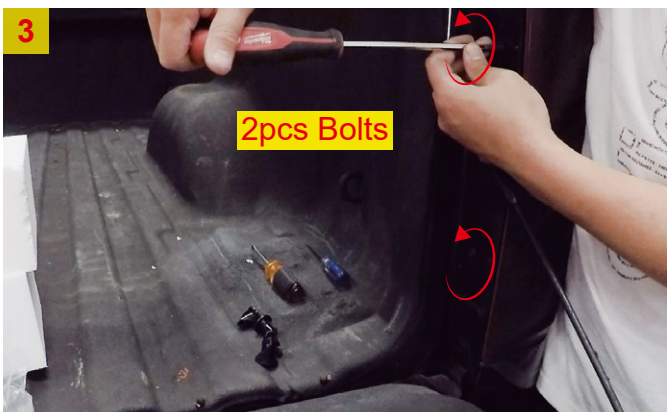

7. Pull all the clips out.



8. Pull out the taillight with the harness.




9. Put the new harness inside the car.



10



11

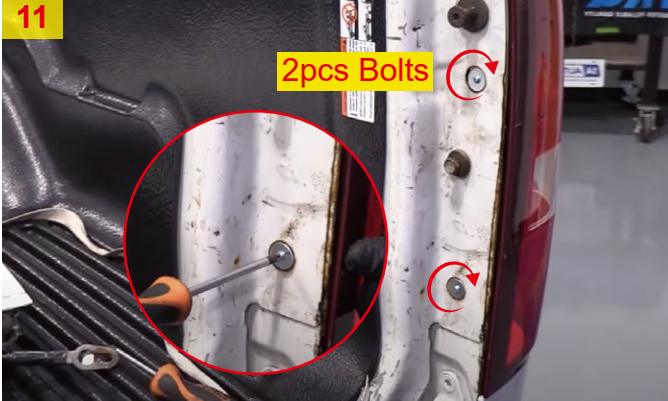

12. Slide the harness and secure it with the clip.



13. Plug into the junction box.

