

USER MANUAL

TAIL LIGHTS




GWJ2020-0061-08 GWJ2020-0061-08S


1992-1994 CHEVY BLAZER
1988-1999 CHEVY C/K1500 PICKUP
1992-1997 CHEVY C/K1500 SUBURBAN
1988-1999 CHEVY C/K2500 PICKUP
1992-1999 CHEVY C/K2500 SUBURBAN
1988-2000 CHEVY C/K3500 PICKUP
1995-2000 CHEVY TAHOE
1988-1998 GMC C/K1500 PICKUP

1992-1999 GMC C/K1500 SUBURBAN
1988-2000 GMC C/K2500 PICKUP
1992-1999 GMC C/K2500 SUBURBAN
1988-2000 GMC C3500 PICKUP
1988-2000 GMC K3500
1998 GMC C3500 PICKUP
1992-1999 GMC YUKON

REQUIRED TOOLS



Phillips Screwdriver




Flathead Screwdriver

Installation Instructions

1. Locate the two phillips screw and remove them.



2. Remove the tail light from the vehicle.

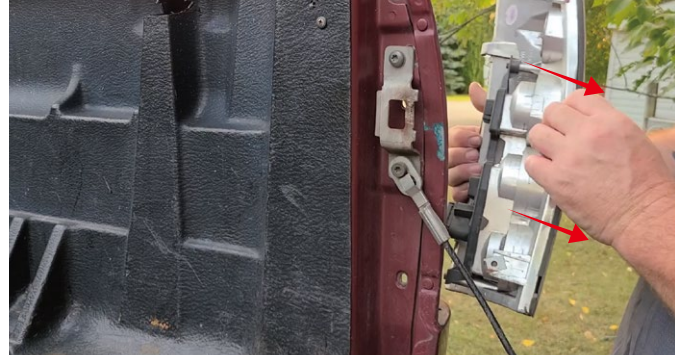


3. Unplug the tail light socket.



4. Remove the circuit board from the oem taillight.



5

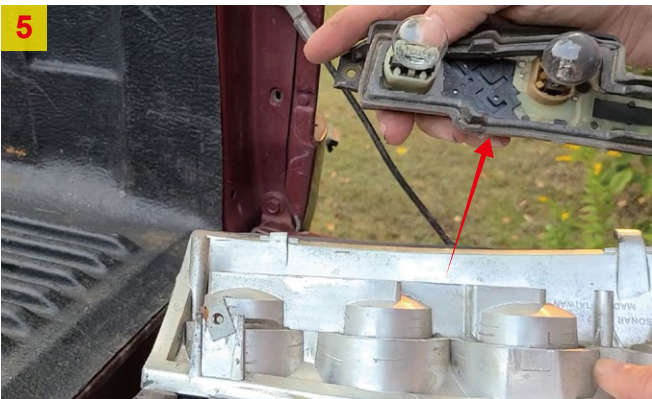

New Light



6. Install the circuit board into the new taillight.



7



8. Connect the main connector.



9. Install the new tail lights onto the car.



10



11. Repeat the steps 1~10 for the other side.



NOTE: Make sure all functions are working properly before driving.