


USER MANUAL

Bracket for Tail Light Junction Block

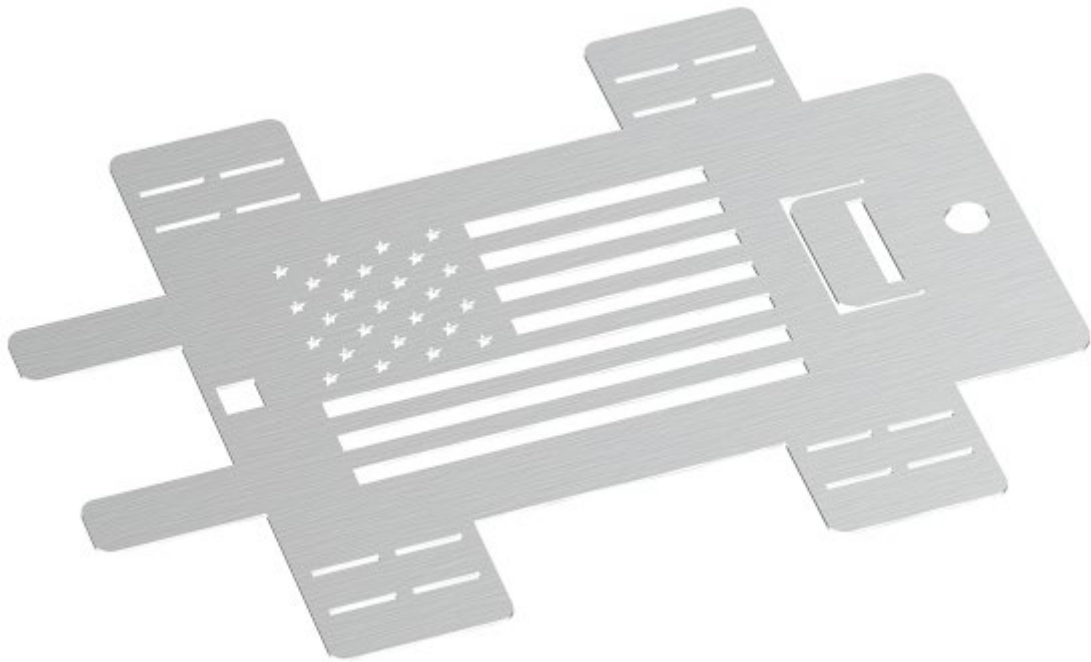


NGMN101

1999-2013 CHEVY SILVERADO 1500
2007 CHEVY SILVERADO 1500 CLASSIC / 2500 CLASSIC / 3500 CLASSIC
1999-2014 CHEVY SILVERADO 2500
2001-2014 CHEVY SILVERADO 3500
2002-2006 CHEVY SUBURBAN 1500
2002-2006 CHEVY SUBURBAN 2500
2002-2006 CHEVY TAHOE
2002-2006 CADILLAC ESCALADE
2002-2006 CHEVY AVALANCHE 1500
2002-2006 CHEVY AVALANCHE 2500
1999-2013 GMC SIERRA 1500
2007 GMC SIERRA 1500 CLASSIC / 2500 CLASSIC / 3500 CLASSIC
1999-2014 GMC SIERRA 2500
2001-2014 GMC SIERRA 3500
2002-2006 GMC YUKON
2002-2006 GMC YUKON XL 1500
2002-2006 GMC YUKON XL 2500
2003-2007 HUMMER H2

REQUIRED TOOLS

Phillips Screwdriver



Installation Instructions


1. Locate the circuit board under the vehicle.



2. Remove OEM bolt and take out the bracket with junction Block.




3. Disconnect all the plugs of original.

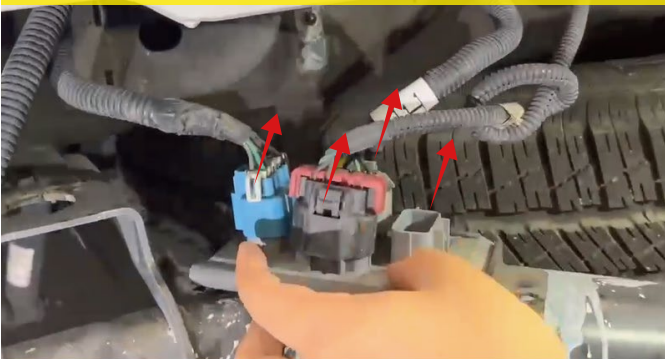

4




5. Place the junction box on the bracket, bend the tabs at the red line.

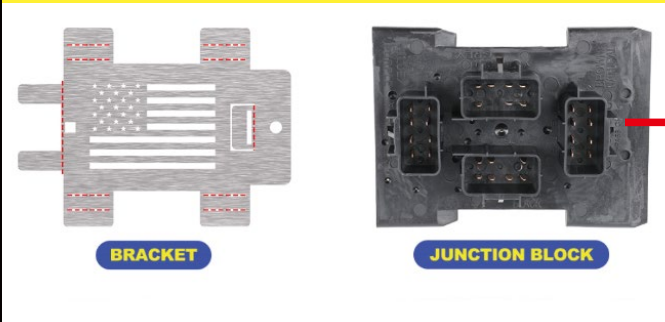


6. Tabs are bent completely.



7. Plug all the connectors back in place.

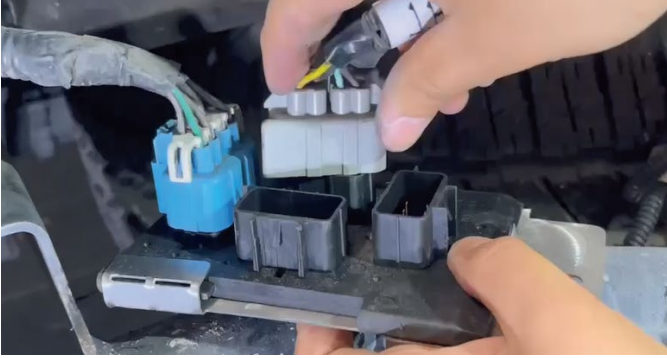

8. Plug instruction

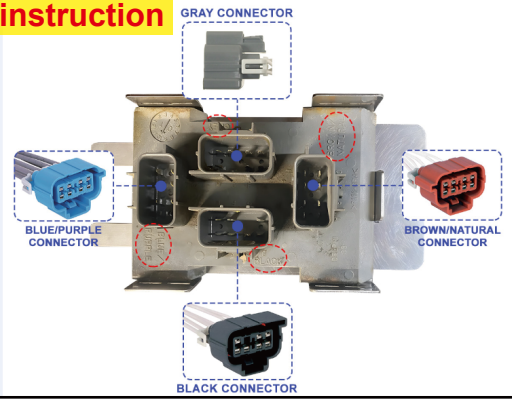

9. Insert Mounting Pins.



10. Reinstall the OEM bolt to secure the bracket.

