

USER MANUAL



HEADLIGHTS

WJ10-0214H+0742T

1999-2002 Chevy Silverado 1500/2500

2001-2002 Chevy Silverado 1500HD/2500HD/3500


2000-2006 Chevy Suburban 1500/2500

2000-2006 Chevy Tahoe


Not fit for Silverado Old Body Style

Not fit for 2000 Tahoe with Z71 Model


REQUIRED TOOLS

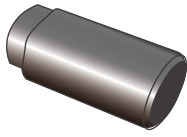

Socket

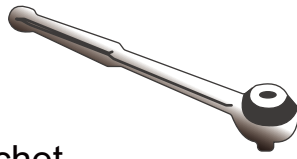





Ratchet

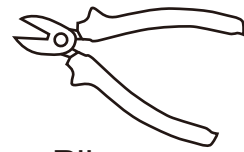


lineman Pliers

Installation Instructions



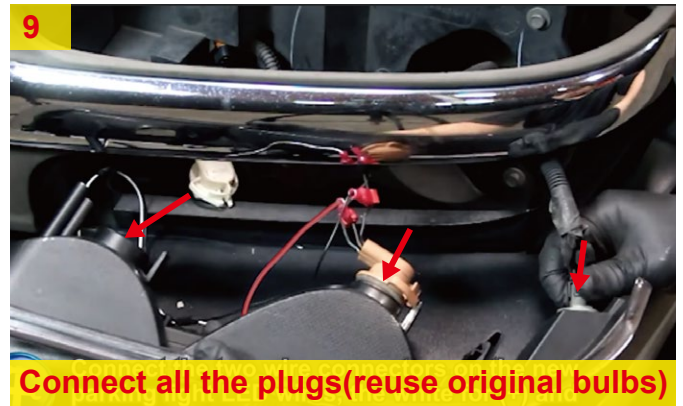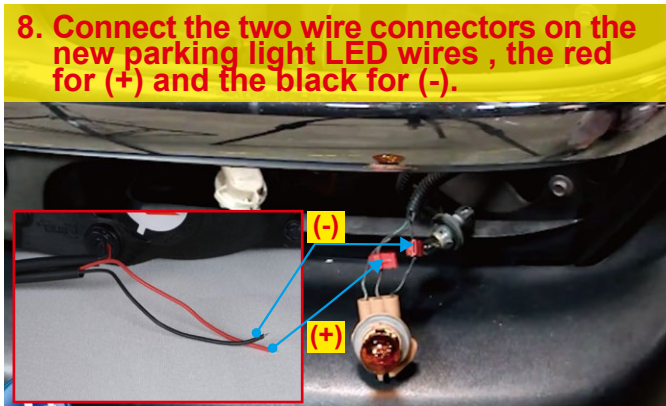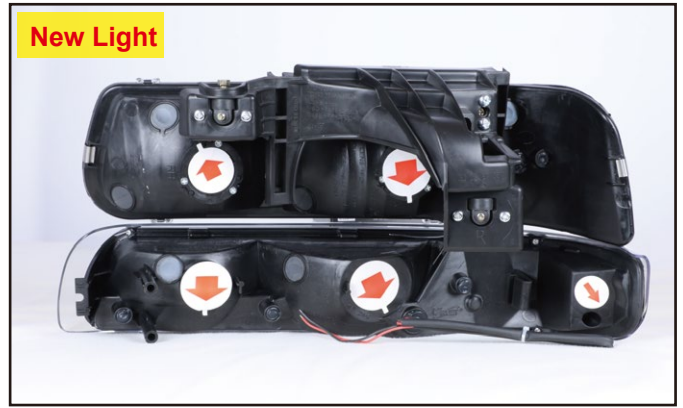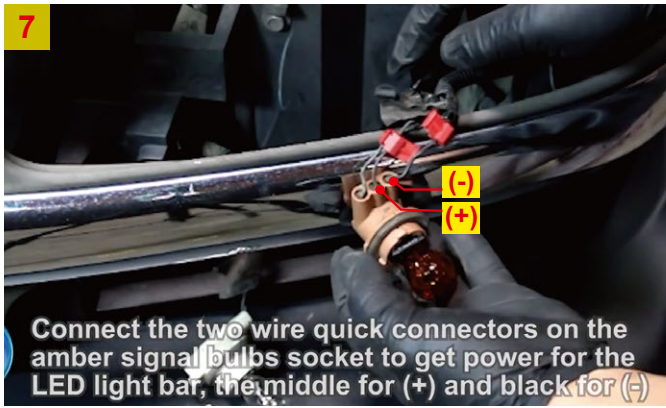

14

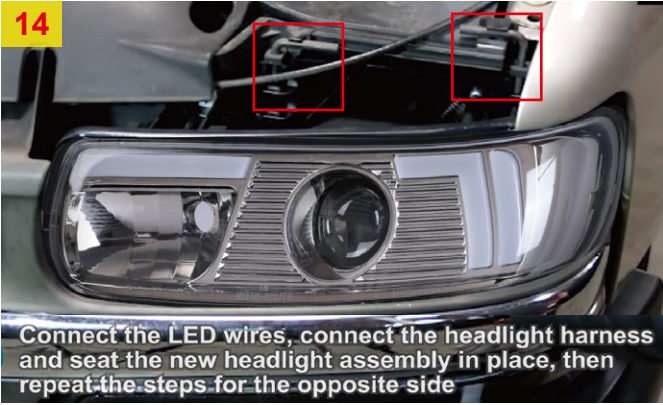

Adjustment steps

Use 3/8 inch(E10) Torx Socket Extension.



Inside ones: adjust the light left to right.



Outer ones: adjust the light up to down.



adjust headlight. Same steps for the other side.

