

USER MANUAL

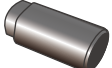
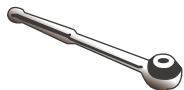
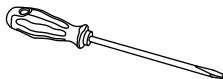
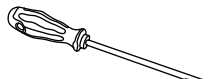
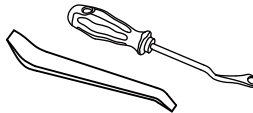


HEADLIGHTS

Model.: WJ1020-0700

Dodge Ram 1500 2019-2021

REQUIRED TOOLS

Socket 	Ratchet 	Flathead Screwdriver 	Phillips Screwdriver 	Panel Remover 
---	--	---	--	--

Installation Instructions

1. Remove front grille by removing 2 X 8mm screws located in the wheel well that hold the front lower trim panel to the vehicle. **Photo 1**
2. Then remove the 3 X 8mm screws which hold the fender liner to the front fender and gently pull it away from the fender. **Photo 2**



3. Remove the 10mm bolt located behind the lower trim panel. **Photo 3**
4. Push down on the bracket behind the trim piece and carefully remove it from the vehicle and set it aside for later. Repeat for the other side. **Photo 4**



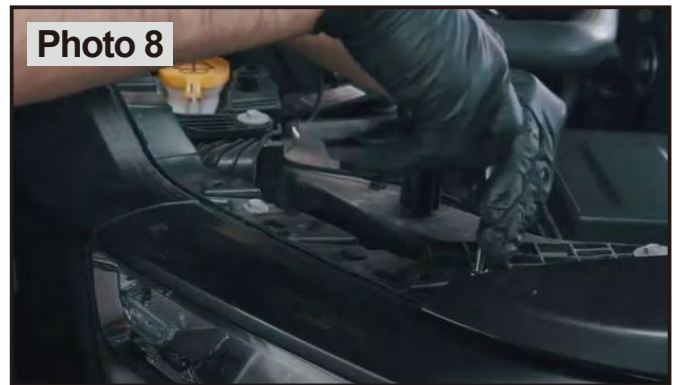
5. Remove the 12 plastic clips on the top plastic cover. Start from one side and work your way across. **Photo 5~Photo 6**



6. Then remove the cover from the vehicle and set it aside for later. **Photo 7**

7. Remove the 8 X 10mm bolts and two plastic clips located at the top of the grille. **Photo 8~Photo 9**

8. Pulling gently toward you remove the top part of the grille and set it aside for later. **Photo 10**



9. Remove the 3 X 10mm bolts at the bottom of each side of the grille. **Photo 11~Photo 12**




10. Then remove the 4 x 10mm bolts attaching the top of the grille to the vehicle.

Photo 13


11. Lift the two plastic connector arms over the bosses to release the grille.

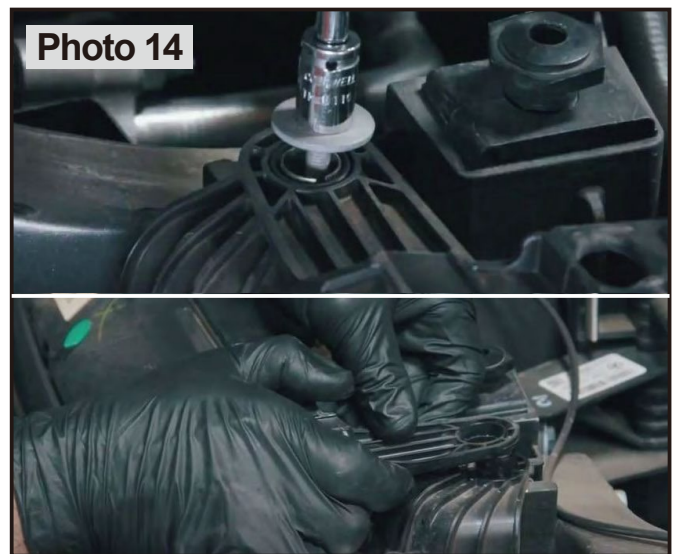Photo 14



12. Remove the grille from the vehicle and set it aside for later.

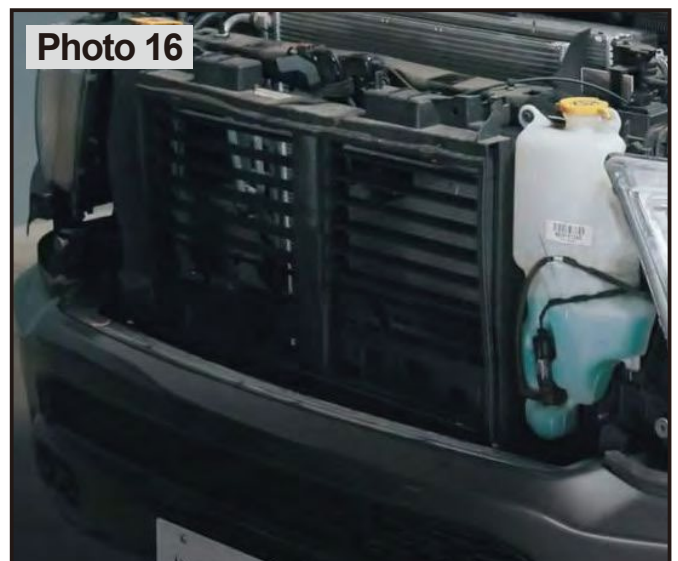Photo 15~Photo 16



13. At the top of the headlight remove the 10mm bolt and plastic clip.
Photo 17~Photo 18



14. Remove the 10mm bolt located on the side of the headlight.
Photo 19

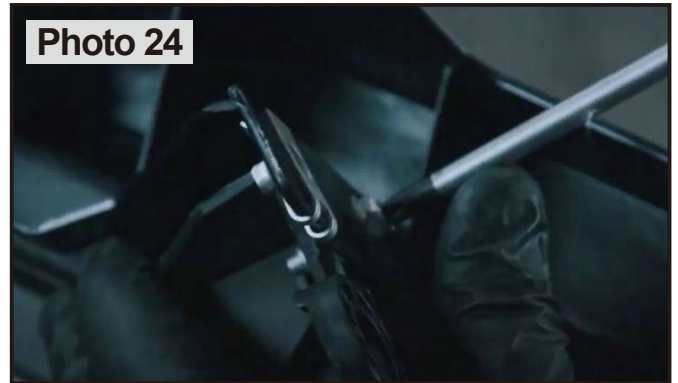
15. Now pull the headlight away from the vehicle carefully.
Photo 20



16. Remove the connector at the bottom of the light and the one at the back corner.
Photo 21~Photo 22



17. You can now remove the headlight completely from the vehicle. Repeat process for the other side. **Photo 23**
18. Remove the lower bracket from the factory headlights and install onto your new ALPHAREX headlights. **Photo 24~Photo 26**



19. Attach the connectors on the new headlight. **Photo 27**
20. Reinstall your factory trim and grille. **Photo 28**

