

USER MANUAL

TAIL LIGHTS



Model.: WJ20-0005

Chevy Suburban 1500 2000-2006

Chevy Suburban 2500 2000-2006

Chevy Tahoe 2000-2006


GMC Yukon 2000-2006

GMC Yukon XL 1500 2000-2006

GMC Yukon XL 2500 2000-2006

(All Does NOT Fit Double Door/Barn Door Style)

REQUIRED TOOLS



Phillips Screwdriver

Installation Instructions

1. Unscrew the two screws with the phillips screwdriver.



2. Remove the tail light from the vehicle.




3. Disconnect all the plugs of original.



4



5. Connect all the plugs.

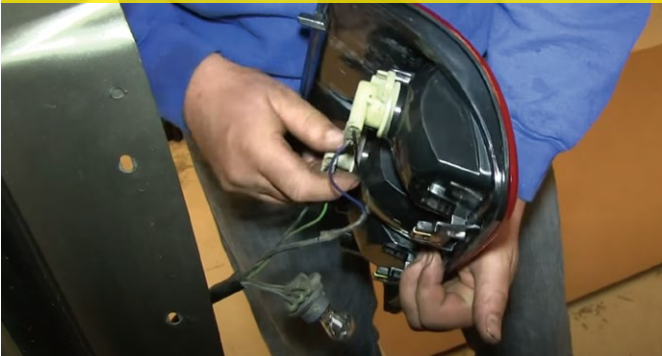

6



7



8. Repeat the steps 1~7 for the other side.

