

USER MANUAL



TAIL LIGHTS

WJ20-0008

1994-2004 Chevrolet S10 Pickup


1994-2004 GMC Snoma

1996-2000 Isuzu Hombre

Not fit for Blazer or Jimmy SUV models

REQUIRED TOOLS




Socket




Ratchet



Installation Instructions

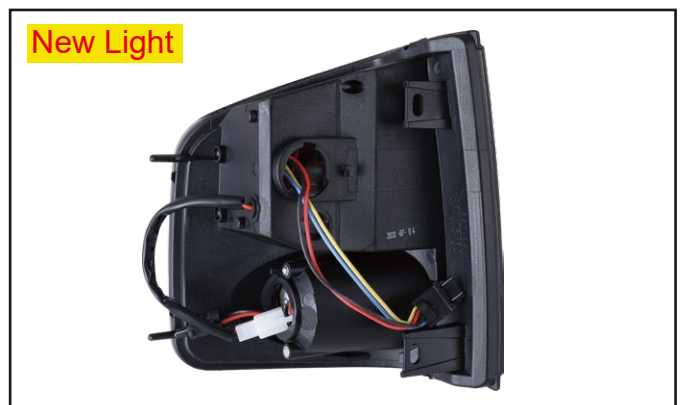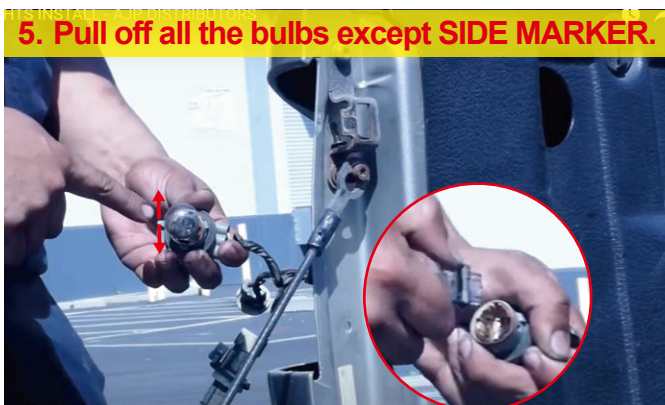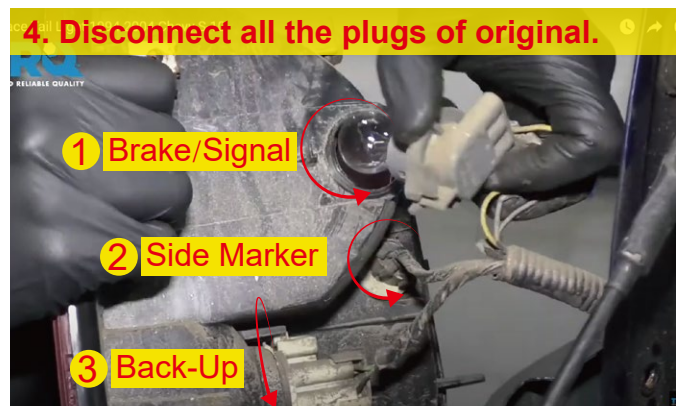


6. Place the resistor in a safe location in the housing, and connect the resistor.

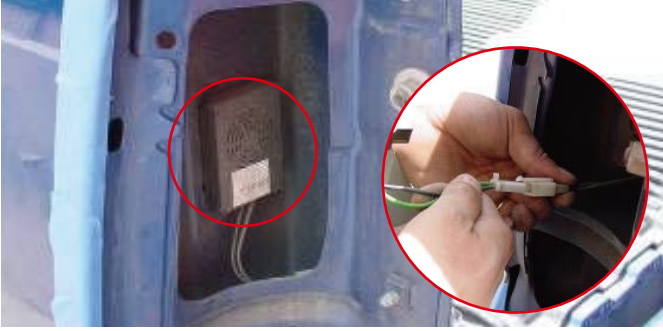

7. Make sure (+) is aligned.



8. Reuse factory Side Marker bulb.

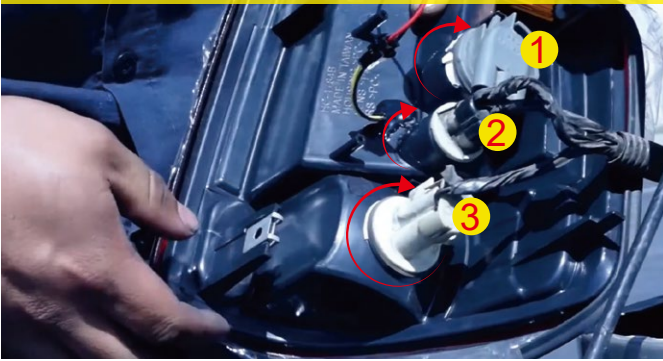

9



10



11. Repeat the steps 2~10 for the other side.

