

USER MANUAL

TAIL LIGHTS



Model.: WJ20-0718

Chevy Blazer 1992-1994
Chevy c1500 Pickup 1988-1999
Chevy c1500 Suburban 1992-1999
Chevy c2500 Pickup 1988-2000
Chevy c2500 Suburban 1992-1999
Chevy c3500 Pickup 1988-2000
Chevy k1500 Pickup 1988-1999
Chevy k1500 Suburban 1992-1999
Chevy k2500 Pickup 1988-2000
Chevy k2500 Suburban 1992-1999
Chevy k3500 Pickup 1988-2000
Chevy Tahoe 1995-2000
Gmc c1500 Pickup 1988-1999

Gmc c1500 Suburban 1992-1999
Gmc c2500 Pickup 1988-2000
Gmc c2500 Suburban 1992-1999
Gmc c3500 Pickup 1988-2000
Gmc k1500 Pickup 1988-1999
Gmc k1500 Suburban 1992-1999
Gmc k2500 Pickup 1988-2000
Gmc k2500 Suburban 1992-1999
Gmc k3500 1988-2000
Gmc k3500 Pickup 1998
Gmc Yukon 1992-1999
Cadillac Escalade 1999-2000

REQUIRED TOOLS


Socket




Ratchet




Flathead
Screwdriver



Phillips
Screwdriver

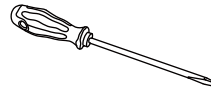

Panel
Remover



Installation Instructions


1



2. Open the tail gate and locate the two screws and remove them.



3

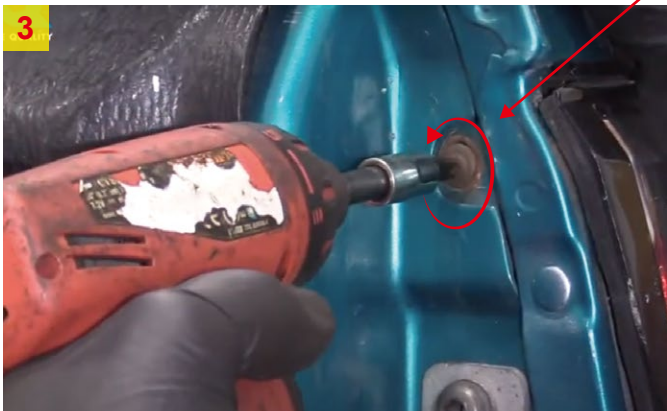


4. Pull the tail light off from the vehicle



5





6. Disconnect the plugs of original

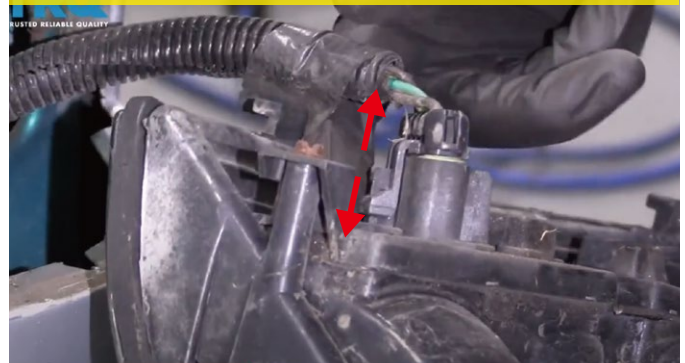

7. Take off the rear connector plate and remove the stop light bulb and turn signal bulb, except the back-up bulb.

Original light

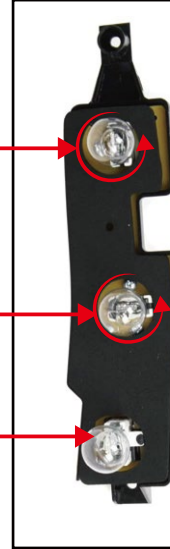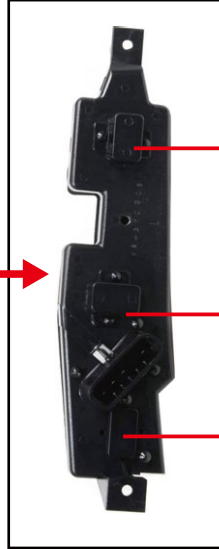

1 stop light bulb

2 turn signal bulb

3 back-up bulb

8. Install the rear connector plate onto the back of the new lamp.




9. Reverse the install process



10



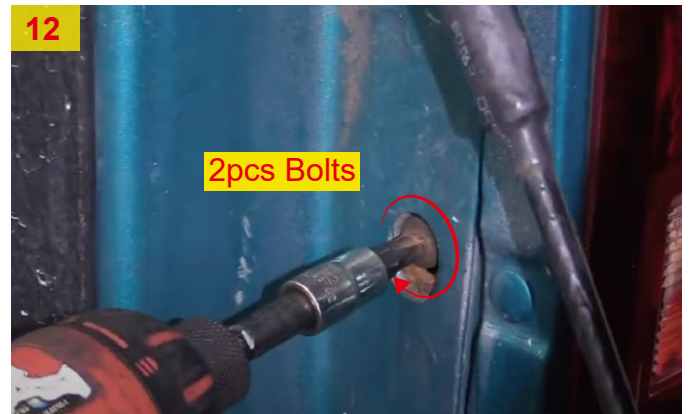

13. Repeat the steps 2~12 for the other side

14. Test all functions to make sure of proper installation before driving

