

USER MANUAL

TAIL LIGHTS



Model.: WJ2025-0698


Chevy Suburban 2000-2006

Chevy Tahoe 2000-2006

GMC Yukon 2000-2006

(All Does NOT Fit Double Door/Barn Door Style)

REQUIRED TOOLS



Phillips Screwdriver

Installation Instructions

1. Unscrew the two screws with the phillips screwdriver.




2. Remove the tail light from the vehicle.



3. Disconnect all the plugs of original.



4. Connect all the plugs.

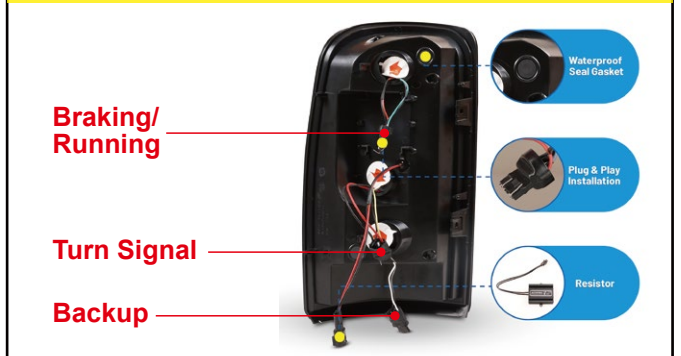

5. Place the resistor in a safe location in the housing, and connect the resistor.



7



8. Repeat the steps 1~7 for the other side.

