


PIERCE Pendant

coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

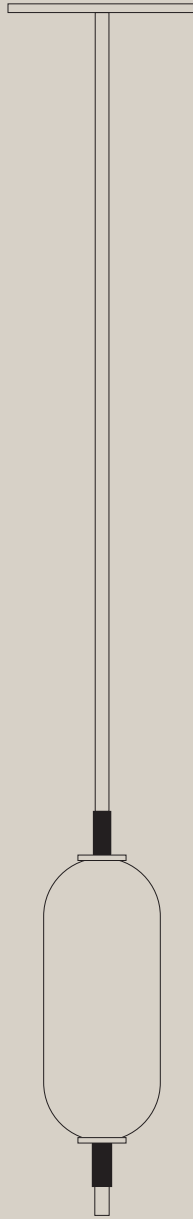

PIERCE Pendant

coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

COMPONENTS:



A: Canopy (1)



B: Upper Disk (1)



C: Upper Hanger (1)



D: Shade (1)



E: Lower Disk (1)



F: Lower Hanger (1)

TOOLS REQUIRED:

- + Power drill
- + Drill bits
- + Screwdriver bits

- + Allen key set
- + Painters tape

PIERCE Pendant

coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

BEFORE YOU BEGIN:

- + Always wear white cloth or latex gloves when handling the metal and glass.
- + Please use a junction box with horizontally placed screw holes that are spaced 2.75" apart.
- + Two people recommended for installation.





CAUTION: ELECTRIC SHOCK RISK:

- + Coil + Drift recommends this piece be installed by a qualified electrician only.
- + Disconnect power at junction box and turn off electrical power at breaker before beginning.

Having an issue? Call us at 917.664.4483

INSTALLING YOUR PIERCE PENDANT:

1.
Wire individual leads to line power in junction box.
2.
Unscrew the set screw on the canopy slip ring and slide the canopy down. Wire individual leads to line power in junction box. Then slide the Canopy (A) and slip ring up to cover the junction box.
3.
Screw in provided lightbulb to make sure light is functioning, then remove.

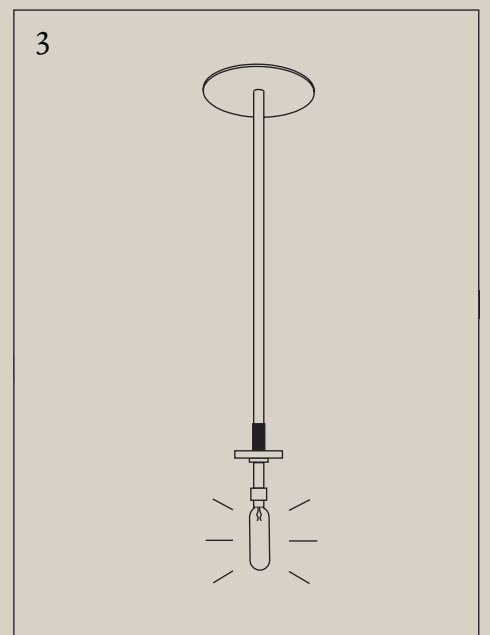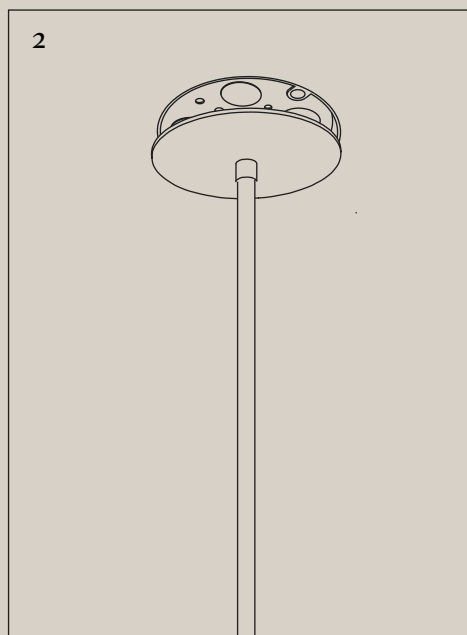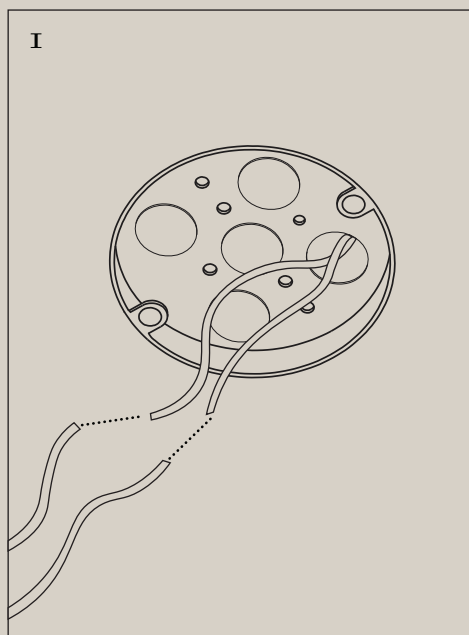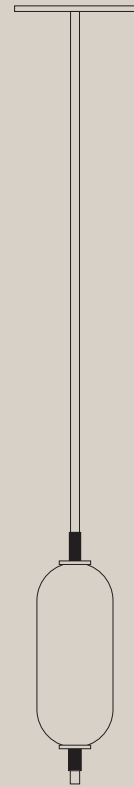

PIERCE Pendant





coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

INSTALLING YOUR PIERCE PENDANT:

Note: For your safety and ease, it is important that the glass shade is attached and raised into the position shown in step 6 before installing the lightbulb. Please do not install the lightbulb before this step.

4.
To install the shade, first make sure the bulb is removed. Then lift the Upper Disk (B) at least 14" up the stem. Painters tape may be used to secure it in place.
(If we can, we'll do this for you in advance of shipping.)
5.
Insert the marked opening of the glass Shade (F) over the end of the stem. Tilt and lift the shade to raise it over the long end of the Upper Hanger (E) first and then slide the short end through the opening.
6.
Lift the shade further up the stem to reveal the lightbulb socket.

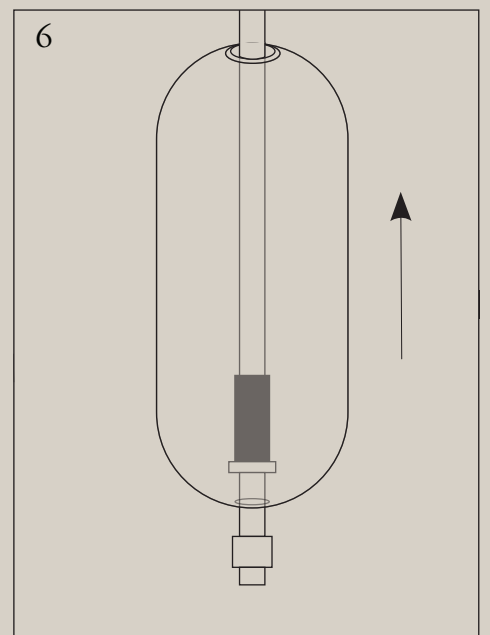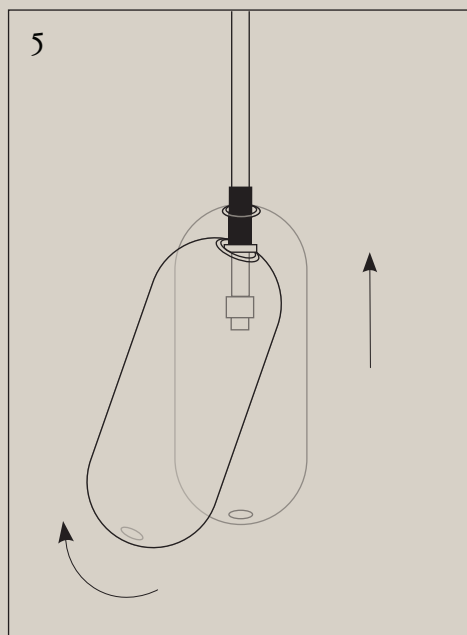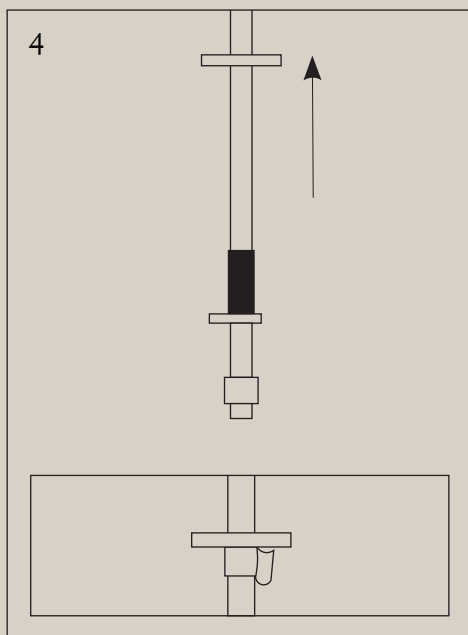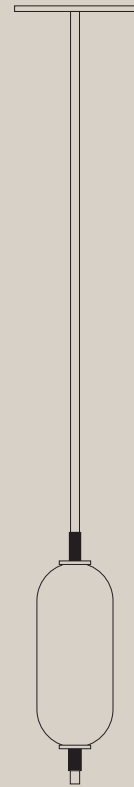

PIERCE Pendant





coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

INSTALLING YOUR PIERCE PENDANT:

7. While holding the shade steady in a raised position on the stem, screw in the lightbulb.
8. Gently slide the shade back down so that it rests evenly on the upper brace.
9. Slide the the Upper Disk (D) back down on top of the shade, and with the set screw facing away from general view, screw in place gently without pressing the disk down on the glass.

Caution: Glass is fragile. When screwing on clamps do not use excessive force.

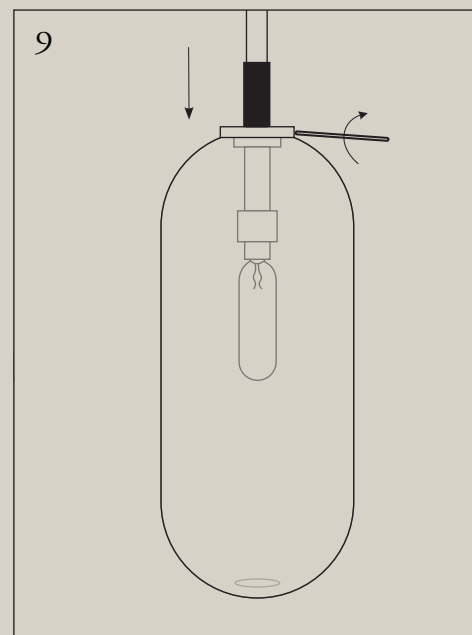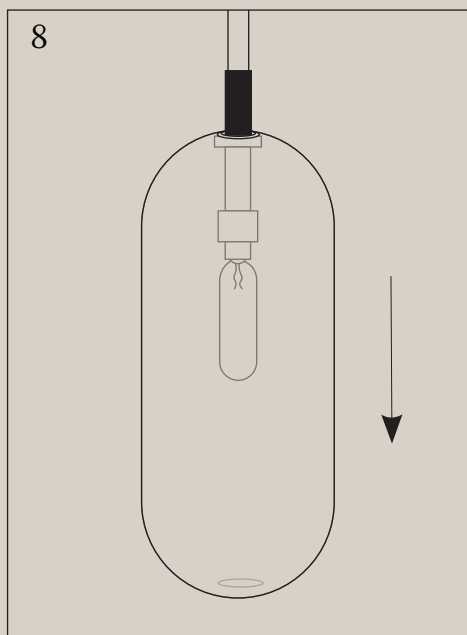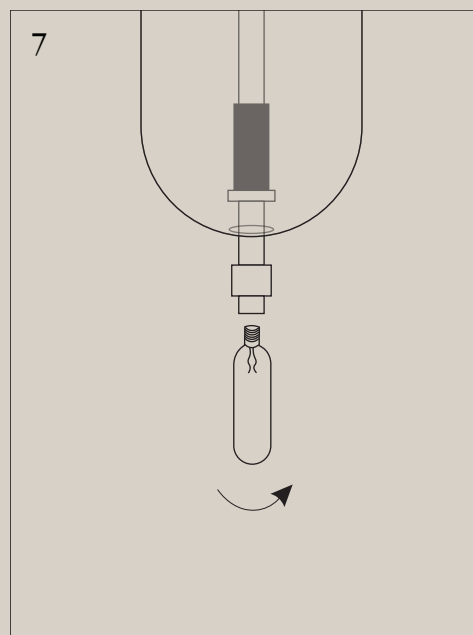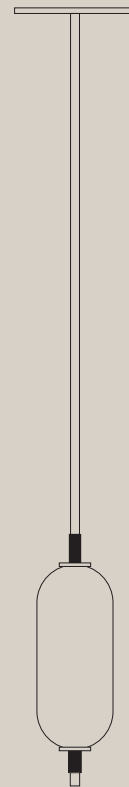

PIERCE Pendant

coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

INSTALLING YOUR PIERCE PENDANT:

I0.
Insert a long end of the Lower Hanger (H) into the bottom opening of the shade, tilting the hanger to allow the short end to pass through the opening

II .
Adjust the hanger be centered and vertical while resting on the edges of the shade opening. Then slide on the Lower Disk (G) and position beneath the shade to secure. With the set screw facing away from general view, screw in place gently.

I2.
Step back and check to make sure that the stem, shade, and attached lower brace are alligned and vertical. Adjust as needed with gloved hands. If a clamp has been firmly tightened and there is a tilt, it can be loosened slightly with the set screw so that it may hang with gravity.

Enjoy your new Pierce Pendant!

