


PIERCE Chandelier

coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

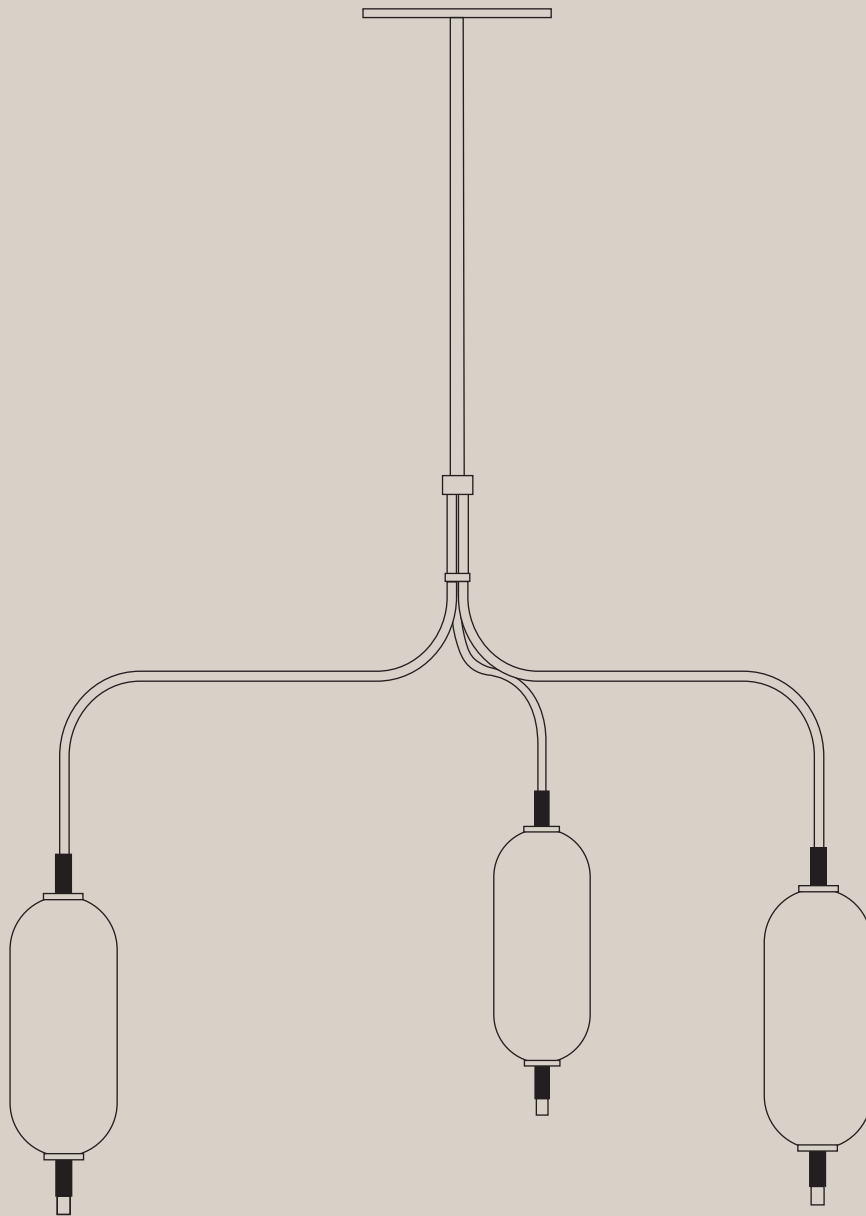


PIERCE Chandelier

coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

COMPONENTS:

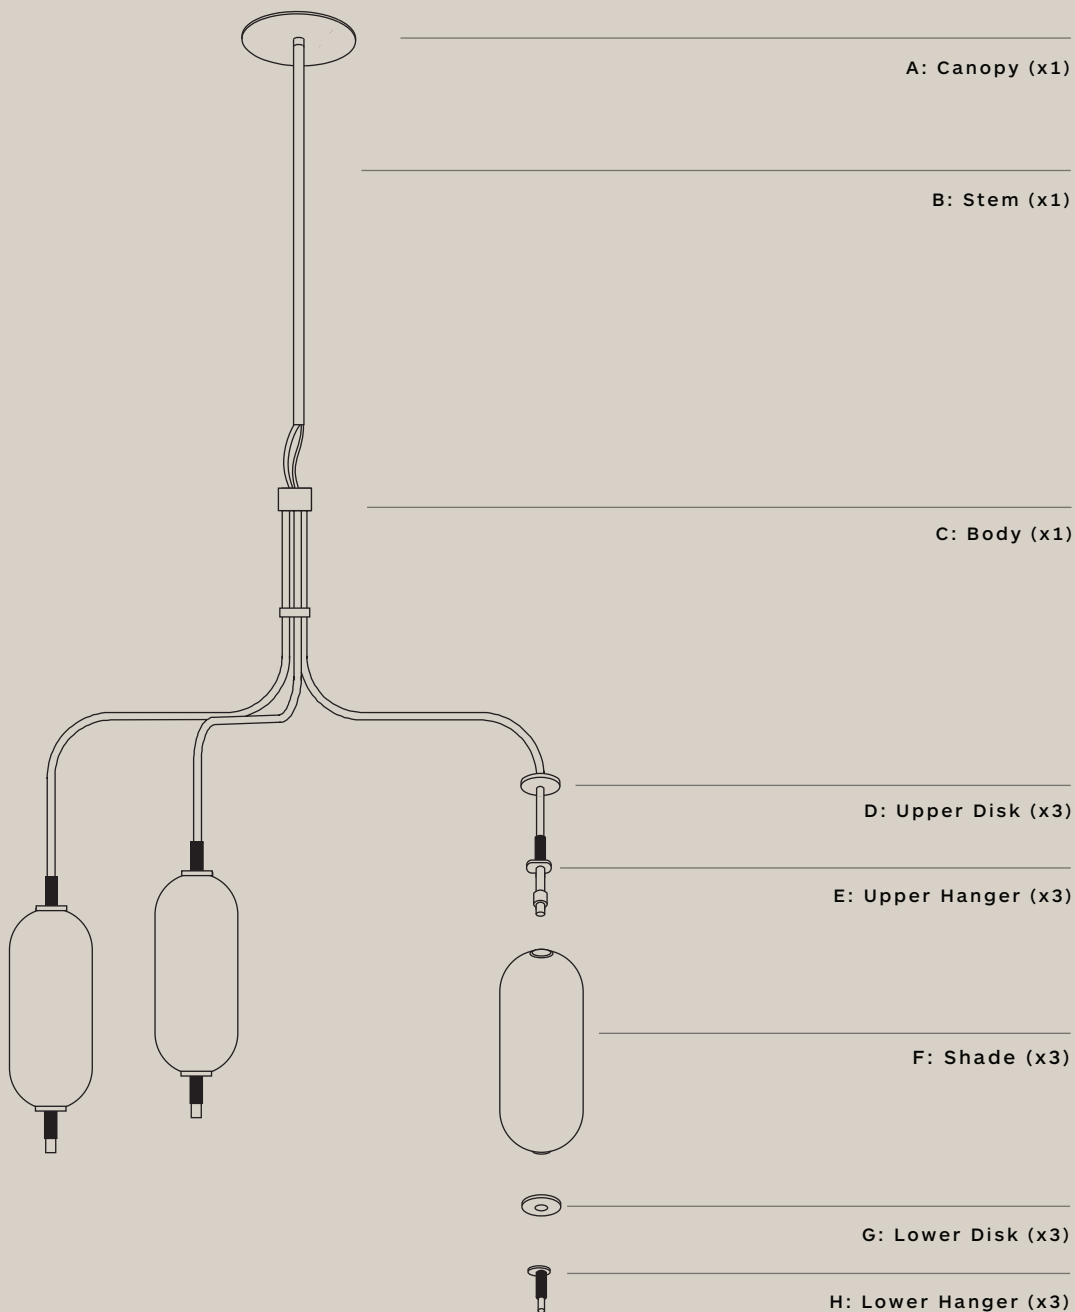

TOOLS REQUIRED:

- + Power drill
- + Drill bits
- + Screwdriver bits
- + Allen key set
- + Painters tape

PIERCE Chandelier

coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

BEFORE YOU BEGIN:

- + Always wear white cloth or rubber gloves when handling the metal and glass.
- + Two people recommended for installation.


CAUTION: ELECTRIC SHOCK RISK:

- + Coil + Drift recommends this piece be installed by a qualified electrician only.
- + Disconnect power at junction box and turn off electrical power at breaker before beginning.




Having an issue? Call us at 917.664.4483

INSTALLING YOUR PIERCE CHANDELIER:

1. Thread the wires into the bottom of the Stem and out the top. Screw the Stem (B) into the Body (C).
2. Unscrew the set screw on the canopy slip ring and slide the canopy down. Wire individual leads to line power in junction box. Then slide the Canopy (A) and slip ring up to cover the junction box.
3. Screw in the lightbulbs to each socket to make sure the light is functioning, then remove.

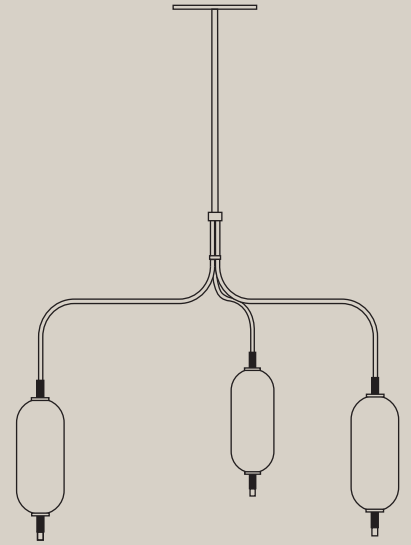

Lorem ipsum

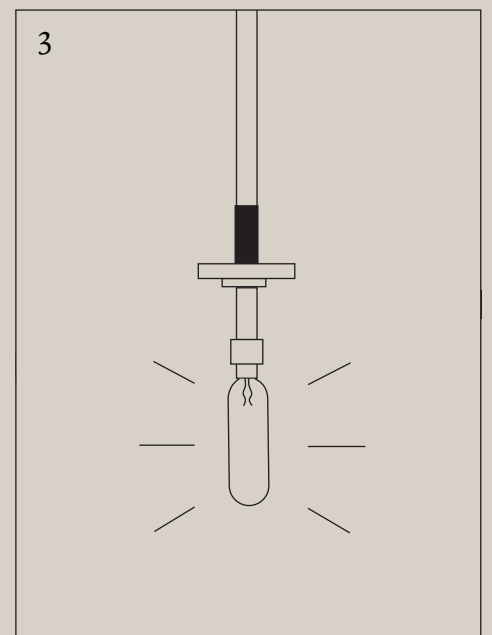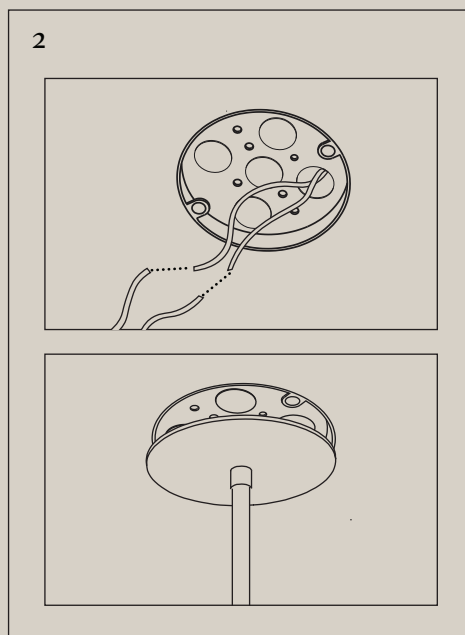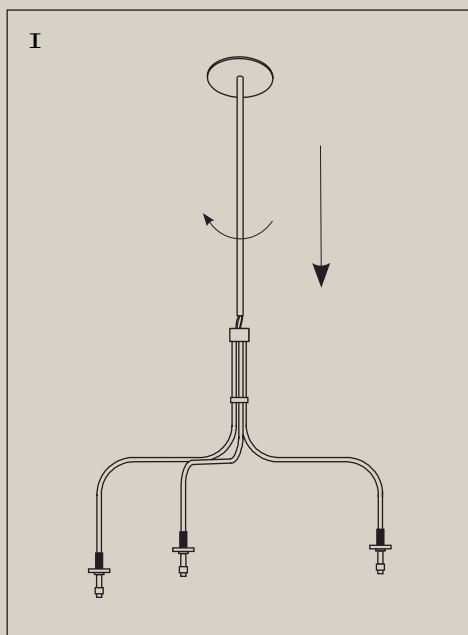

PIERCE Chandelier

coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

INSTALLING YOUR PIERCE CHANDELIER:

Note: For your safety and ease, it is important that the glass shade is attached and raised into the position shown in step 6 before installing the lightbulb. Please do not install the lightbulb before this step.





Note: When installing glass shades, do so in order from shortest arm to longest arm to keep the chandelier balanced.

STEPS 4-11: REPEAT FOR EACH SHADE

4.
To install the shade, first make sure the bulb is removed. Then lift the Upper Disk (D) at least 14" up the stem (if possible, we're do this for you before shipping). Painters tape may be used to secure it in place if necessary. Pay extra attention if your fixture is brass as it will scratch easily.

5.
Insert the marked opening of the glass Shade (F) over the end of the stem. Tilt and lift the shade to raise it over the long end of the Upper Hanger (E) first and then slide the short end through the opening.

6.
Lift the shade further up the stem to reveal the lightbulb socket.

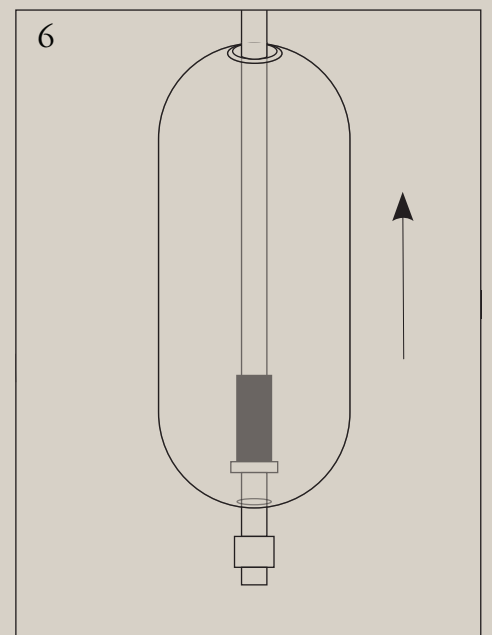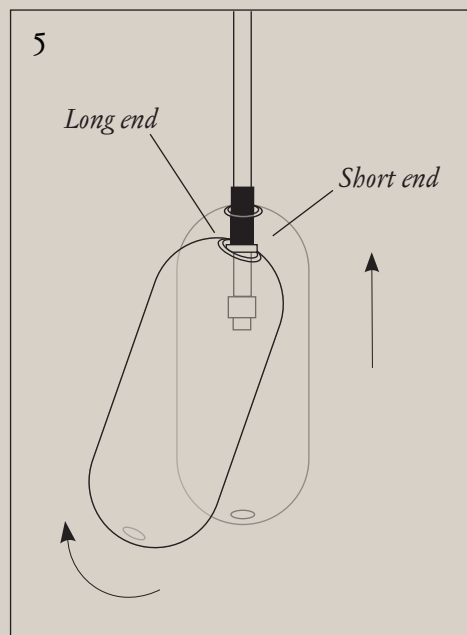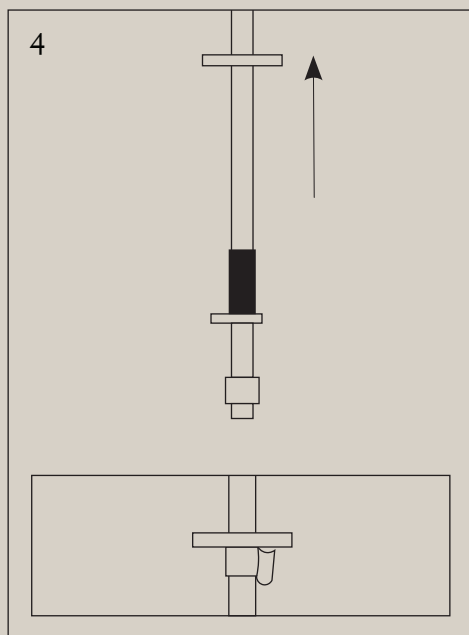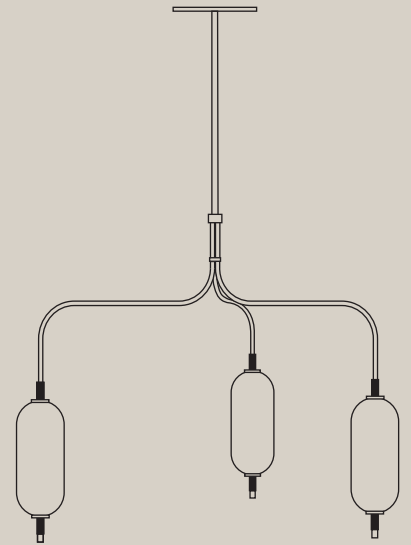

PIERCE Chandelier





coilndrift.com
studio@coilndrift.com
@coilndrift

COIL +
DRIFT

INSTALLING YOUR PIERCE CHANDELIER:

7. While holding the shade steady in a raised position on the stem, screw in the lightbulb.
8. Gently slide the shade back down so that it rests evenly on the upper hanger.
9. Slide the the Upper Disk (D) back down on top of the shade, and with the set screw facing away from general view, screw in place gently without pressing the disk down on the glass.

Caution: Glass is fragile. When screwing on clamps do not use excessive force.

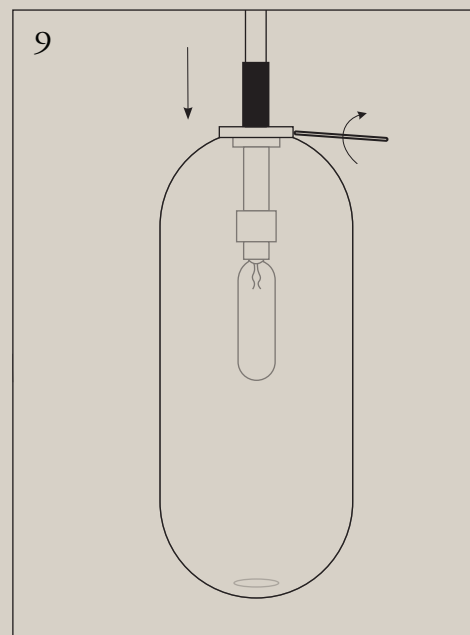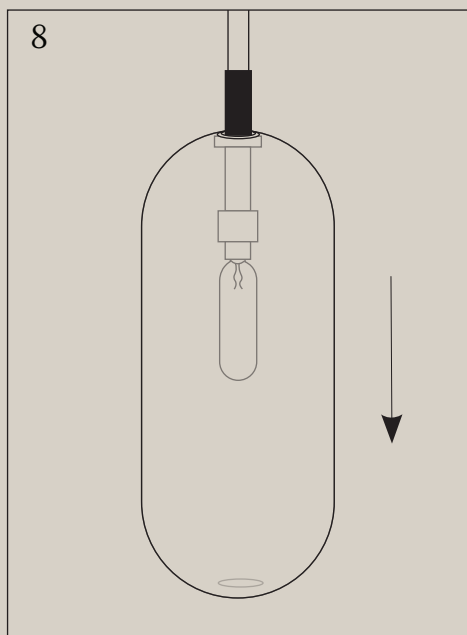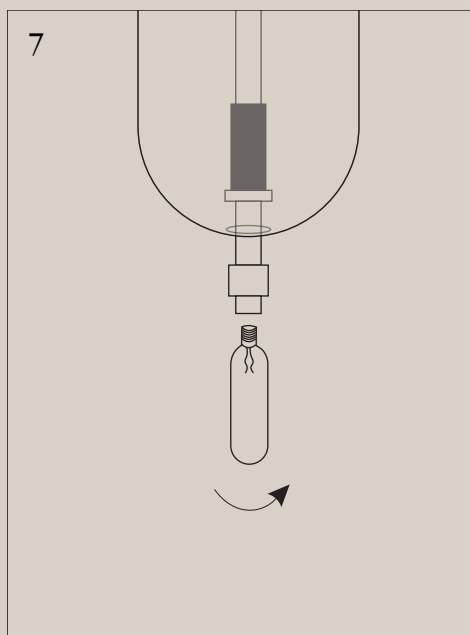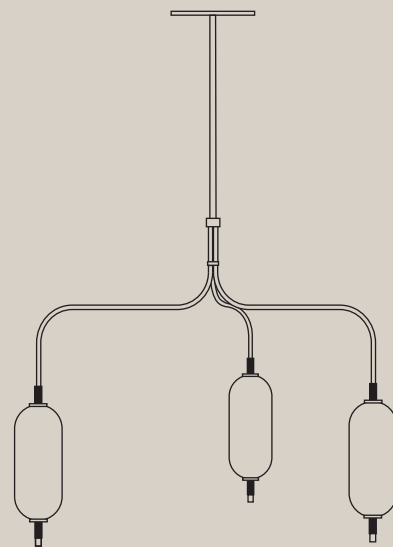

INSTALLING YOUR PIERCE CHANDELIER:

10.

Insert a long end of the Lower Hanger (H) into the bottom opening of the shade, tilting the hanger to allow the short end to pass through the opening.

11.

Adjust the hanger be centered and vertical while resting on the edges of the shade opening. Then slide on the Lower Disk (G) and position beneath the shade to secure. With the set screw facing away from general view, screw in place gently.

RETURN TO STEP 4 UNTIL ALL SHADES AND LIGHTBULBS ARE INSTALLED.

12.

Step back and check to make sure that the stems, shades, and attached lower braces, are vertically alligned and parallel. Adjust as needed with gloved hands. If a clamp has been firmly tightened and there is a tilt, it can be loosened slightly with the set screw so that it may hang with gravity.

Enjoy your new Pierce Chandelier!

