


TOAM Pendant

Installation Instructions

coilandrft.com
studio@coilandrft.com
@coilandrft

COIL +
DRIFT

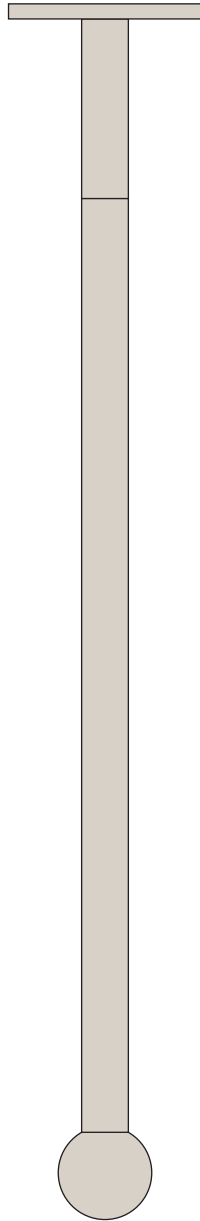

TOAM Pendant

Installation Instructions

coilanddrift.com
studio@coilanddrift.com
@coilanddrift

COIL +
DRIFT

BEFORE YOU BEGIN:

- + Always wear white cloth or latex gloves when handling the metal.
- + The pendant canopy is 4" with horizontally aligned screws distanced 2.75" apart. A universal backplate may be used if necessary to fit available junction box.

CAUTION: ELECTRIC SHOCK RISK:

- + Coil + Drift recommends this product be installed by a qualified electrician only.
- + Disconnect power at junction box and turn off electrical power at breaker before beginning.

TOOLS REQUIRED:

- + Power drill + Drill bits + Allen key set

Having an issue? Call us at 917.664.4483

INSTALLING YOUR TOAM PENDANT:

1. Wire individual leads to line power in junction box.
2. Screw backplate to junction box.
3. Make sure junction box is inset into ceiling so that it is not visible once fully installed. The plate should lay flush against the ceiling with the stem pointing straight down.

Enjoy your new Toam Pendant!

