


DIVAN BED ASSEMBLY GUIDE

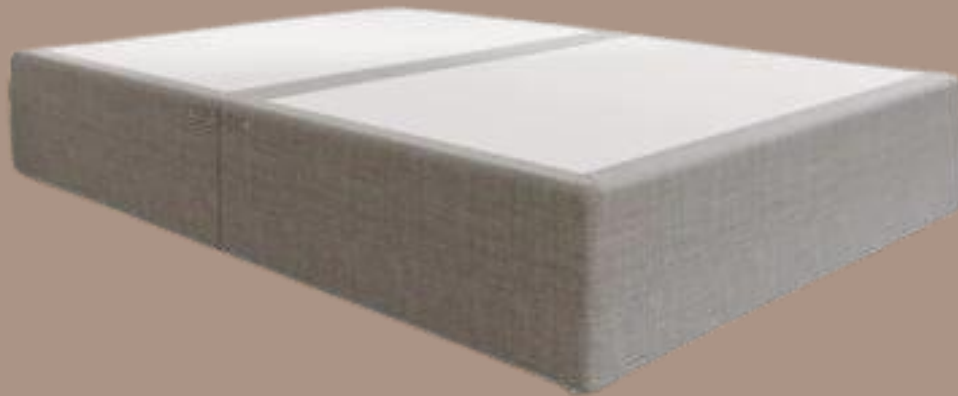

IMPORTANT INFORMATION

Recommended two-person assembly: The weight of the divan base units requires assistance for safe handling.

Keep children away: Due to heavy components and small parts (choking hazard), keep children away from the assembly area.




Inspect all parts: Before assembly, carefully check all parts. If any parts are missing, broken, damaged, or worn, discontinue use and contact customer service for replacements.

Lift safely: Use proper lifting techniques to avoid injury. Remember to bend your knees and keep your back straight when lifting heavy components.

Before starting assembly, please ensure you have the correct fittings and carefully read through the instructions.

FITTINGS FOR DIVAN BED BASE

Supplied Fittings

| Glider Feet | U-Clips | Headboard Washer |
|---|---|---|
|  |  |  |
| '90cm' x 4 '120-180cm' x 8 | '120-180cm' x 2 | |



DIVAN BED BASE WITH U-CLIPS ASSEMBLY GUIDE

1

PREPARE YOUR TOOLS: A
HAMMER (FOR GENTLE
TAPPING).

2

FIND A SPACIOUS AREA,
IDEALLY AROUND 2.5M X
2.5M, NEAR WHERE YOU
PLAN TO SET UP YOUR
BED.


3

Verify that all components are
present by referring to the included
parts list.

4

READ THROUGH THE ENTIRE
SET OF INSTRUCTIONS TO
ENSURE A SMOOTH
ASSEMBLY PROCESS. KEEP
THIS GUIDE FOR FUTURE
REFERENCE.

HAVE ADDITIONAL HELP

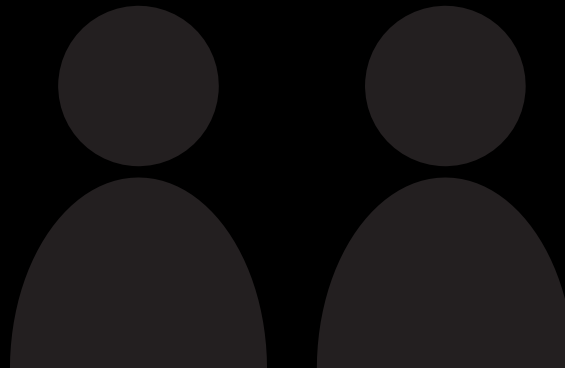

PREPARE A HAMMER
AND SCISSOR



Step 1

Turn the base upside down and insert the feet into the holes at each corner.
Gently knock them into the holes until they click into place

Step 2

After fitting the feet, you may have to make a small insertion into the black fabric to fit the U-Clips.
Fit the U-CLIPS so that they clamp around the underside timber edges to hold the two parts firmly together.

Step 3

To release drawers carefully cut restraining straps and trim the excess.

IMPORTANT: Pulling the fabric may result in drawer damage. Please cut using scissors.

Step 4

Carefully lower the divan down so that it is right way up ready for the mattress to be placed on top.

