

OTTOMAN DIVAN BED BASE ASSEMBLY AND SAFETY INSTRUCTIONS



IMPORTANT INFORMATION

Recommended two-person assembly: The weight of the divan base units requires assistance for safe handling.

Keep children away: Due to heavy components and small parts (choking hazard), keep children away from the assembly area.

Inspect all parts: Before assembly, carefully check all parts. If any parts are missing, broken, damaged, or worn, discontinue use and contact customer service for replacements.

Safety Advice

- Remove all polythene and protective packaging and dispose of carefully to avoid injury to children.
- Children should be made aware that this not a toy and be supervised at all times when in the same room.
- Take care when assembling the base - the Ottaman has a powerful sprung mechanism and, after assembly, should only be opened when the mattress is in place.

DIVAN BASE WITH U-CLIPS ASSEMBLY GUIDE

1

PREPARE YOUR TOOLS: A
HAMMER (FOR GENTLE
TAPPING).

2

FIND A SPACIOUS AREA,
IDEALLY AROUND 2.5M X
2.5M, NEAR WHERE YOU
PLAN TO SET UP YOUR
BED.


3

Verify that all components are
present by referring to the included
parts list.


4

READ THROUGH THE ENTIRE
SET OF INSTRUCTIONS TO
ENSURE A SMOOTH
ASSEMBLY PROCESS. KEEP
THIS GUIDE FOR FUTURE
REFERENCE.

HAVE ADDITIONAL HELP

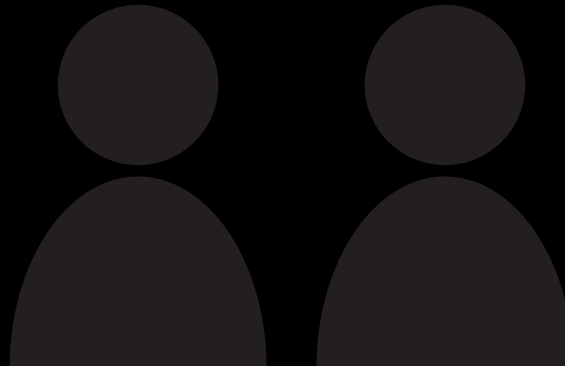

PREPARE A
SCREWDRIVER

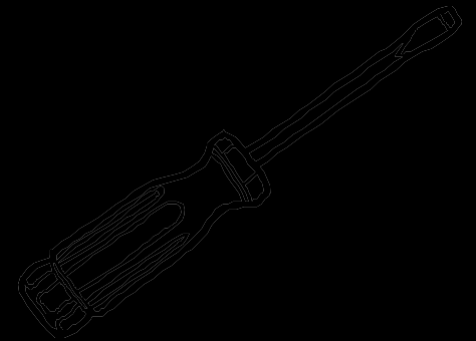

Step 1

Locate and remove the inner package fixings which includes glides (feet) and screws.

Step 2

Position each base on its side, then attach the glides to each of the corner locator holes and, preferably using a mallet, tap home gently into the socket (you may need to clear the hole with a small screwdriver to allow for ease of fitting).

Step 3



Gently place both bed bases flat on their castors/glides near their final location (**Fig 1**). Position them evenly beside each other, ensuring that the rounded corners face outward.

Step 4

Pierce the lid locator bolt section on each half (as indicated by the sticker) using a small screwdriver. Sit next to the base unit and rest the lid on your shoulder. Then, attach the fixing bolt to each half and screw them together finger-tight only (**Fig 2**). Be careful not to over-tighten, as this may strip the thread or damage the bolt.


Step 5

Attach the 'u' clips to both edges securing the two bases together (**Fig 3**).

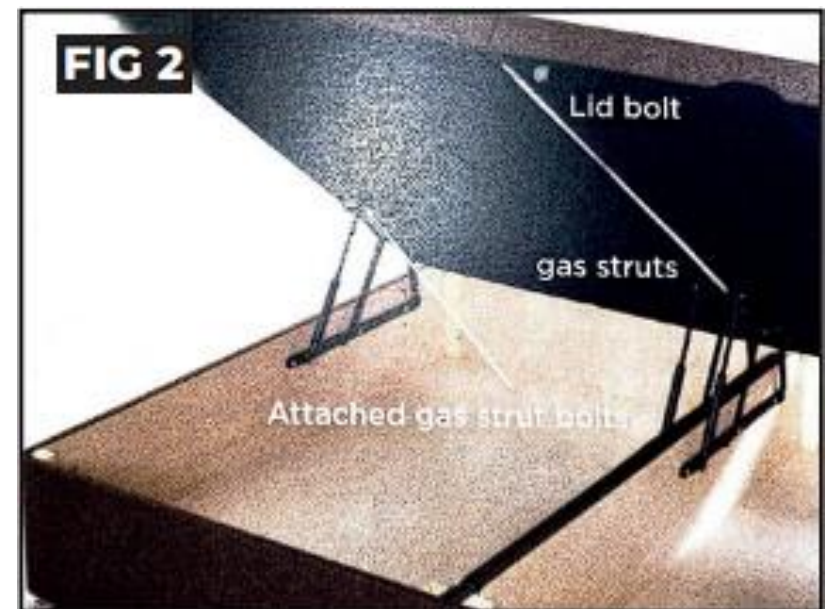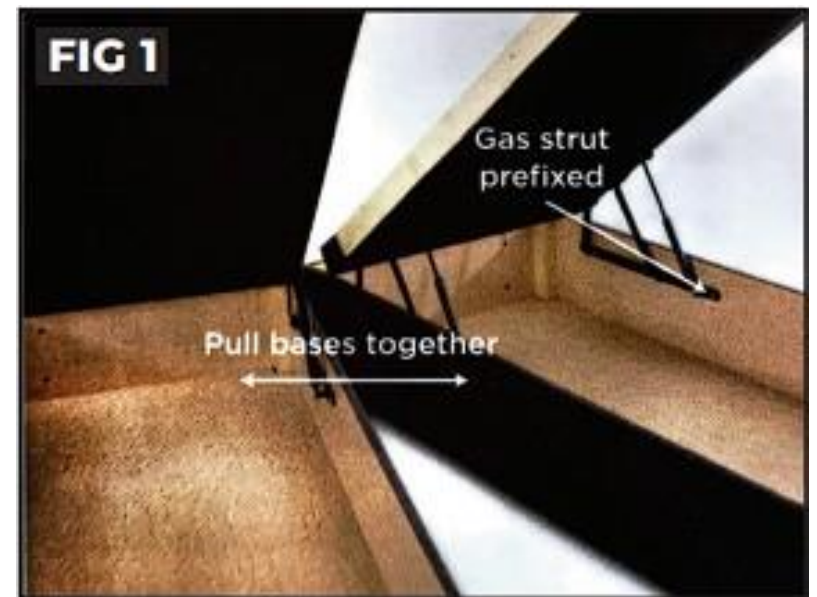

Step 6

Once the combined lid units are fully open, use the provided bolts to attach the two lid risers together and the gas struts (**Fig 3**). Please ensure that nothing comes into direct contact with the gas-powered struts that could adversely affect the mechanism.

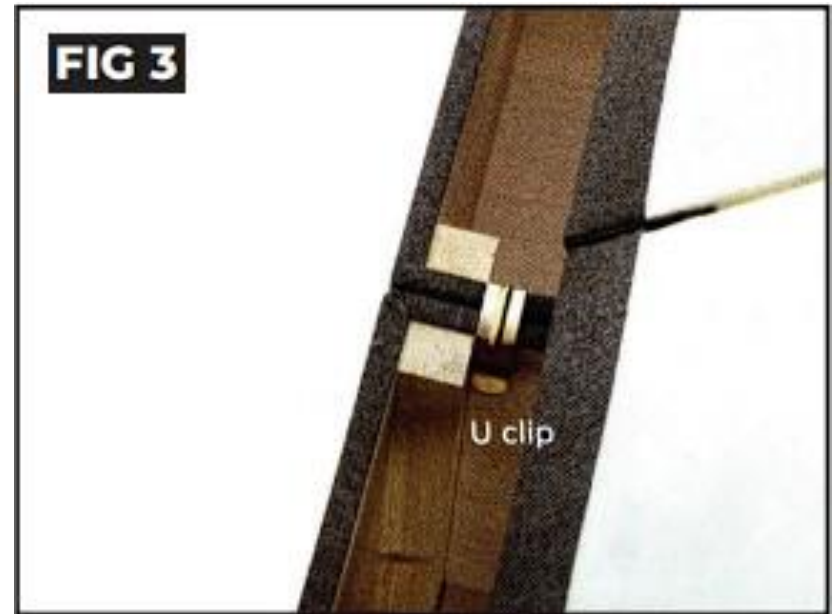

Step 7

Now, make sure the base lid is completely closed before gently placing your new mattress on top. This will ensure that the lid remains securely held down by the weight of the mattress (**Fig 4**).

