
### MELODY 48"

#### **BATHROOM VANITY SET**

SKU: MELODY48QZ-WT MELODY48QZ-NB

Colors/Finishes: White, Navy Blue

Nominal Dimension:48W\*22D\*35H inches

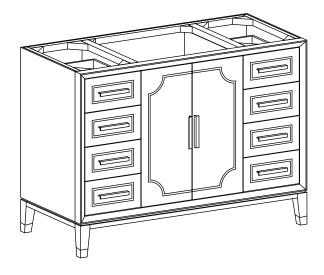

#### **VANITY FEATURES:**

1.Material: Solid popular wood frame, high-quality veneer plywood.

2.Doors: 2 soft-close doors, Austria BLUM Soft-close hinges system.

3.Drawers: 8 soft-close drawers, Adams concealed soft-close sliders.

4. Hardware: Durable and antimicrobial copper handle

5.Installation Type: Freestanding

6.Built-in Adjusters: Adjustable height levelers

7. Vanity Top: High-quality quartz/marble with single undermount sink


8.Assemble required: No9.Vanity top Included: Yes

10.Mirror Included: Optional

11. Medicine Cabinet Included: Optional

#### **Contents**

48"Vanity......PAGE2
48"Vanity Top.....PAGE3
Vanity Installation.....PAGE4

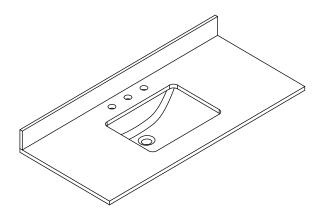

#### **VANITY TOP FEATURES:**

1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz,or natural Italian Carrera white marble.

2.Top Color: Carrera white

3.Sink: 1\*20"undermount rectangle sink

4. Faucet Hole s: Top pre-drilled for 8"widespread faucet holes

5.Sink Certified: CUPC certified

6.Backsplash: 4"backsplash included

7. Faucet Included: No

8.Nominal Dimension(W\*D\*H): 48W\*22D\*0.79H inches

# MELODY 48"


**BATHROOM VANITY SET** 

SKU: MELODY48QZ-WT MELODY48QZ-NB

#### **COMPONENTS:**

Vanity	MELODY48QZ-WT	MELODY48QZ-NB
Vanity Top	QZ48CW20HD	QZ48CW20HD
Wall Mirror	MD2832MR-WT	MD2832MR-NB
Medicine Cabinet	W4MCL3630	W4MCL3630


#### **PRODUCT DIAGRAMS:**

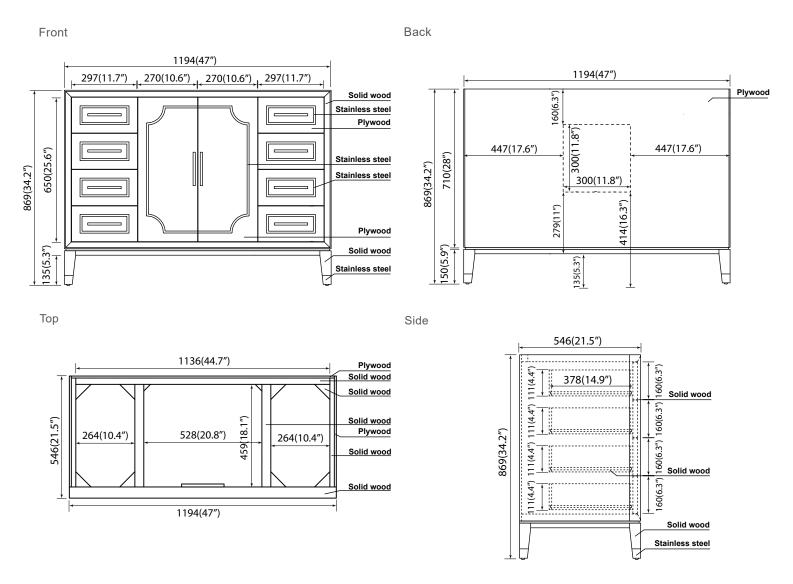

## MELODY 48"

#### **VANITY TOP**

### With rectangular undermount sink

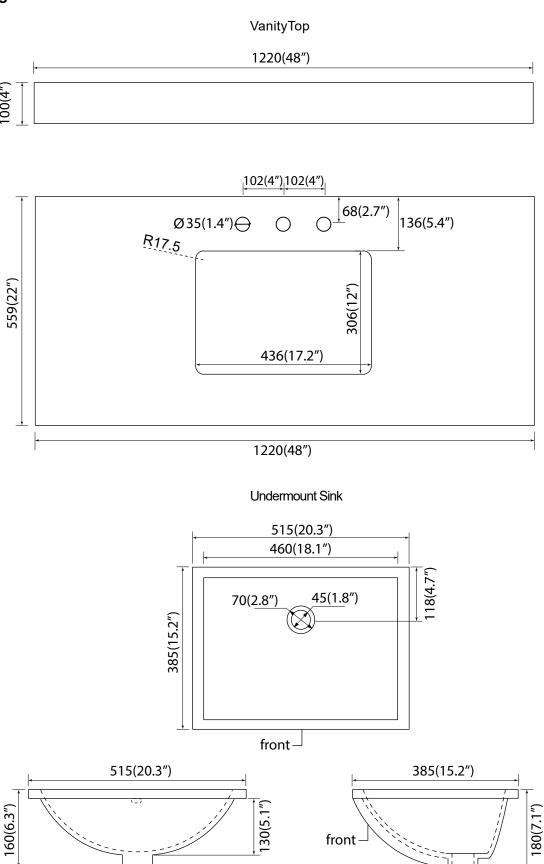

70(2.8")

## Vanity Installation

#### **SUGGESTED TOOLS AND MATERIALS:**












Level

#### INSTALLATION INSTRUCTLONS

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. We accept no liability for any damage to the floor, plumbing, vanity cabinet, sink, counter top, or personal injury during installation.

1

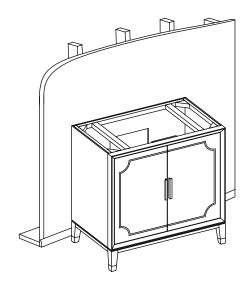

Remove vanity from box and examine vanity for any defects or damage. Carefully place vanity against wall.


2






Always use a two man crew, a single person crew is much more likely to break or chip the stone top.

3

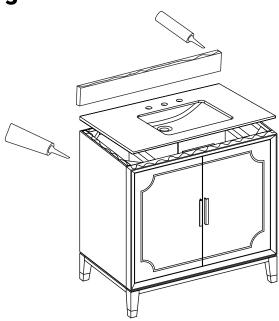

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

4

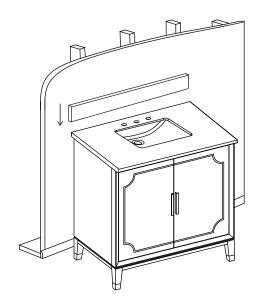

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.