



TEC
Vanlife


Tec Vanlife 2ND GEN Roof Rack Installation Guide




1. Open the light weight box and take out the Roof Rack Frames, lay them on the floor accordingly

Labels here!


front-right

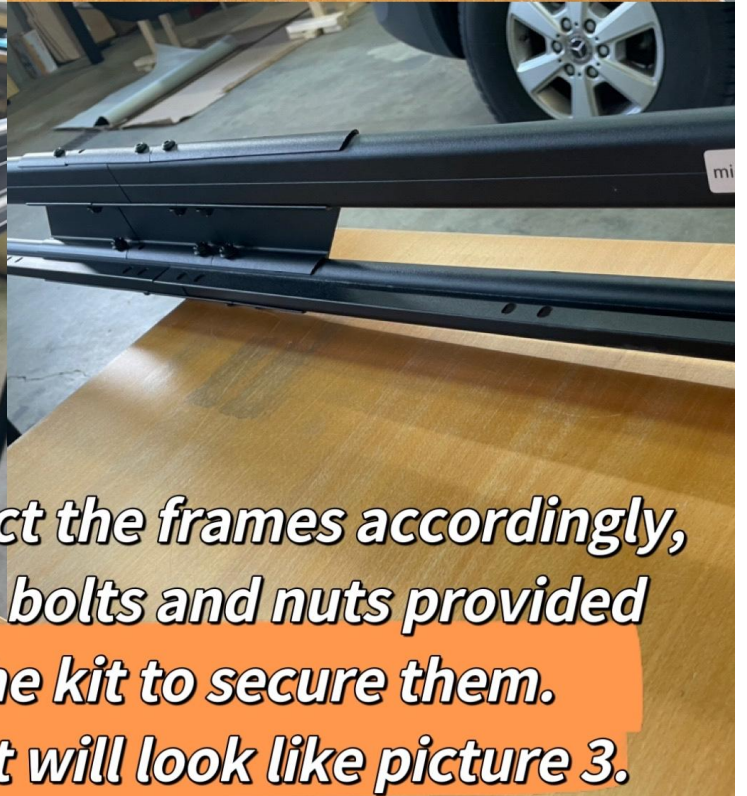


2. Connect the frames accordingly, use the bolts and nuts provided in the kit to secure them. Then it will look like picture 3.

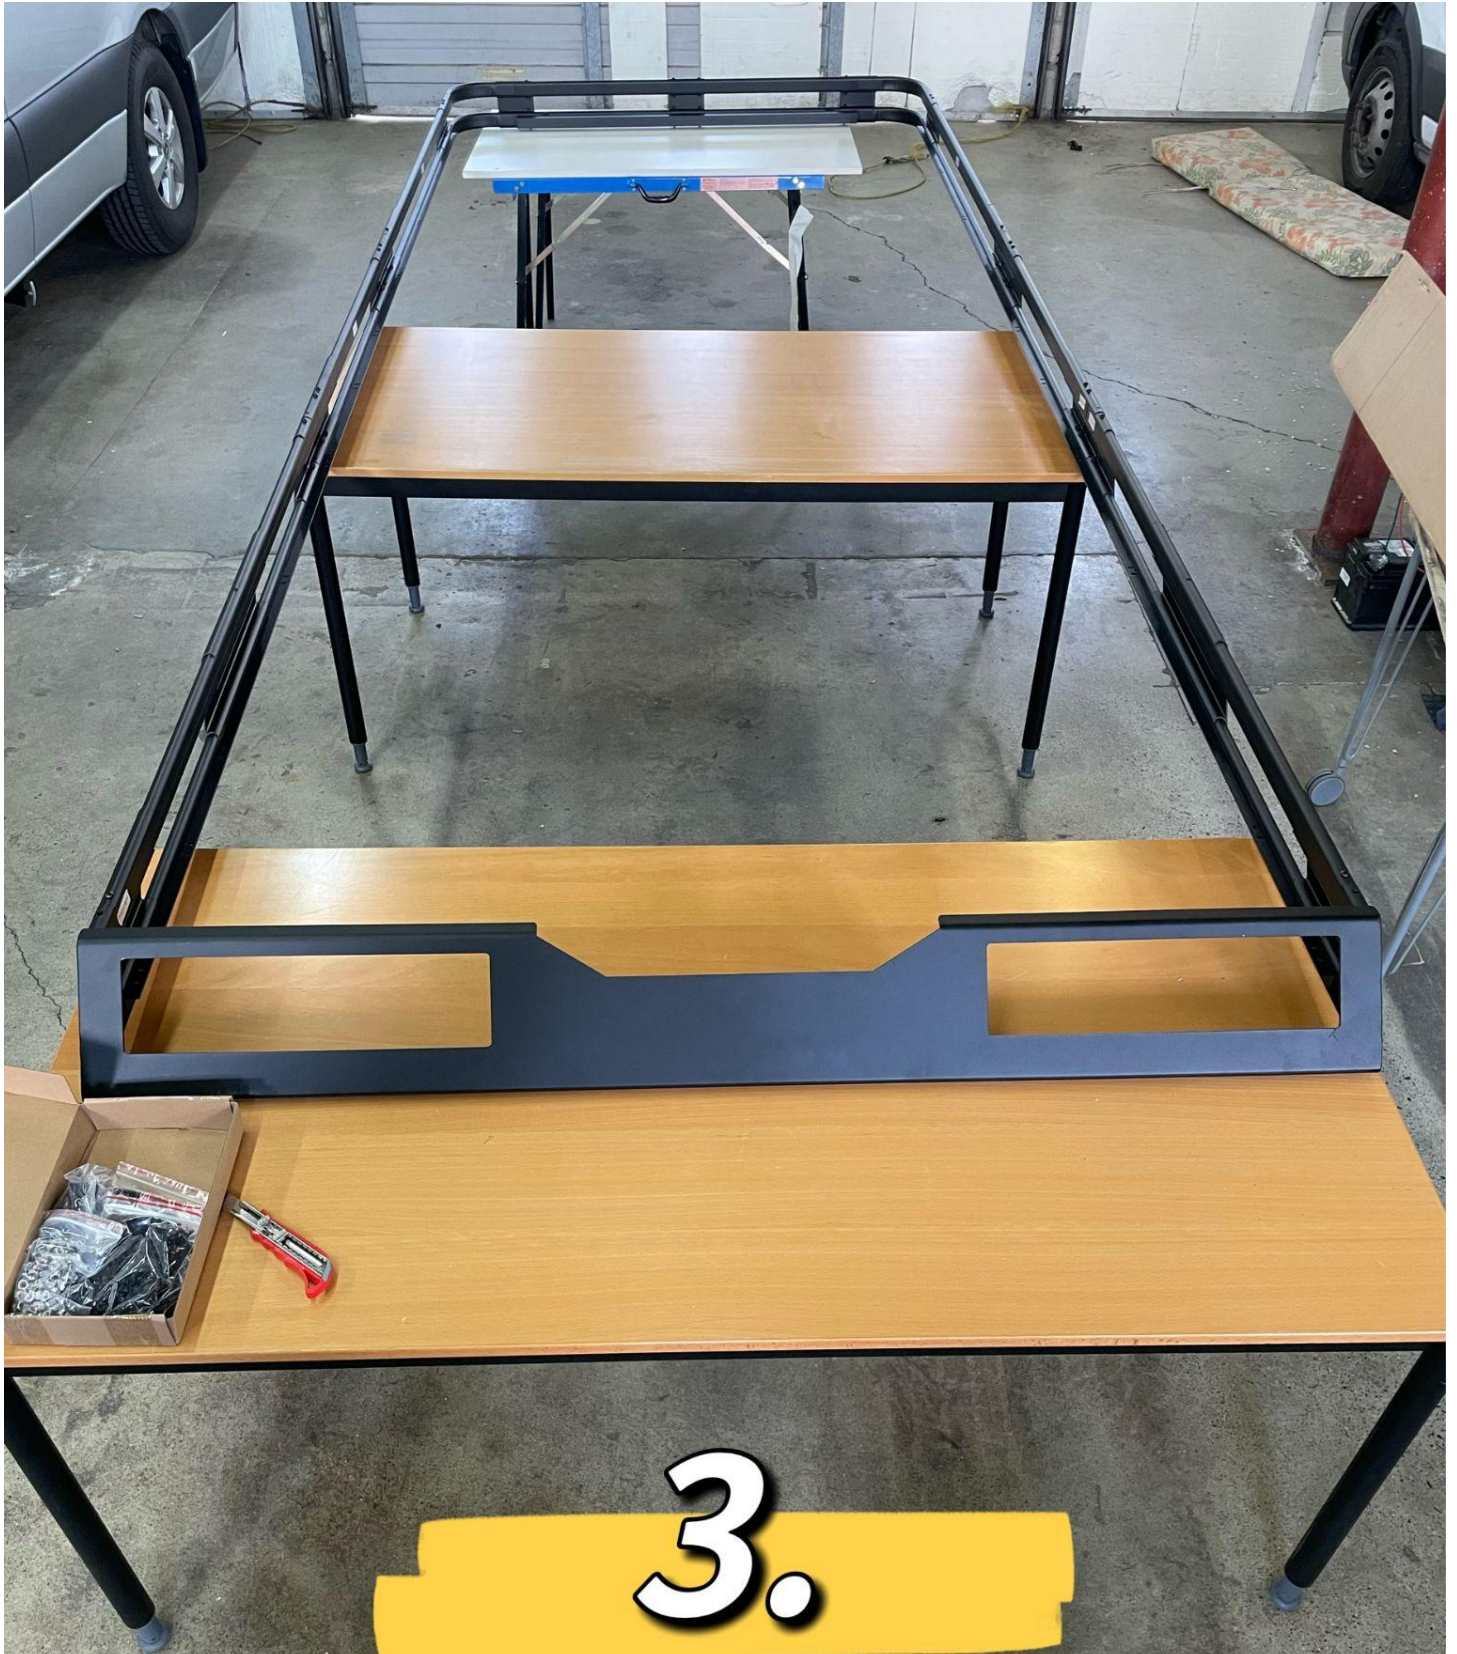

3.

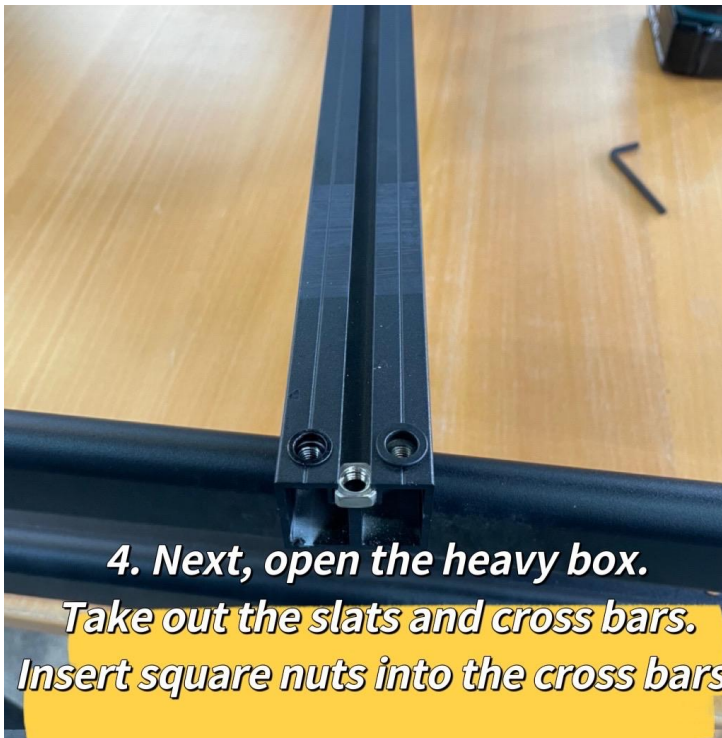

*4. Next, open the heavy box.
Take out the slats and cross bars.
Insert square nuts into the cross bars.*

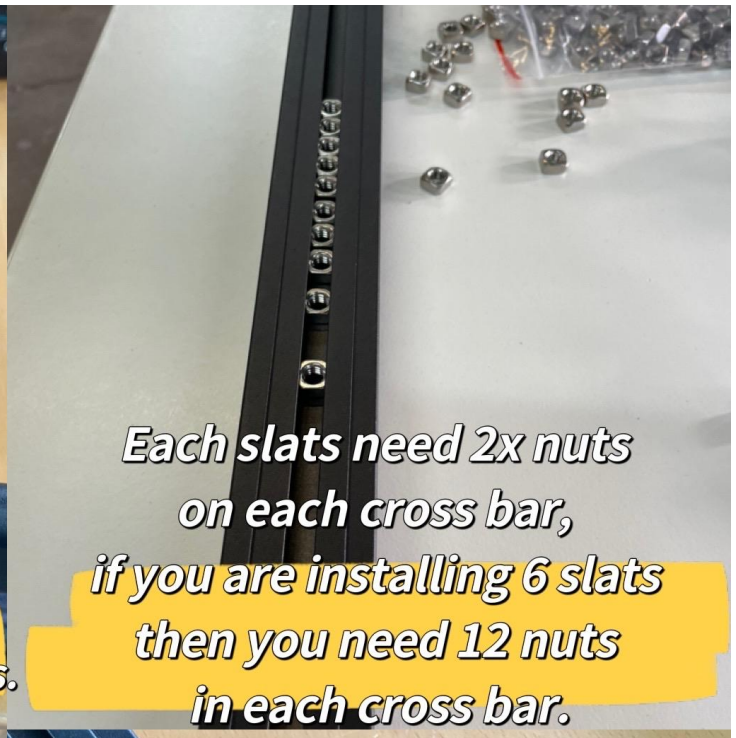

*Each slats need 2x nuts
on each cross bar,
if you are installing 6 slats
then you need 12 nuts
in each cross bar.*



*Once nuts are in,
you can secure the cross bar to the frame.*



Once the cross bars are secured to the frame, you can put your slats on.

5. Install the roof rack brackets on the bottom of the cross bars with the stainless steel M6 bolts and washers provided in the package. Thread lock adhesive is recommended.



*You need to install:
5 brackets on each side for 144" rack
7 brackets on each side for 170" rack*

Note:

- There is no need to install roof rack brackets on each cross bar. Determine the best crossbars to install the roof rack brackets based on where your loads will be.
- The **smaller hole** on the roof rack brackets should face up. And the bigger hole at the bottom is for the track bolt.



Ready to be installed


Next, slide the track bolts in the roof rails.

You need:

- **5x on each side for 144" rack.**
- **7x on each side for 170" rack**



Then finish the rack installation by tightening the self locking nuts for the track bolts.

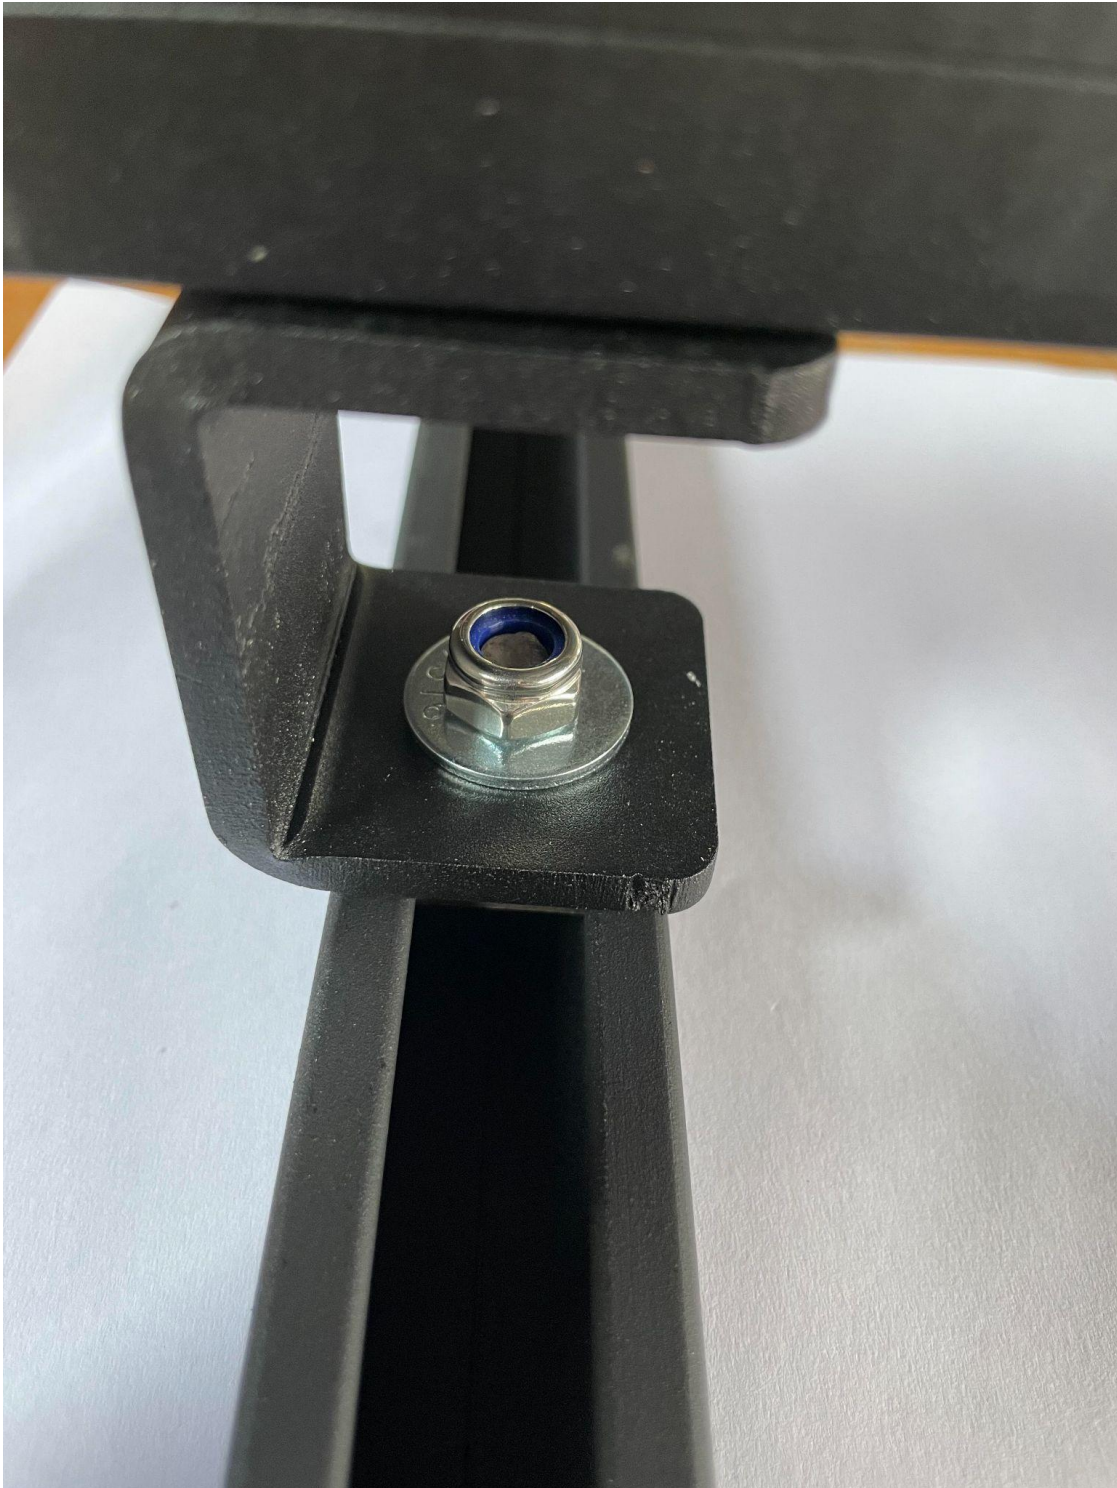

If you need further assistance, please contact info@tecvan.ca.

Roof Rack Brackets Hardware