

# RENOVATION

## Oil Plus 2C

Rubio® Monocoat Oil Plus 2C can be used to renew and renovate a Rubio® Monocoat finished surface where color restoration is necessary:

1. **CLEAN** with Rubio® Monocoat Surface Care Spray
2. **ABRADE** the surface with a Maroon pad
3. **REMOVE** all dust from the surface
4. **APPLY RMC OIL PLUS 2C** the same way you would an initial coat.
5. **REMOVE ALL EXCESS OIL WITHIN 10-15 MINUTES**



Rubio®  
**MONOCOAT**  
YOUR PARTNER IN WOOD PROTECTION



Rubio®  
**MONOCOAT**  
YOUR PARTNER IN WOOD PROTECTION

0%  
VOC

# SHEEN ENHANCEMENT

## Sheen Enhancement For Rubio® Monocoat Surfaces


Application of Universal Maintenance Oil increases the sheen of Rubio® Monocoat's naturally matte finish, providing additional design possibilities.

Apply Universal Maintenance Oil the same way you apply Oil Plus 2C.

**NOTE:** Once finished with Rubio® Monocoat Universal Maintenance Oil, routine refreshing/maintenance gets performed with Rubio® Monocoat Universal Maintenance Oil.



## Universal Maintenance Oil Comes in 5 Colors:

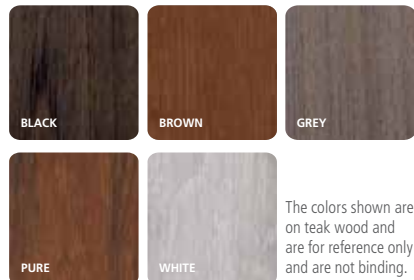

The colors shown are on teak wood and are for reference only and are not binding.



## MUYLLE-FACON

A PASSION FOR WOOD TREATMENT SINCE 1962

Muylle Facon was founded in 1906 as a manufacturer of high-quality putty and is now an important producer of waterproof products, coatings and sealers, impermeable and impervious to water, and other specialties for buildings.

It's first range of wood treatment products was launched in 1962:

**Teintécire:** Waterbased colorstain with warm colors, which provides a nice gloss and antique look.

**Ciraneuf:** Liquid or solid beeswax, turpentine based.

**Boizaneuf:** Paint remover.

The close collaboration between the laboratory, the sales-team and the applicators has resulted in the development of the unique Rubio® Monocoat range.

\* Based on test method CMA/3/E

Rubio is a Registered Trademark of Muylle-Facon.

© 2021, Rubio® Monocoat USA, LLC  
844 ZERO VOC (937-6862) | info@rubiomonocoatusa.com  
[www.rubiomonocoatusa.com](http://www.rubiomonocoatusa.com)



# APPLICATION INSTRUCTIONS

## APPLICATION CLEANING MAINTENANCE RENOVATION

# SANDING & DUST REMOVAL

## Sanding

Sanding should be done according to the NWFA guidelines. Proper sanding is critical for a professional end result. The surface needs to be evenly sanded, especially when applying colors. We recommend a final 120 grit abrasive.

## Dust Removal

Dust has to be removed very thoroughly. The technology of the Rubio® Monocoat Oil Plus 2C enables oil to make a molecular

bond with the wood fibers within 3 minutes by means of fusing together. If dust is present, the oil will bond with the dust instead of the wood fibers, creating a microscopic paste on the working surface.

After vacuuming the surface, lightly dampen a cloth with Rubio® Monocoat Cleaner and wipe the floor clean. The cleaner will electrostatically remove the dust. Make sure that the floor is dry before application of the Oil Plus 2C. Rubio® Monocoat Cleaner will not pop the grain.

**NOTE:** There is a high probability of failure if the Rubio® Monocoat Cleaner is not used on exotic species.

# APPLICATION



## 1. Apply Oil Plus 2C to the wood.

A. Mix the Part A (Oil Plus) and Part B (Accelerator) at a ratio of 3:1. Note: Once A and B are mixed, you have 5-6 hours to use the product



B. Apply the oil to the perimeter. Remove excess with terry towel.

C. Working in 50-100 ft.<sup>2</sup> sections, wipe the oil onto the wood and use a white or red pad to equally spread the oil. Keep spreading the oil until the pad no longer forms oil/color rings. Complete steps 2-3 before starting a new section.



## 2. Allow a reaction time of at least 3 minutes.

## 3. Remove "all excess" within 10-15 minutes.

**OIL PLUS 2C WILL NOT PRODUCE LAP LINES**

A. Use a new white pad to remove all excess oil off the 50-100 ft.<sup>2</sup> section. (A new white pad is needed to remove the excess for every 50-100 ft.<sup>2</sup> section.)



B. Thoroughly remove/buff off excess oil by placing a towel/rag under the white buffer pad. You can never rub off too much oil.



If needed, remove all excess oil from v-grooves/bevels and holes by hand.



## 4. Continue working in 50-100 ft.<sup>2</sup> sections, or whatever area you can finish within 10-15 minutes.

Oil which has not bonded needs to be buffed off completely within 15 minutes of the "start" of application. This means ALL of the excess. Color cannot be darkened by leaving excess oil on for a longer period of time. You can never remove too much oil; however you can remove too little.

## BUFFER PAD GUIDE

### Application



Application	✓	✓	
Initial Wipe		✓	
Final Wipe			✓

## WARNING!

DO NOT use any other cleaners  
DO NOT tape on Rubio® Monocoat  
DO NOT allow moisture on uncured Rubio® Monocoat treated surfaces (5 days to cure)

LOOKING FOR DETAILED APPLICATION INSTRUCTIONS?



# CLEANING

## Soap & Surface Care Spray

**CLEANING THE FINISH:** Once curing has been completed Rubio® Monocoat can be cleaned as follows:

1. **SWEEP, DUST, or DRY MOP**
2. **DAMP MOP** the finish with water or **Surface Care Spray**
3. **DO NOT USE ANY OTHER CLEANERS** as most of these will damage the finish



*To make Surface Care Spray:  
Mix 1 part Rubio® Soap to 100 parts water.*

# MAINTENANCE

## Renew

Rubio® Monocoat Renew is a ready-to-use product that refreshes, restores and protects surfaces treated with Rubio® Monocoat Oil Plus 2C. Renew should be used when the surface feels too dry or rough, or when the finish has worn down due to heavy use. NOTE: If color restoration is necessary, perform a Renovation.

## RENEWING THE FINISH:

1. **CLEAN** the surface with **Rubio® Monocoat Soap** or **Rubio® Monocoat Surface Care Spray**.
2. **APPLY Rubio® Monocoat Renew** on the surface area.
3. **REMOVE ALL EXCESS OIL WITHIN 10-15 MINUTES.**
4. **WALKABLE AFTER 4-6 HOURS.**

