DUAL ROLLER BLIND FITTING INSTRUCTIONS

Your new dual roller blinds have been custom built for you from the highest quality materials please follow the installation instructions provided.

HARDWARE

Please note: Screws are not supplied for bracket fixings and are dependent on the surface to which you are fixing please see chart below for recommended guide:

FIXTURE GUIDE	RECOMENDED (Philips head)
Wood	20mm 8 gauge
Steel	6mm 6 gauge
Ceiling	Toggle Bolt
Plasterboard	Wall mates
Aluminium	6mm 8 gauge or tech screw
Brick	Green plug & 38mm 8 gauge self tapper

- 1. Depending on if your blind is face fit or recess fit place the brackets in position, and with a pencil mark the surface of the wall or window recess for drilling screw holes. The protrusion part of the bracket is used with the control side A (Chain) this has a protrusion as shown in the picture and the other end is used with the rotator side and pin.
- 2. When you are happy that you have correct positions for the brackets pre drill the screw holes and fix brackets securely. Please note how brackets should look when fixed to wall/recess



Bracket Protrusion A

- 3. Taking the blind install the chain drive end into the bracket with protrusion making sure that the enclosed top of the chain drive is facing upwards. Now placing the other end of the blind into the track of the other bracket by retracting the pin, to retract the pin turn the serrated clear plastic cog, once end of blind is in place turn the cog the opposite way to extend the pin until it clicks into position.
- 4. Secure the safety cleat supplied, firmly to the wall at the appropriate position to keep tension on the control chain and avoid a choking hazard. One safety device must be used for each chain. It is important to keep chains and cords safely away from children, your new blind will have a safety warning tag attached please read carefully and do not remove.
- 5. To operate your new blind use chain control to lift and lower, using a steady tension and movement and avoid jerking or tugging of the chain. It is important that the chain does not rub against the fabric during operation of blind as this will cause the fabric edge to fray.
- 6. Your blind is now installed and ready. We hope it brings you and your home many years of great functionality and beauty. We thank you for your purchase.



IMPORTANT INFORMATION

WARNING ALL WINDOW COVERINGS WITH CORD OR CHAIN

Installation instructions

To avoid strangulation hazard, all internal window coverings with cord/ chain controls must have a child safety device installed where the cord has the possibility of forming a loop of 220mm or longer and it is at a height of less than 1600mm above floor level

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that the loose cord cannot form a loop of 220mm or longer at a height of less than 1600mm from floor level.

When using a cleat (Style 1) to secure the cord it must be at least 1600mm from floor level because a child is capable of unwinding a cord from a cleat. Please wind cord in a figure 8 dimension as indicated on Style 1 diagram.

A cord guide (Style2) may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed. If the cord is installed lower than 1600mm from floor level it must be designed to prevent a child from being able to remove the cord.

Making Blinds and Curtains Safer for Children

Blinds and curtain cords can be made safer in the following way:


Attach a Safety Device (enclosed)

Attach a cleat (Style 1) to the wall or window frame 1600mm or higher from the floor away from children or pets and wrap around the cleat.

- 1) Affix cleat with screws as shown
- 2)Wind loose cord around safety cleat

Attach a cord guide (Style 2)

- 1)Affix cord guide with screws as shown
- 2)Secure cord in cord guide at all times

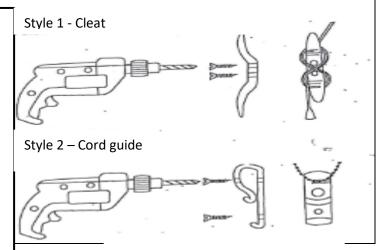

'WARNING: CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS'.