

DA0682

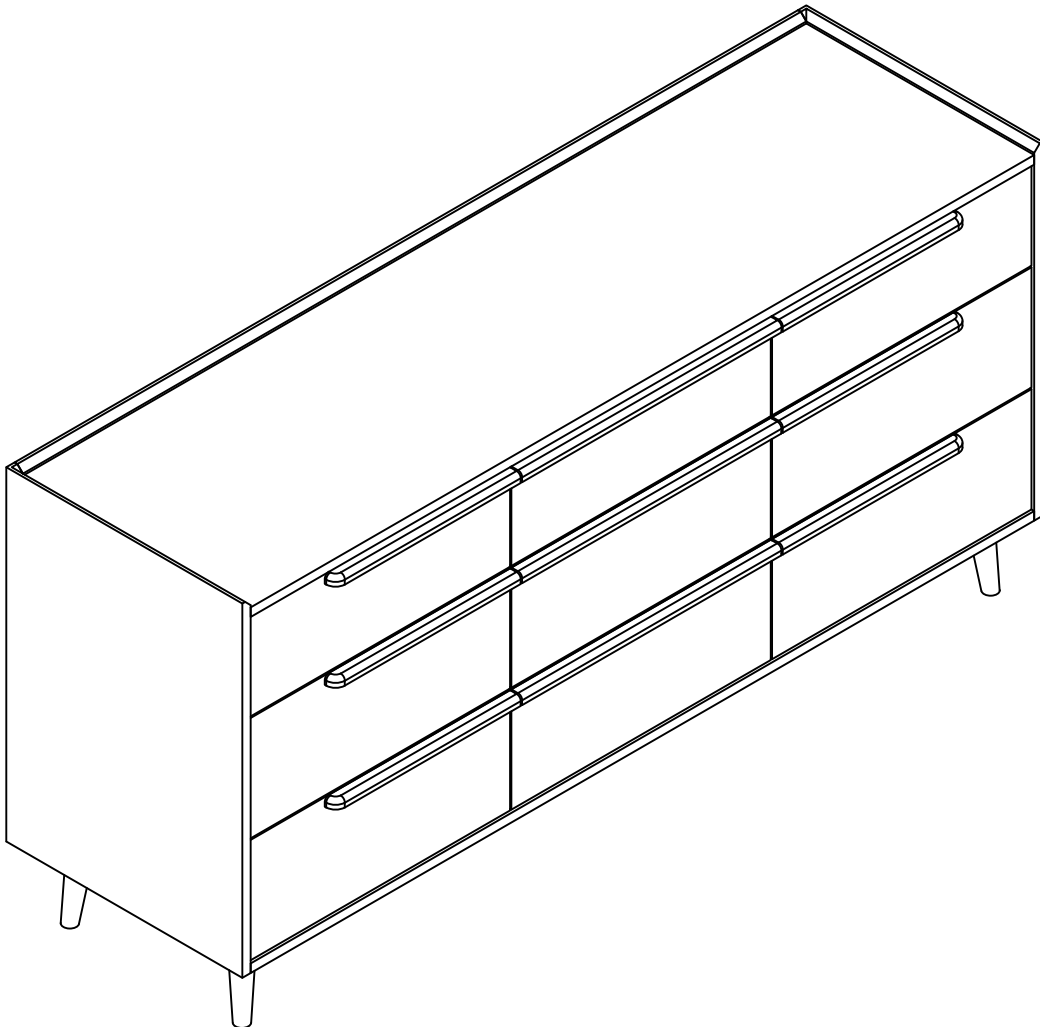


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

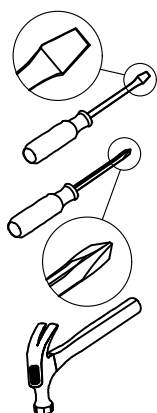


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

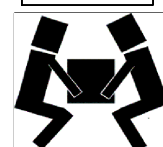


Board Identification

Not actual size


①x1

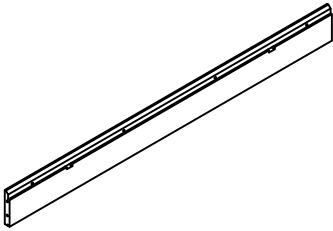


②x1

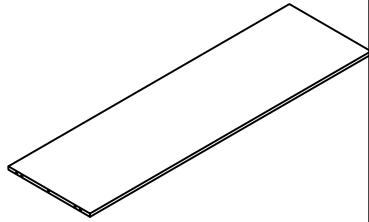


③x1

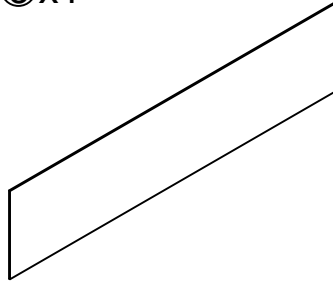


④x1

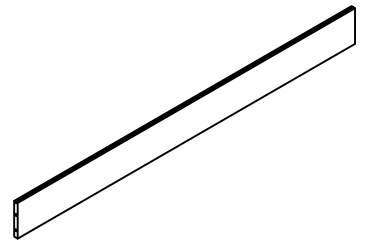


⑤x1

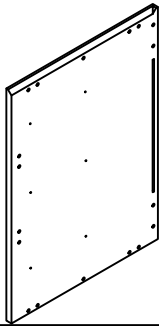


⑥x1

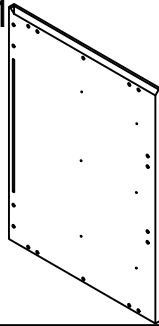

⑦x1

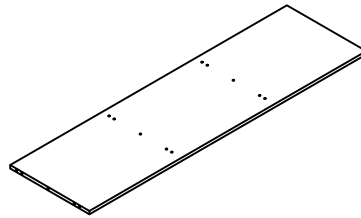

⑧x4




⑨x4




⑩ x2




⑪x2

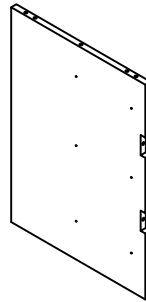


⑫x2

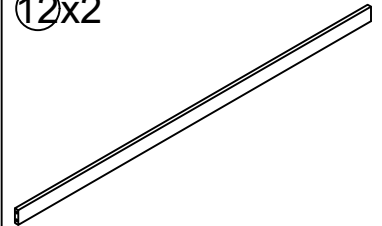


⑬x1

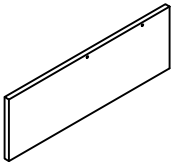


⑭x1

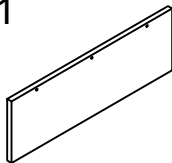


⑮x1

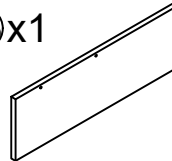


⑯x2

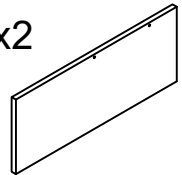


⑰x2

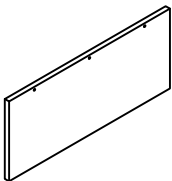


⑱x2

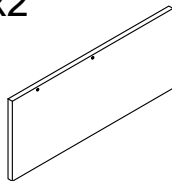

⑲x3










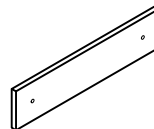


⑳x6

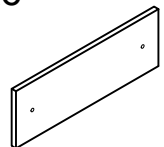


Board Identification


Not actual size

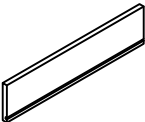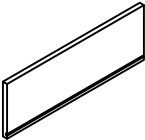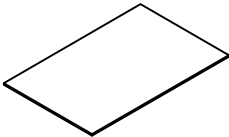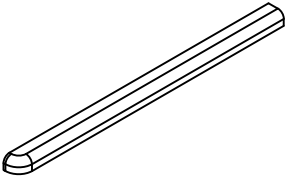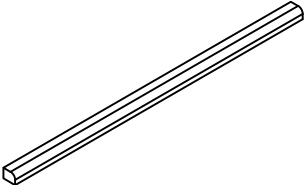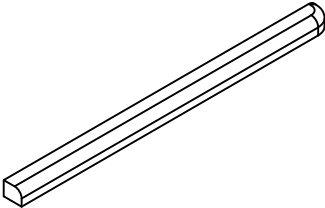21x3 	22x6 	23x3 	24x3 
25x6 	26x6 	27x9 	28x3 
29x3 	30x3 		


Part List

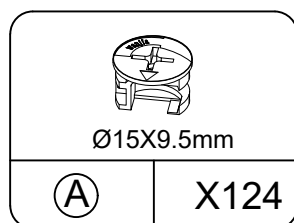


CAM LOCK
spare:3

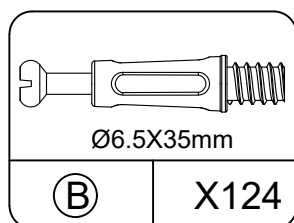


CAM BOLT
spare:3

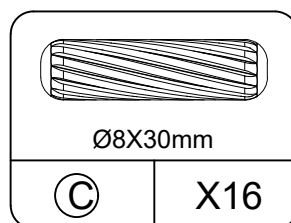


WOOD DOWEL
spare:2

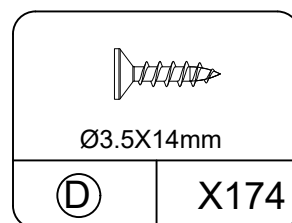


SCREW
spare:3

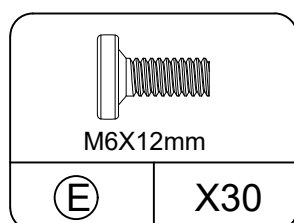


BOLT
spare:3

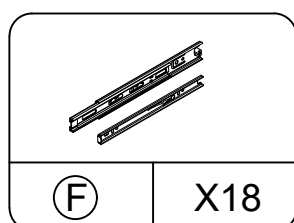


BOLT

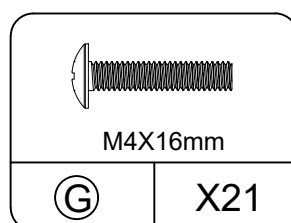


SCREW
spare:2

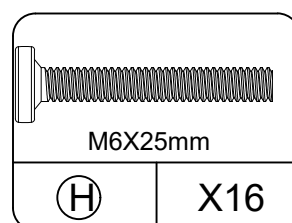


BOLT
spare:2

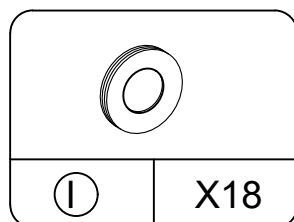


Gasket
spare:2

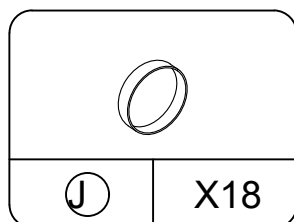


Mirror nail
spare:2

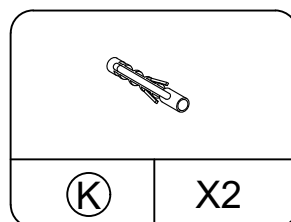


SCREW

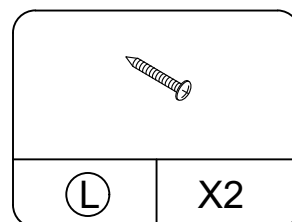


SCREW

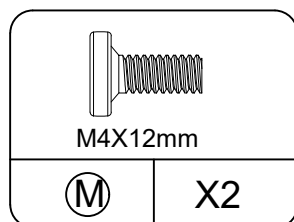


BOLT

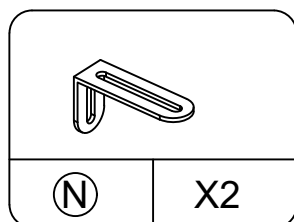

Anti-inversion

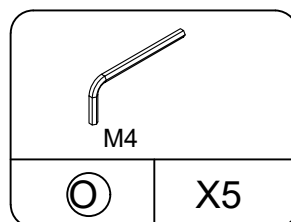

Allen wrench

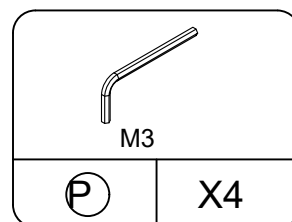


Allen wrench

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

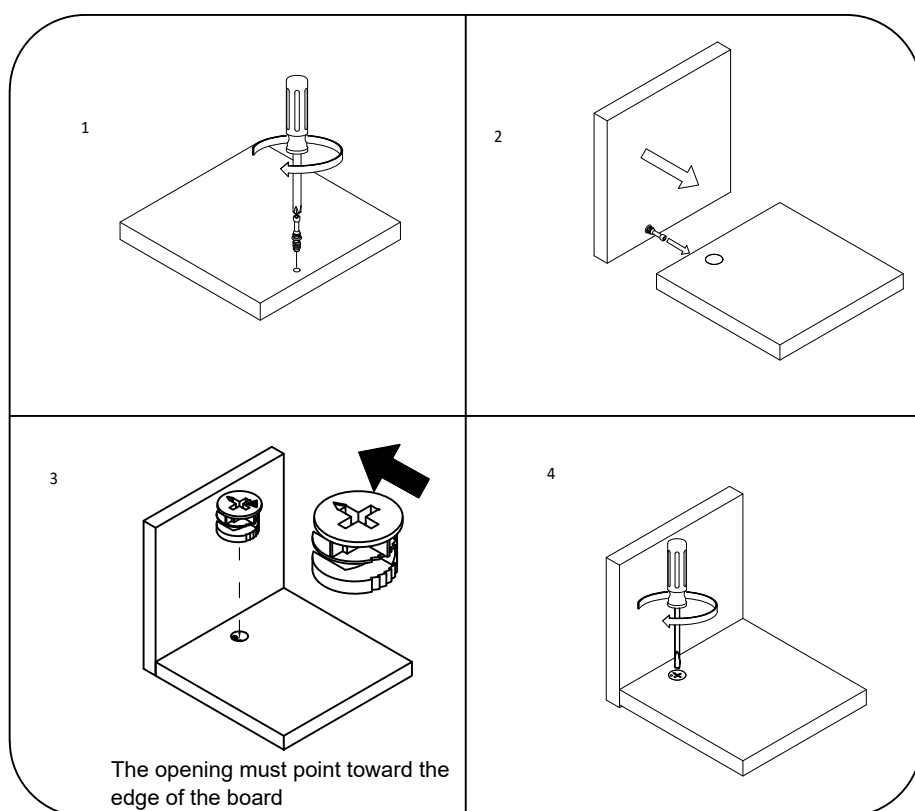

Board Identification

Not actual size

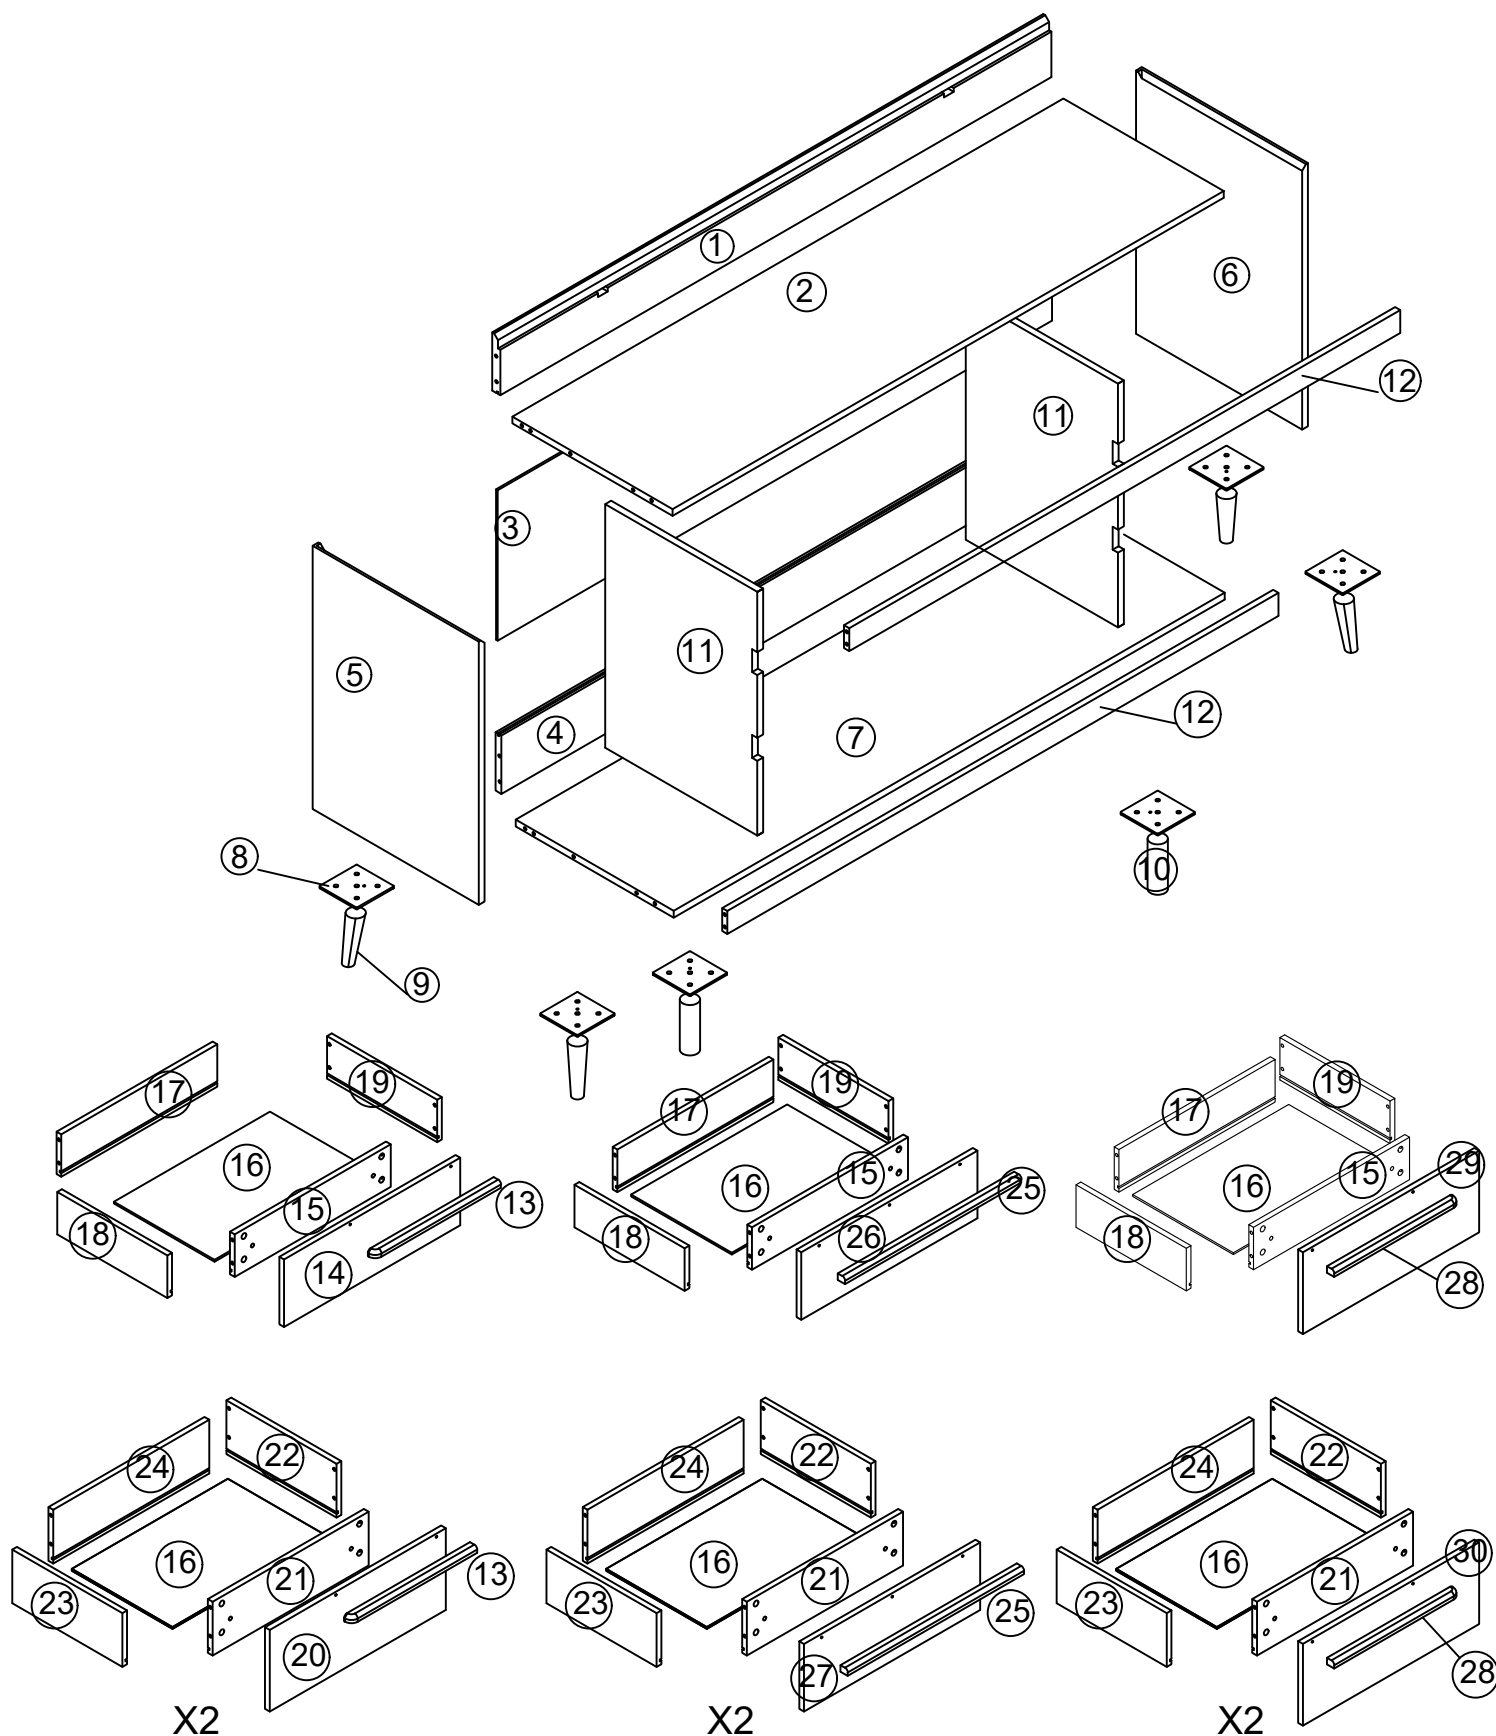


STEP1


WARNING

How To SEPARATE BALL BEARING SLIDE.


- 1) Pull toward arrow to open the slide until its stops and then flip it over.



- 2) Push plastic lever down and pull apart.

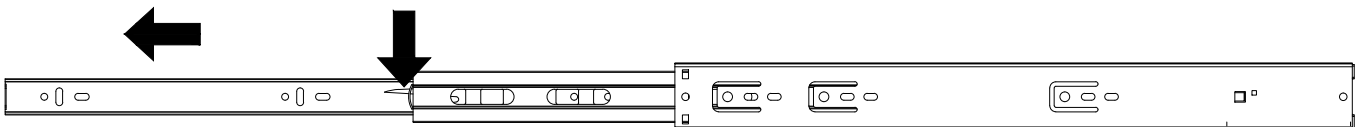




Cabinet member







Drawer member











STEP2

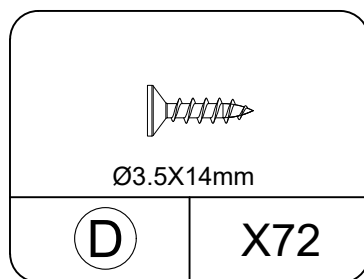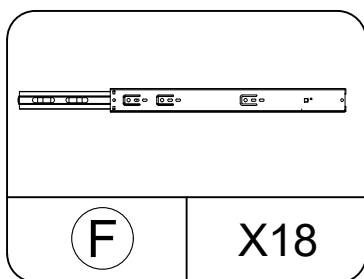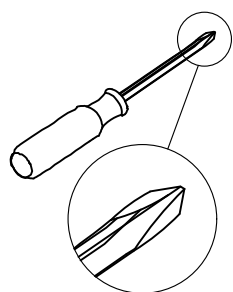

FLIP OVER 180 °




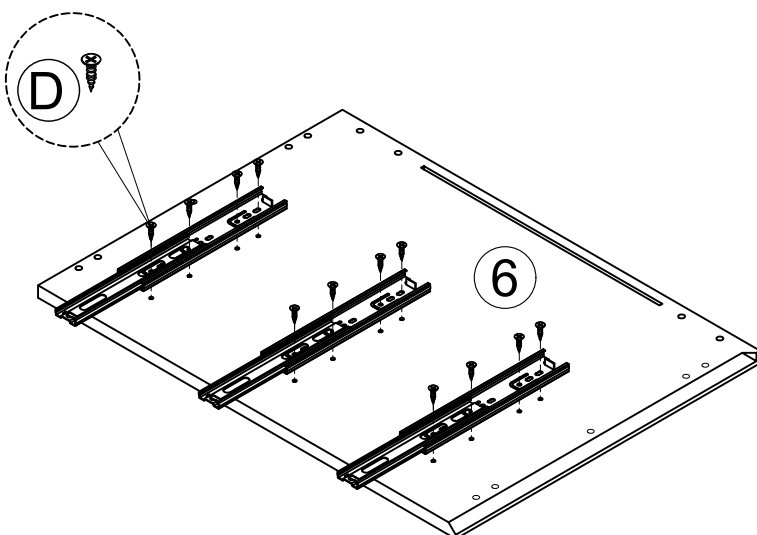
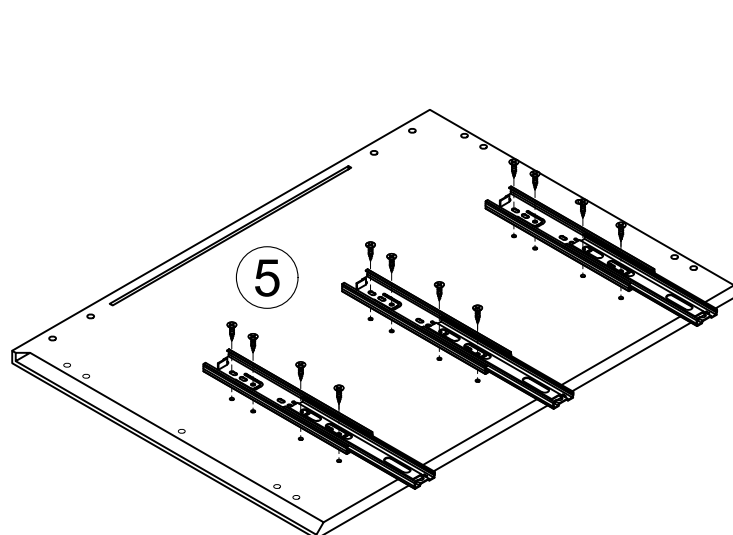
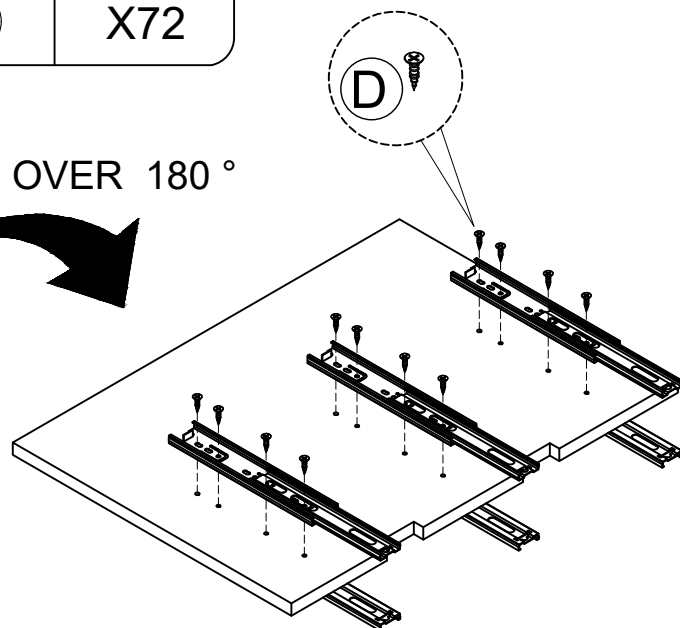
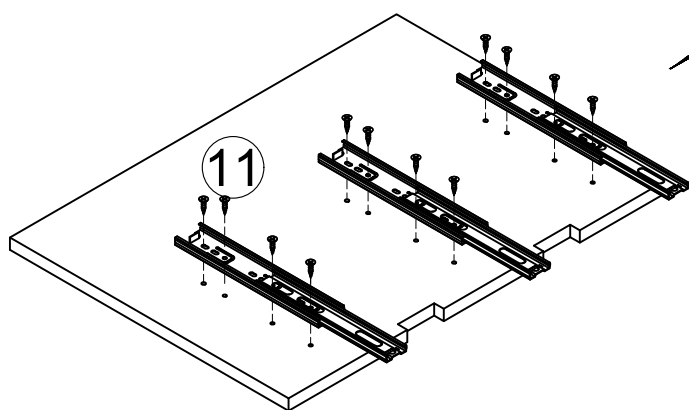


STEP3

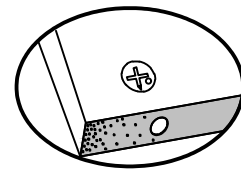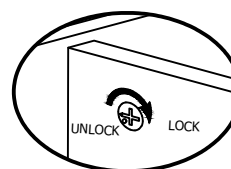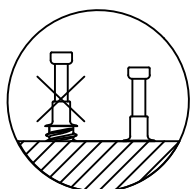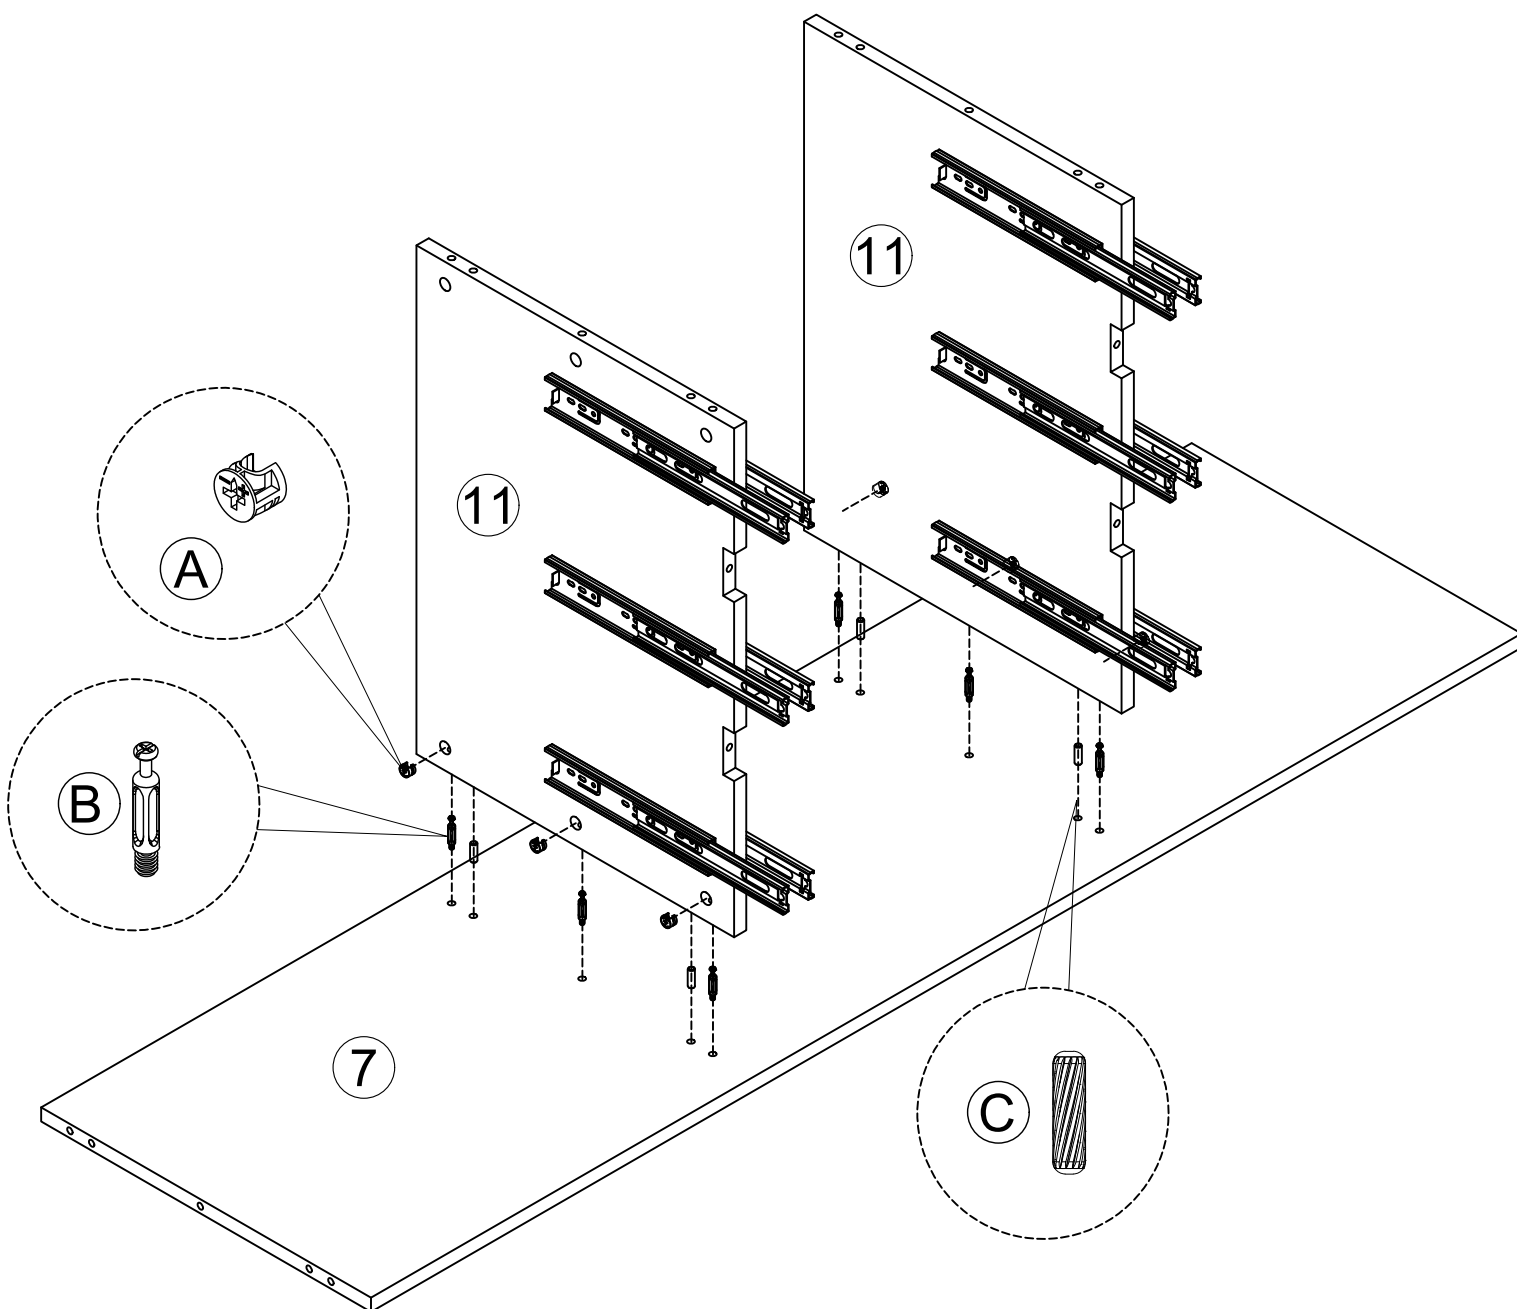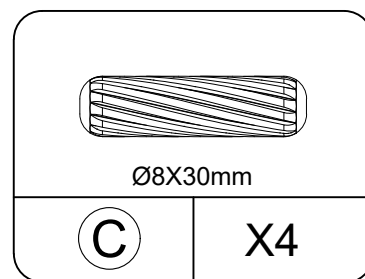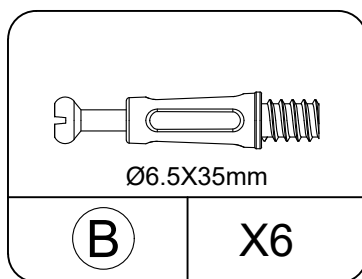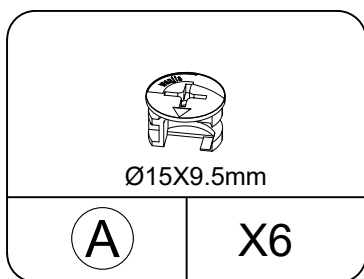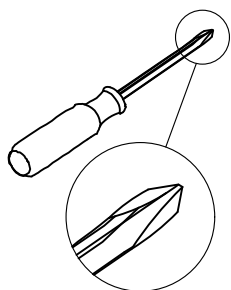













Proper orientation of CAM LOCK

STEP4

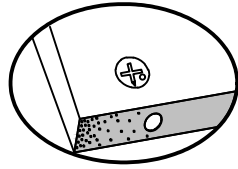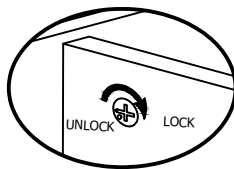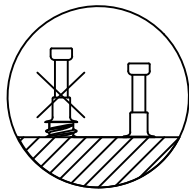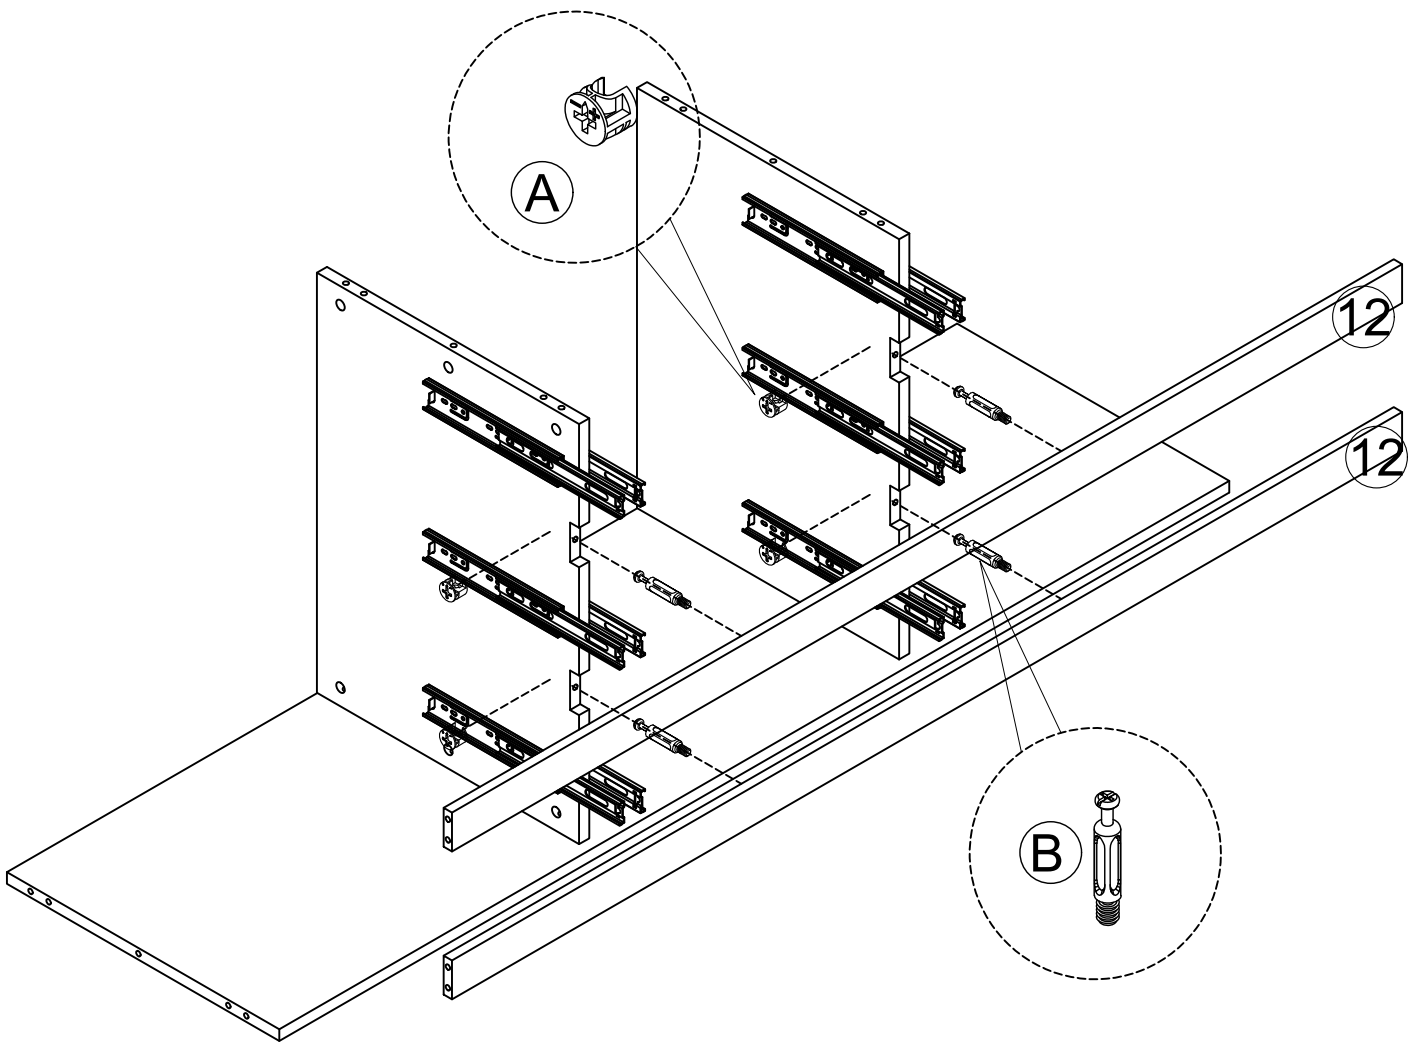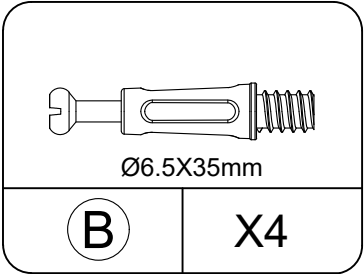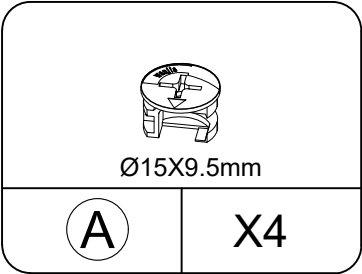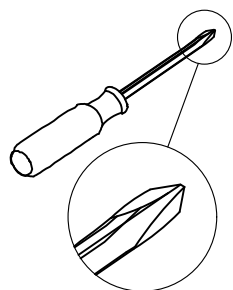








Proper orientation of CAM LOCK

STEP5

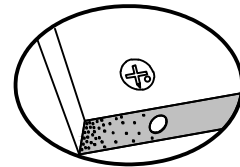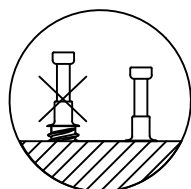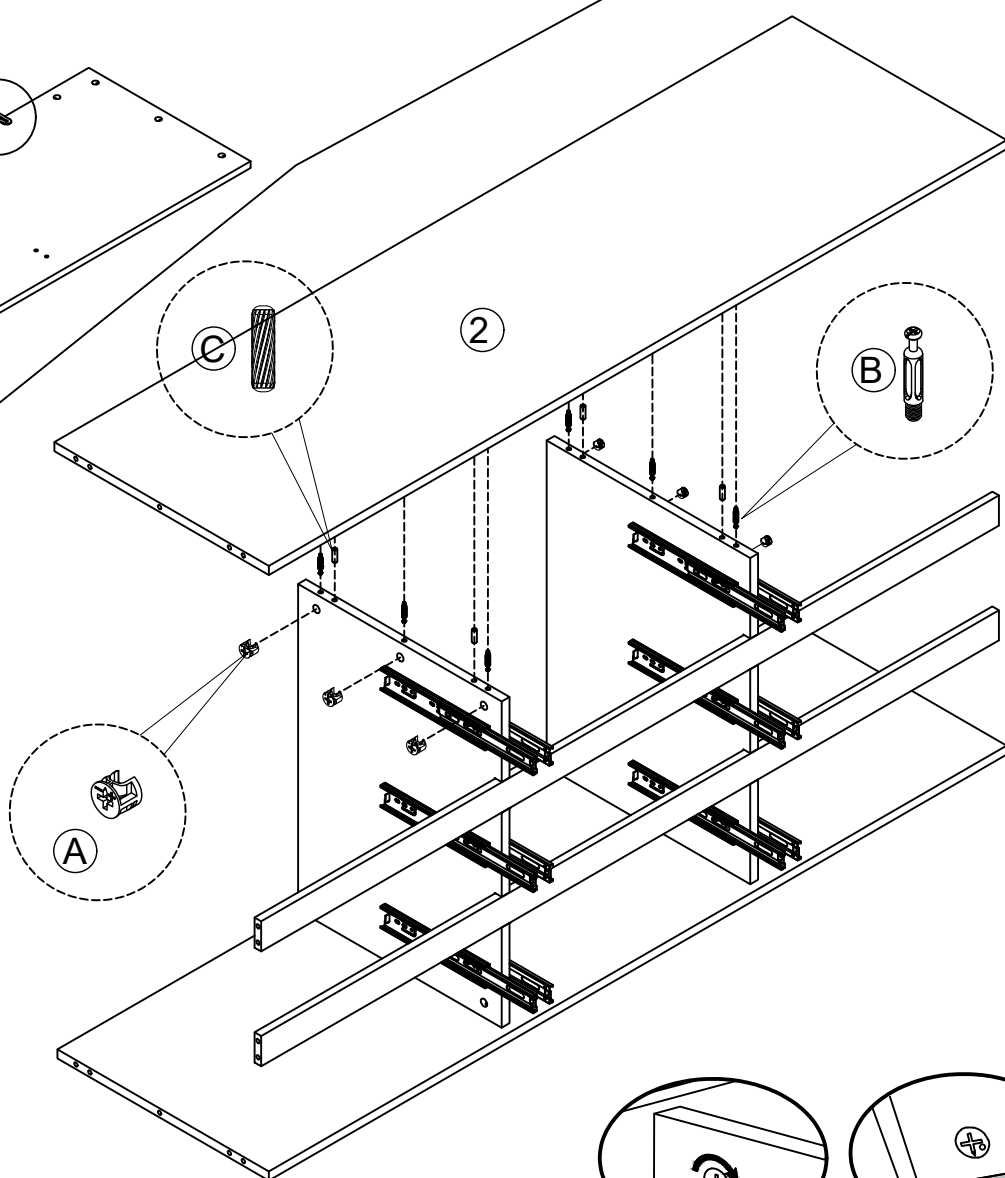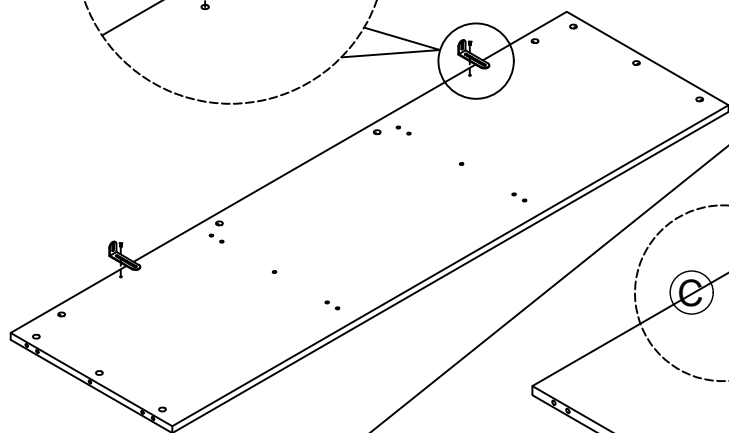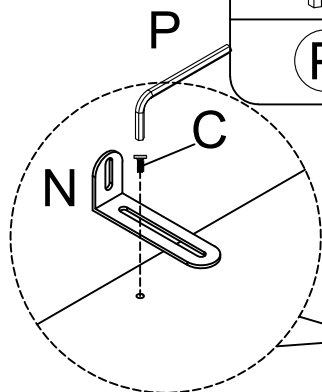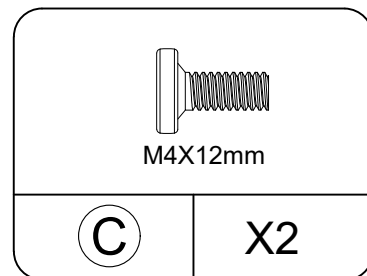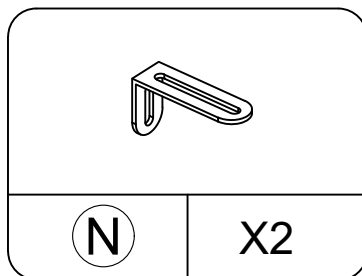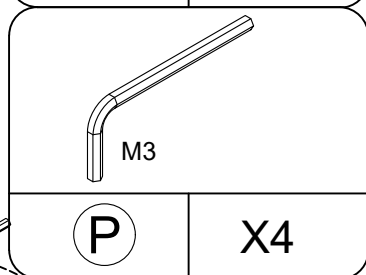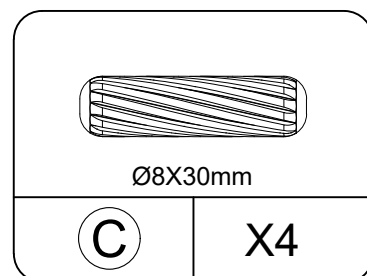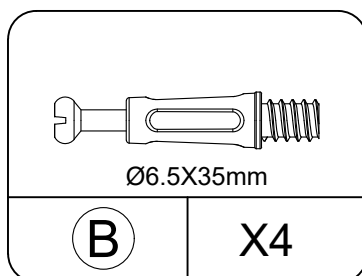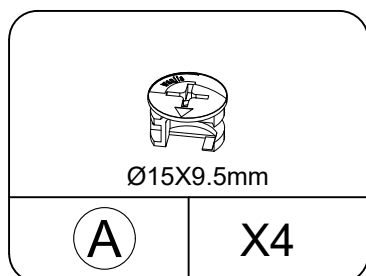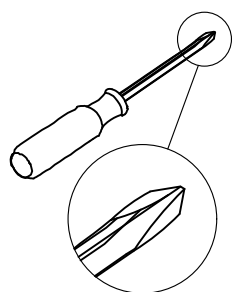









Proper orientation of CAM LOCK

STEP6

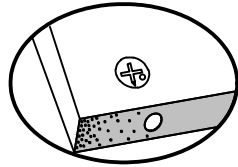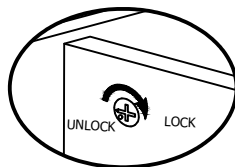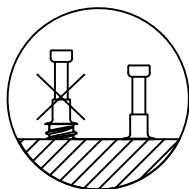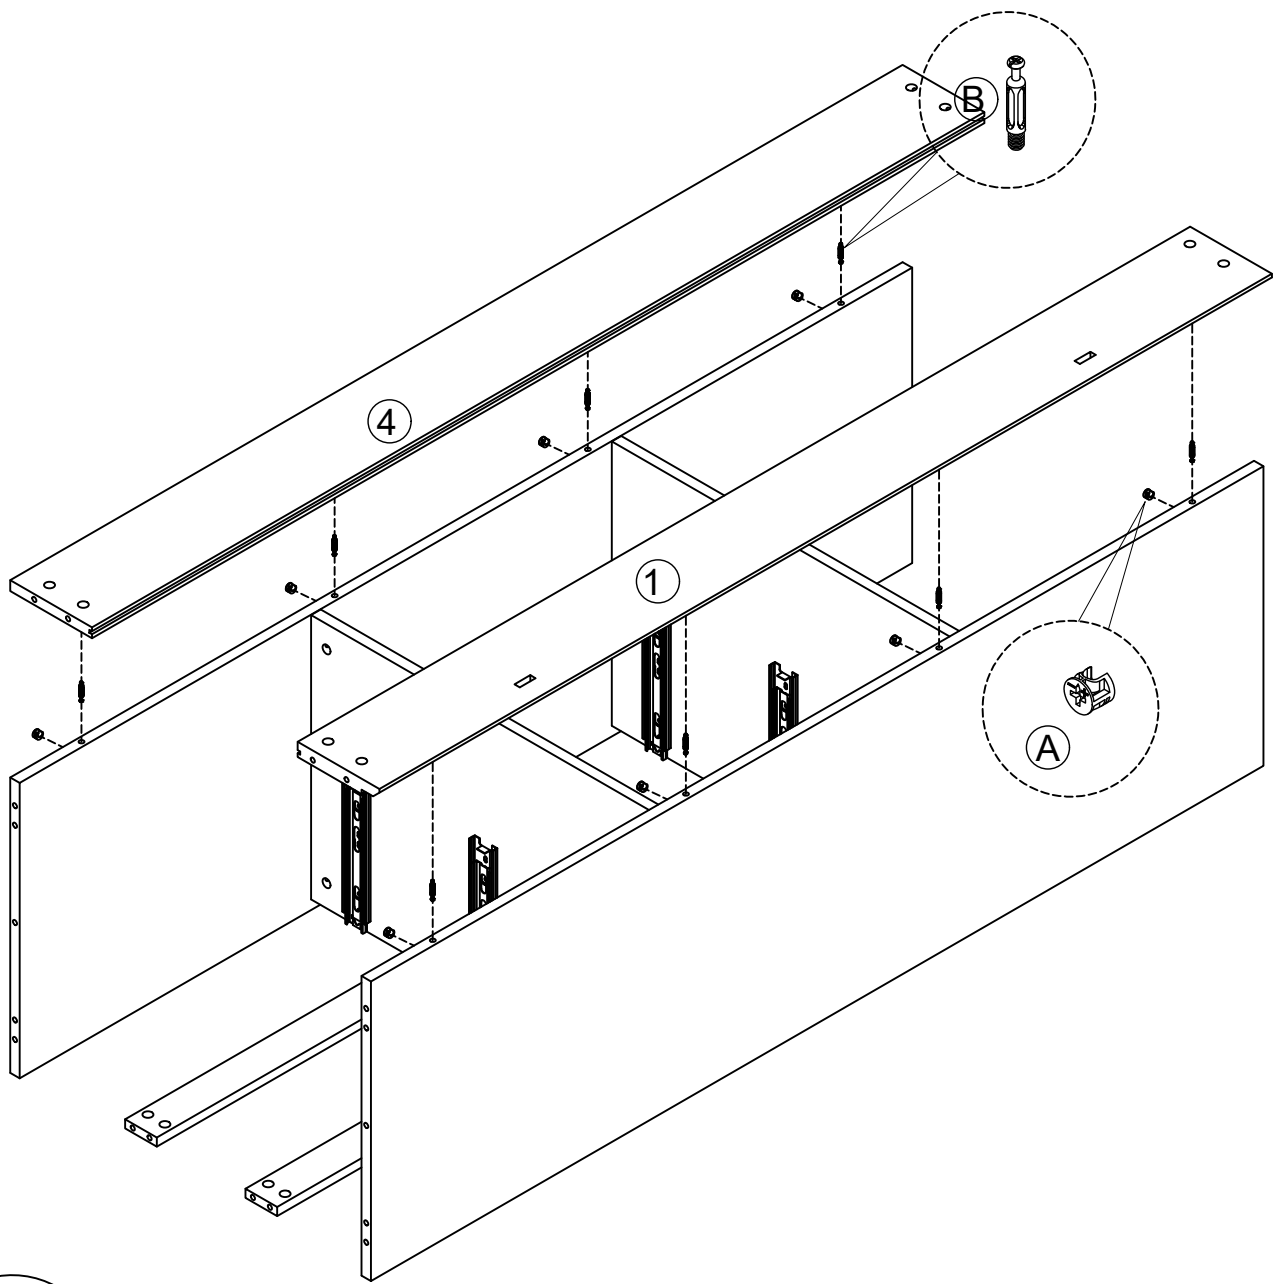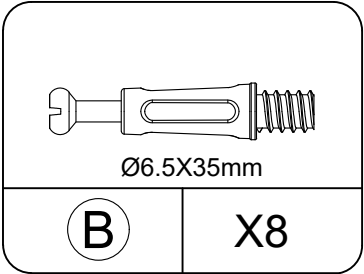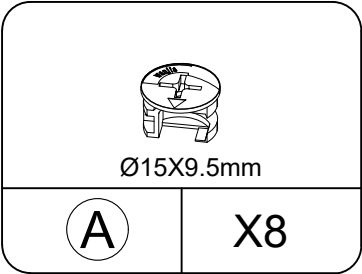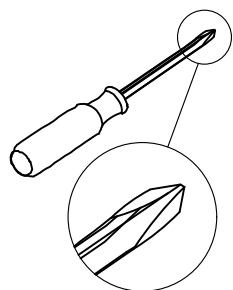


Proper orientation of CAM LOCK

STEP 7

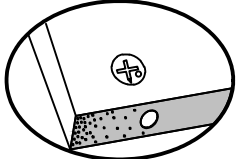
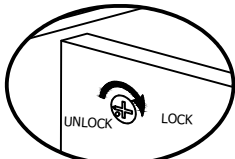
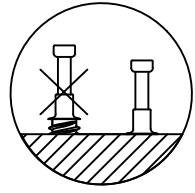
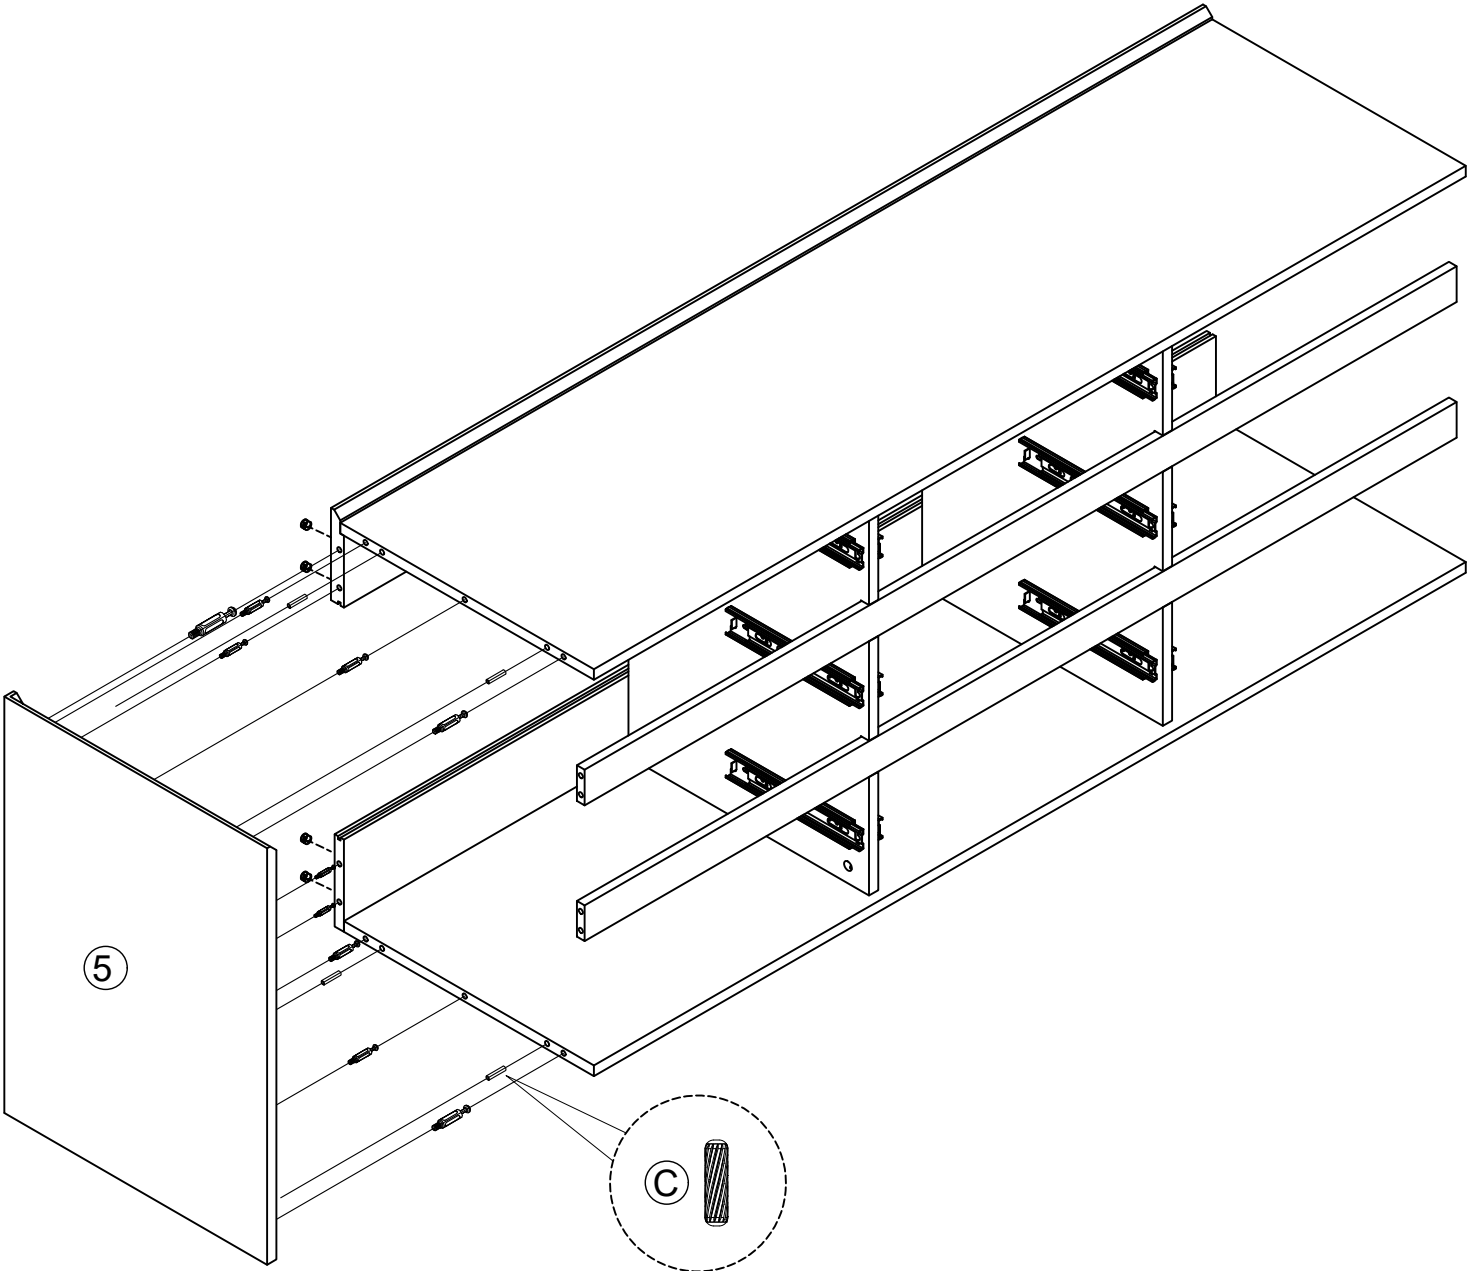
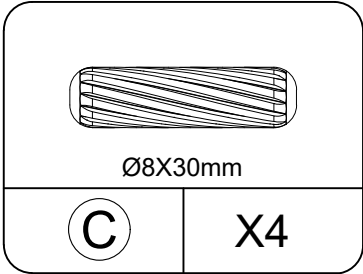
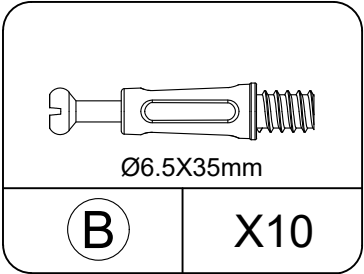
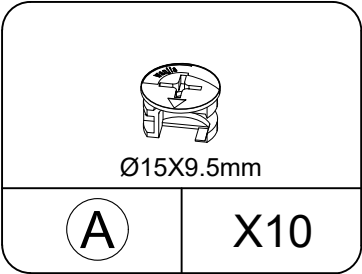
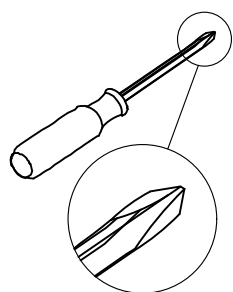


Proper orientation of CAM LOCK

STEP8






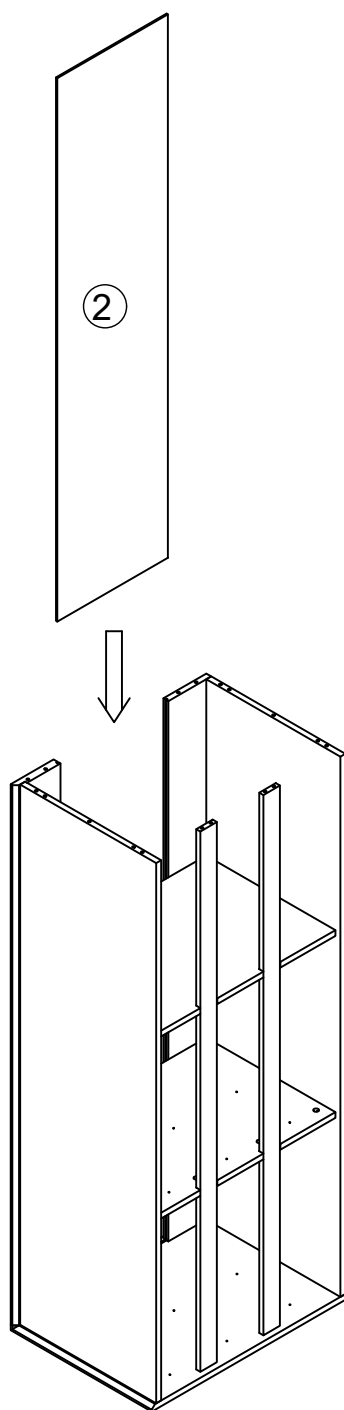


STEP9

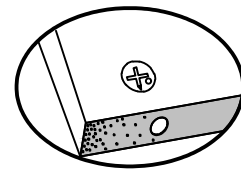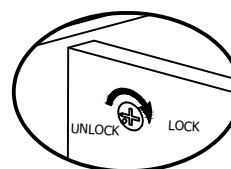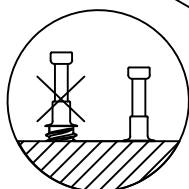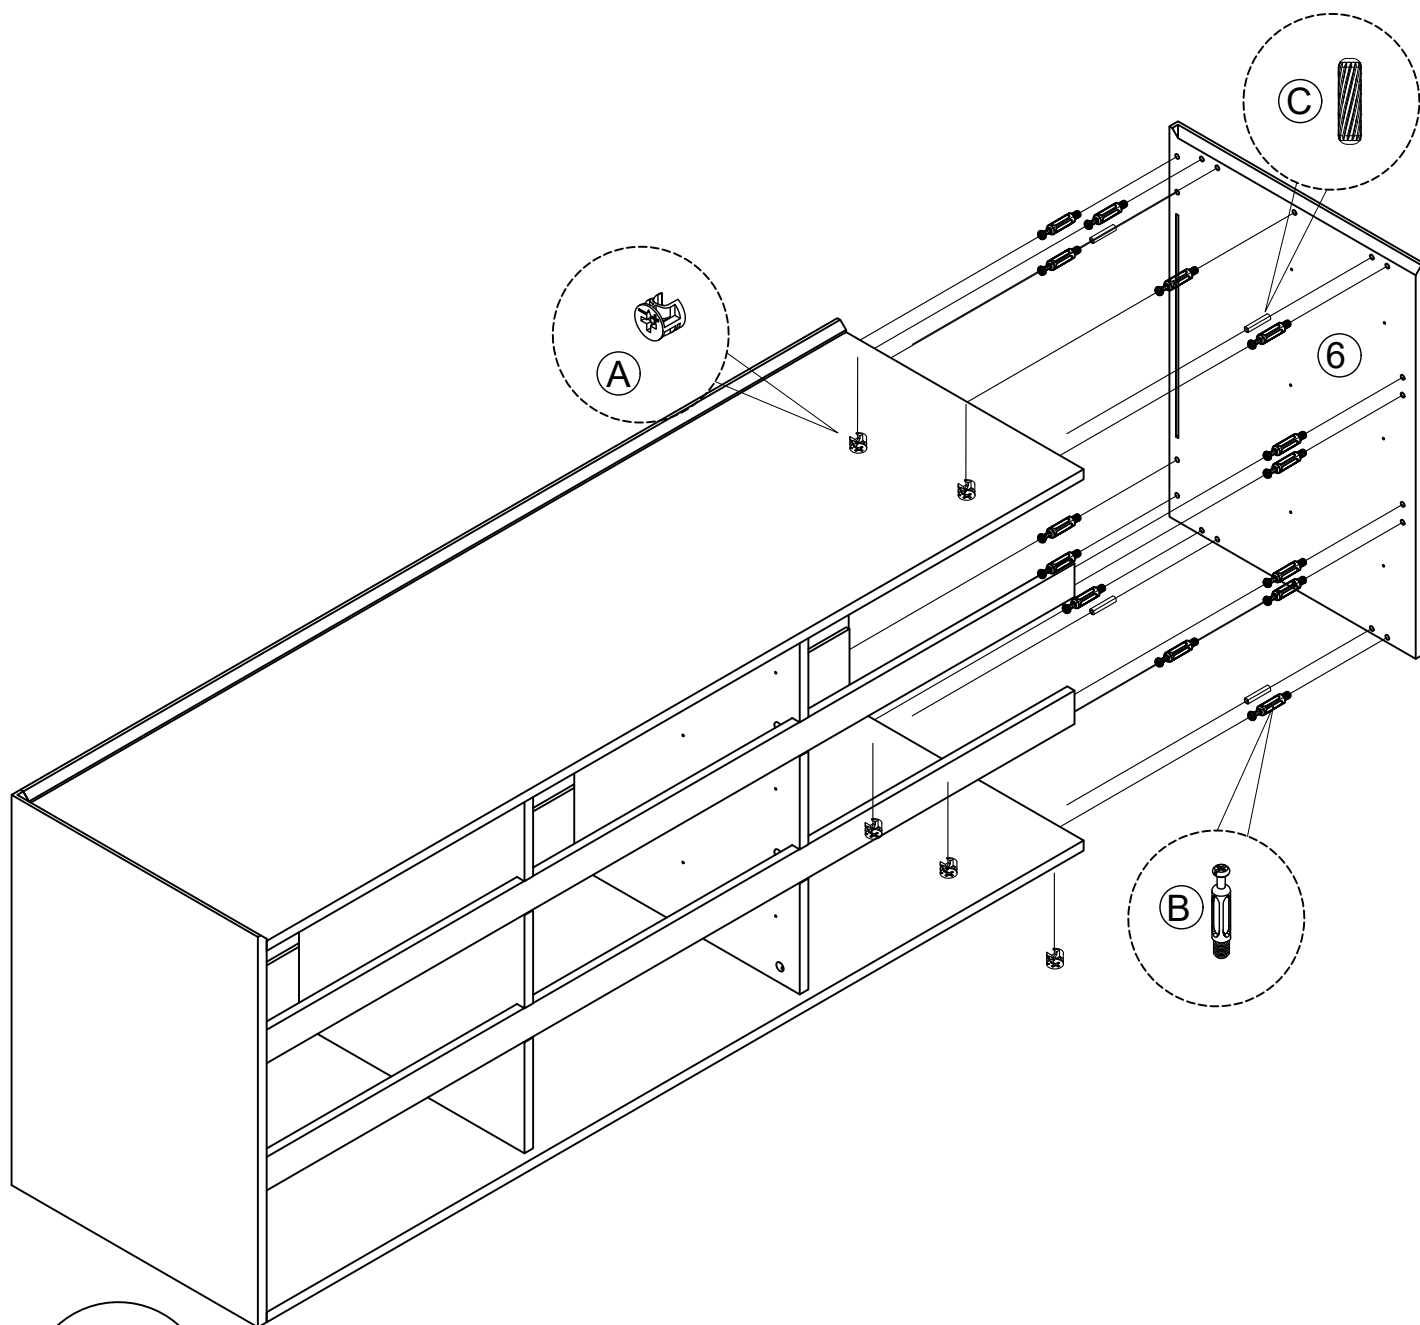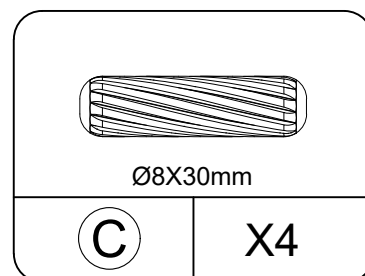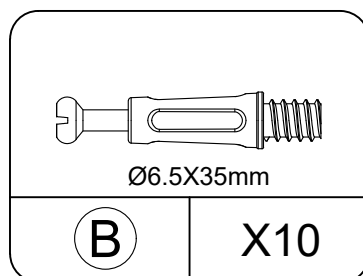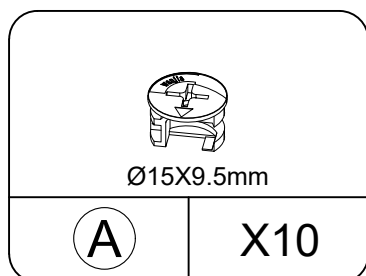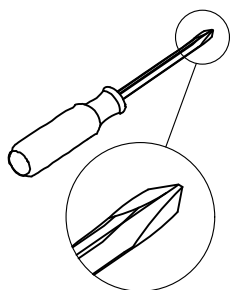


Proper orientation of CAM LOCK

STEP10

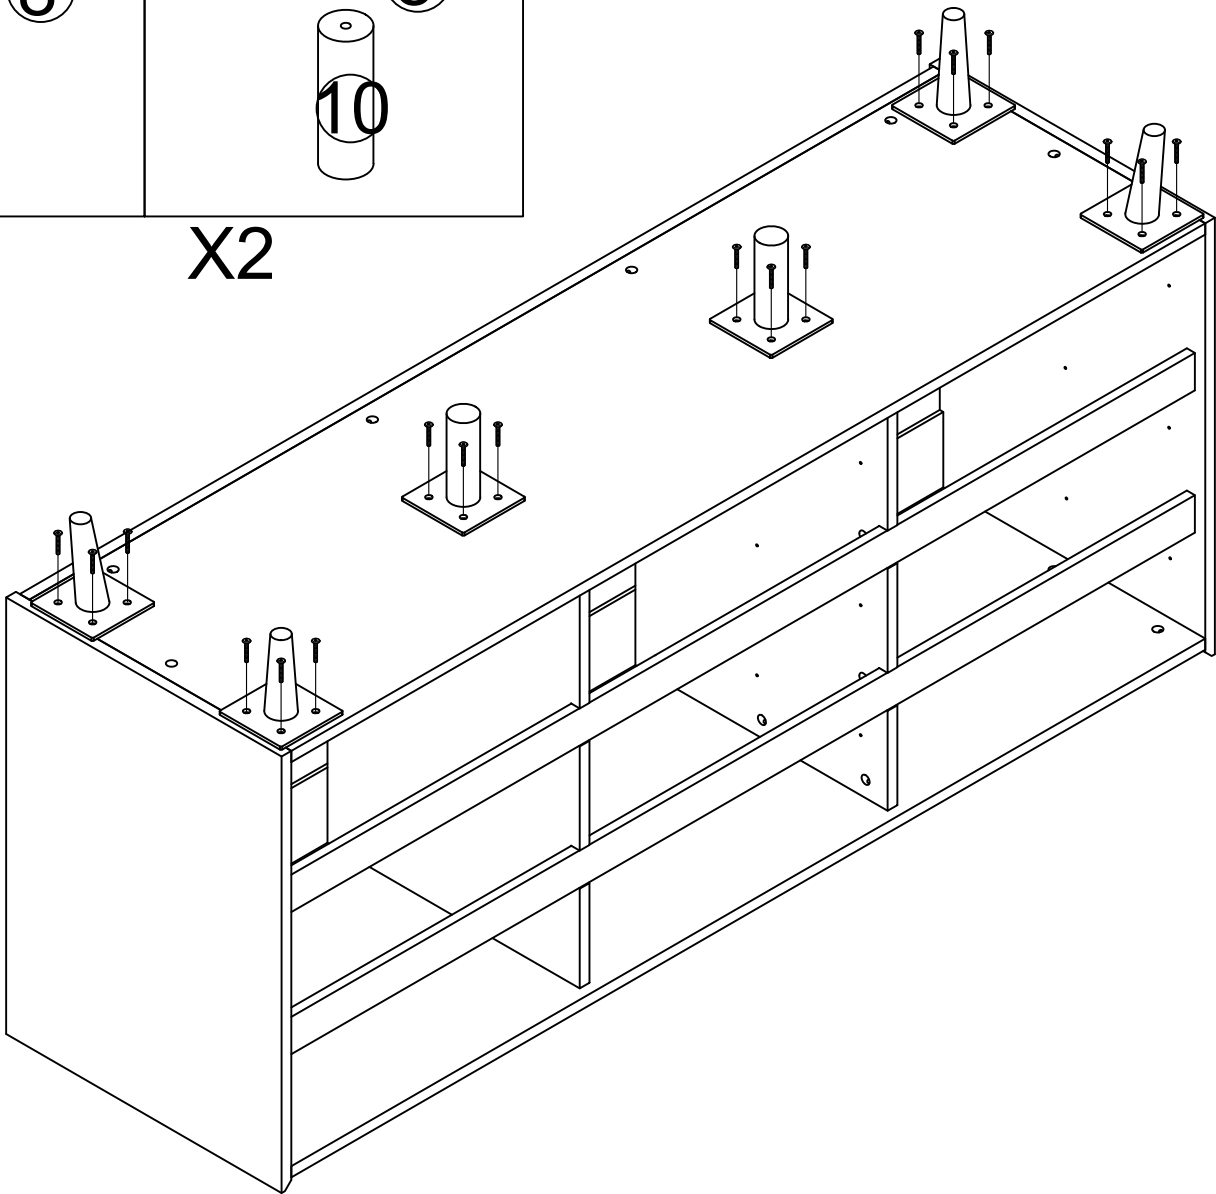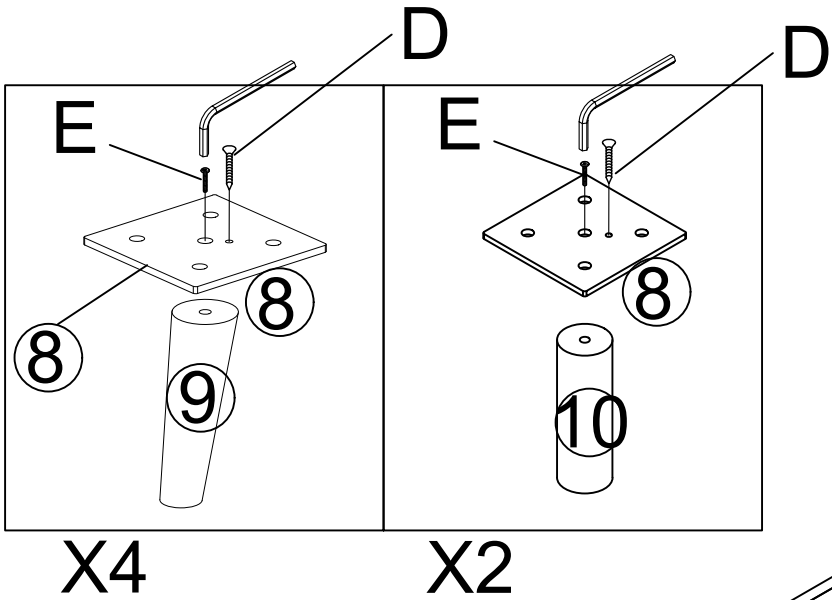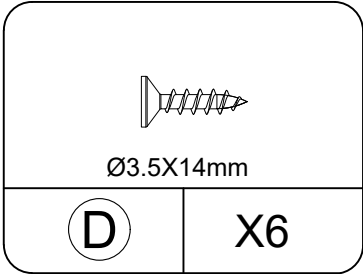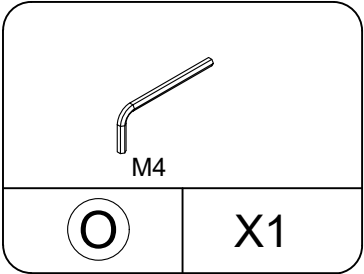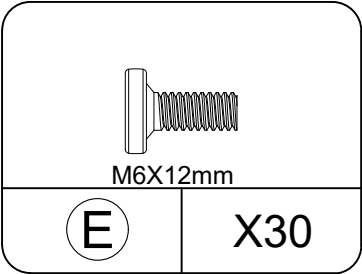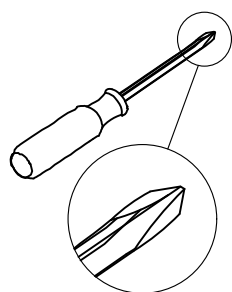


STEP11

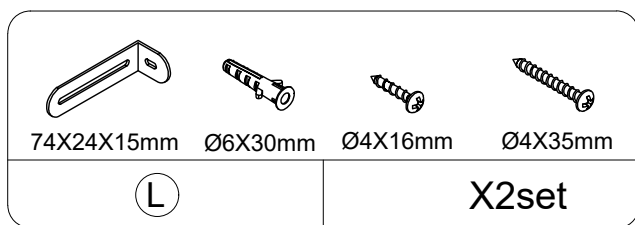


TIPPING RESTRAINT
HARDWARE KIT


Install the tipping restraint hard ware

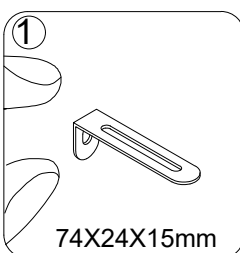


1. make mark on
the wall

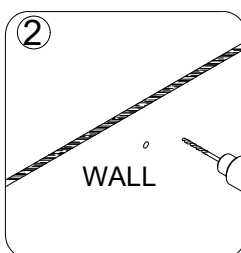


2. drill two Ø6
holes on the wall

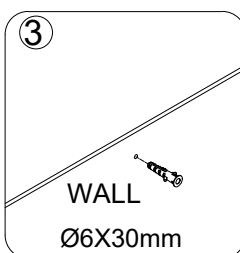


3. put two
anchors in the
holes

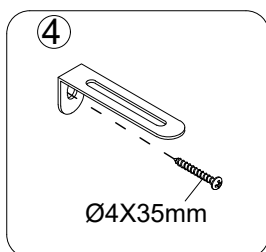









4. fix the device on the
wall by the long screws

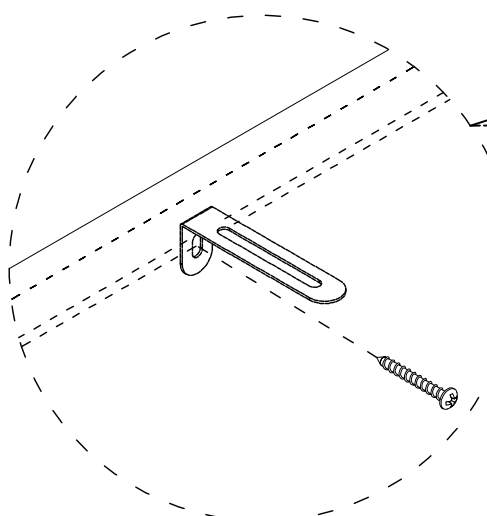








5. Push the cabinet closer to the wall so tha
the two bases are close to each other and
tighten them with screws.

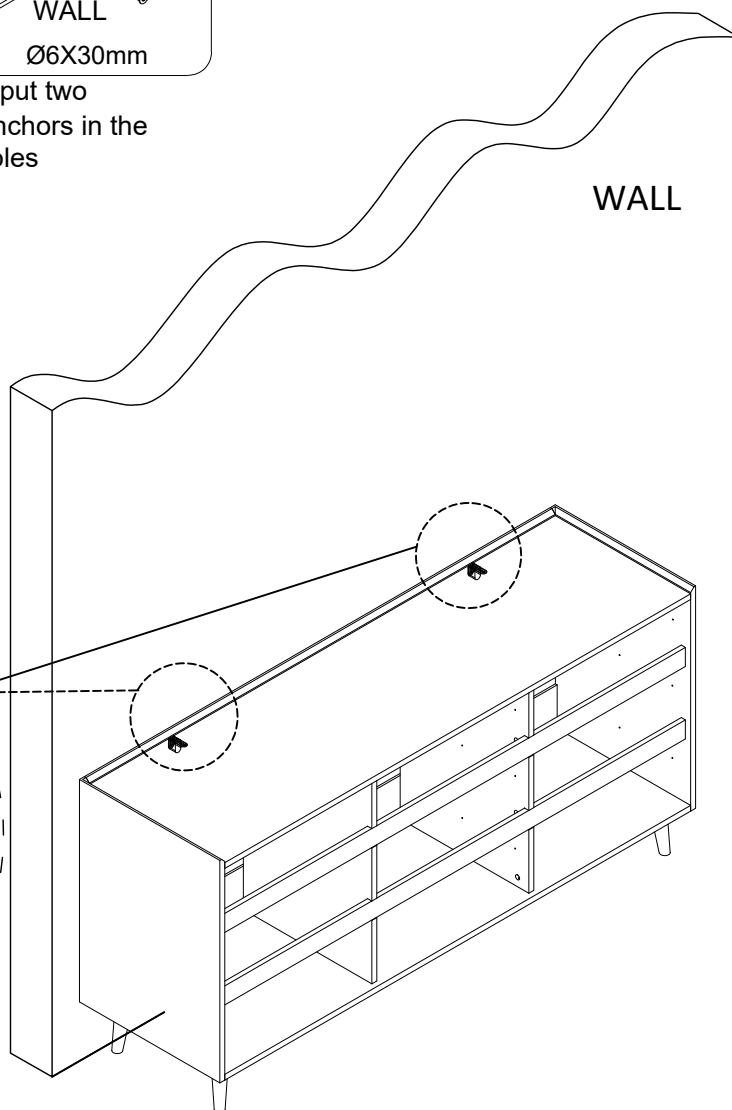





STEP12

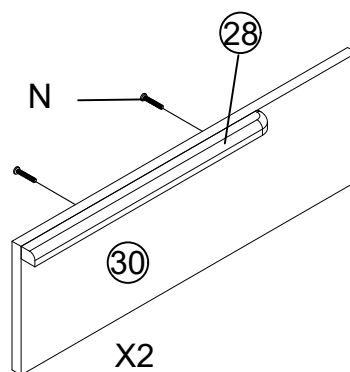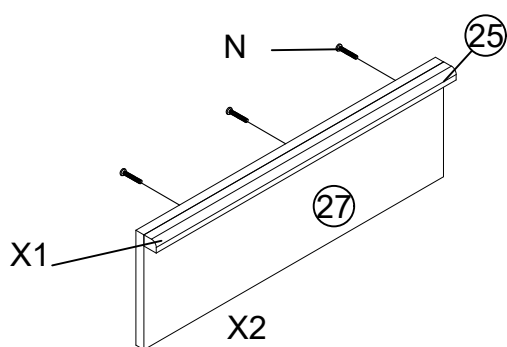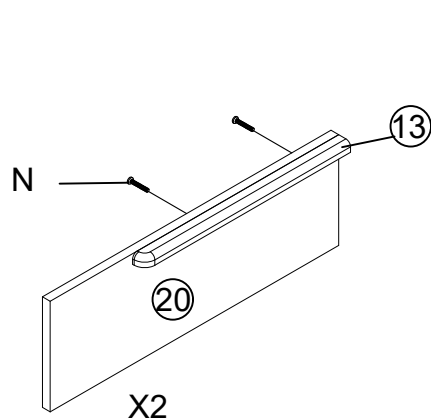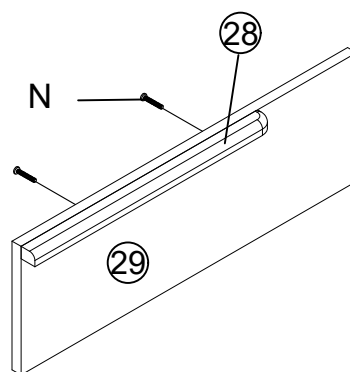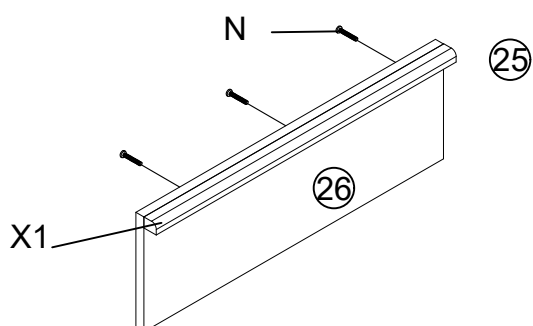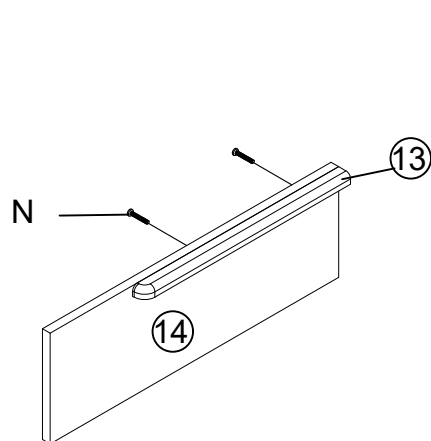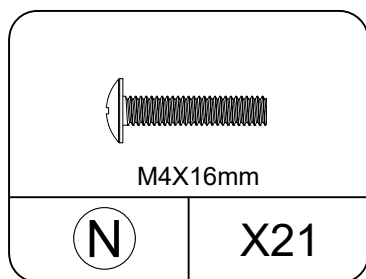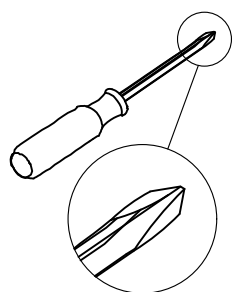




STEP13

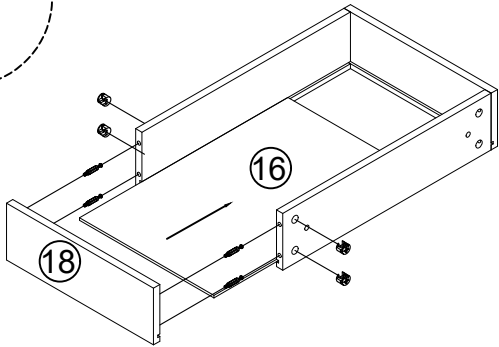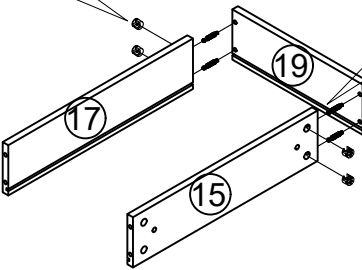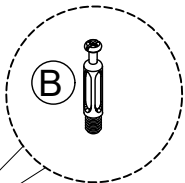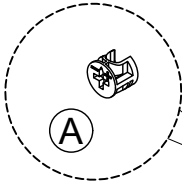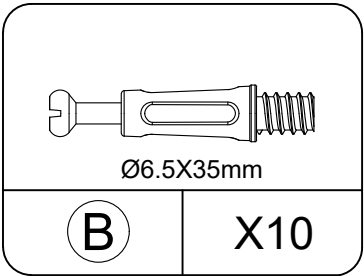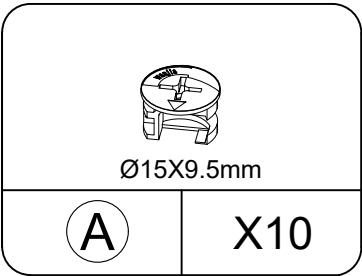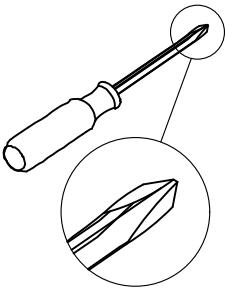

X3

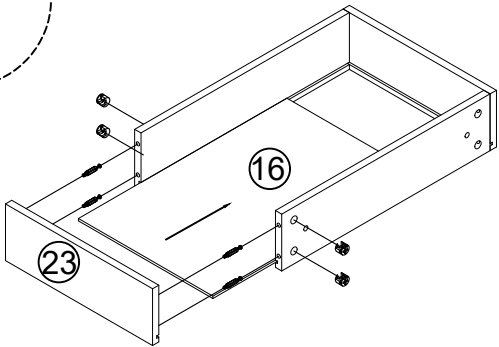
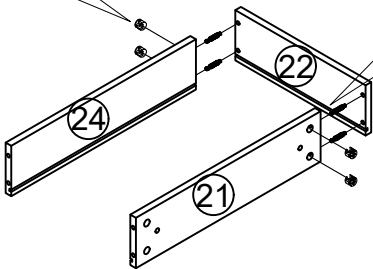
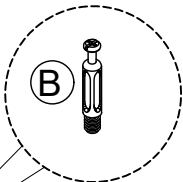
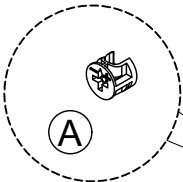


X6

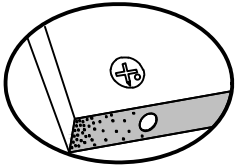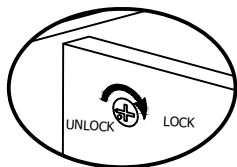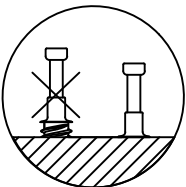











Proper orientation of CAM LOCK

STEP14

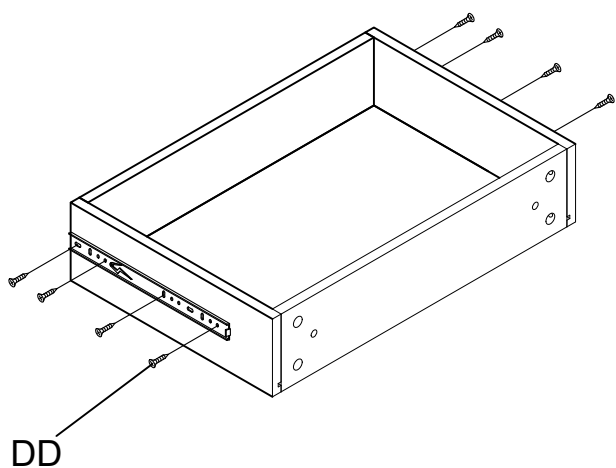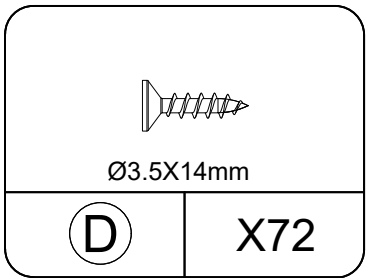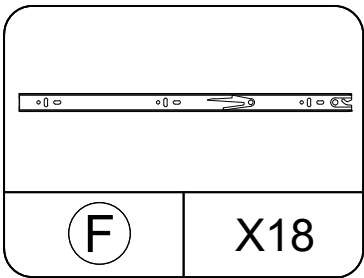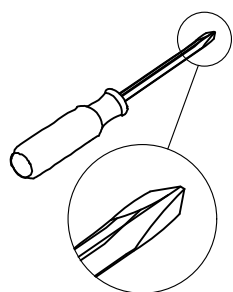

X9


STEP15

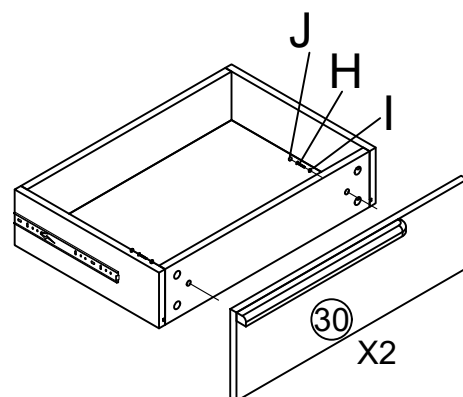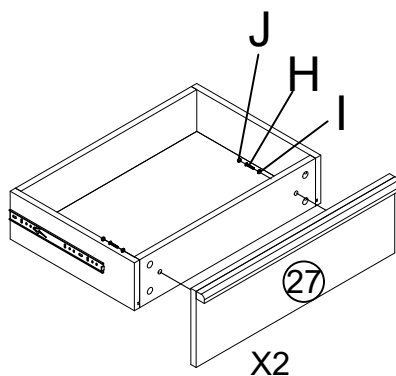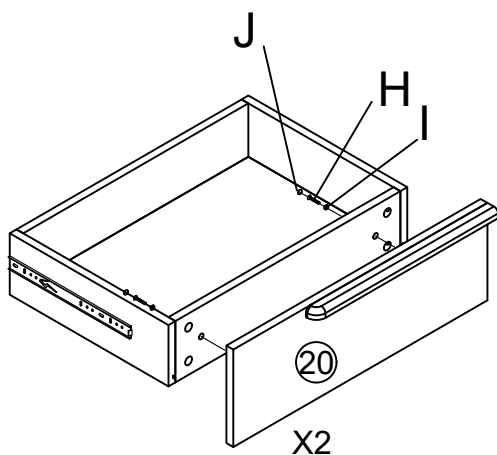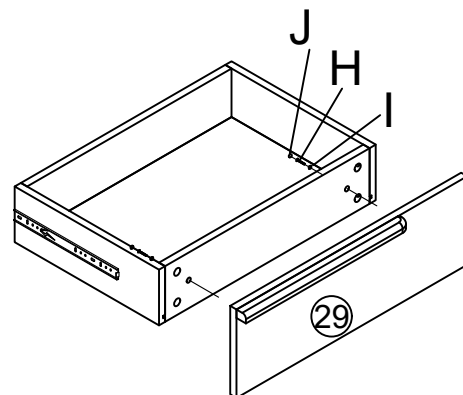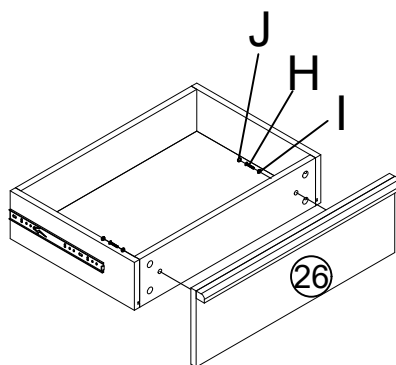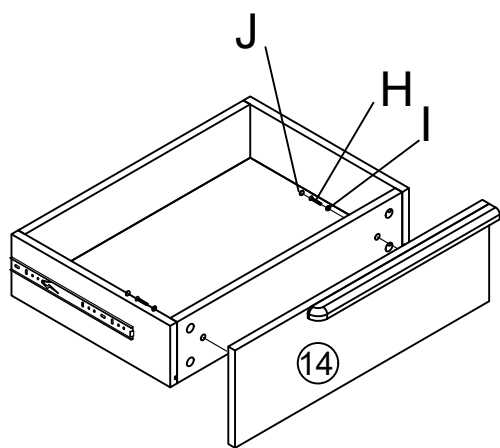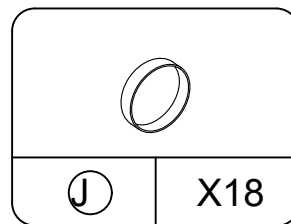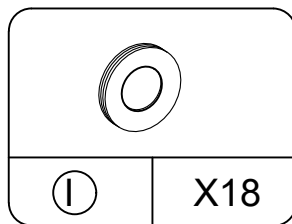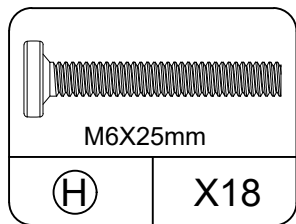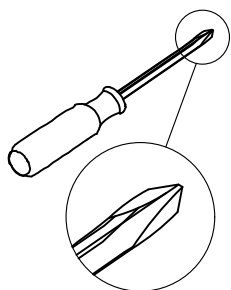


These two screws can adjust the gap between the drawing rollers.

STEP16

Adjust the gap when putting it into the drawer

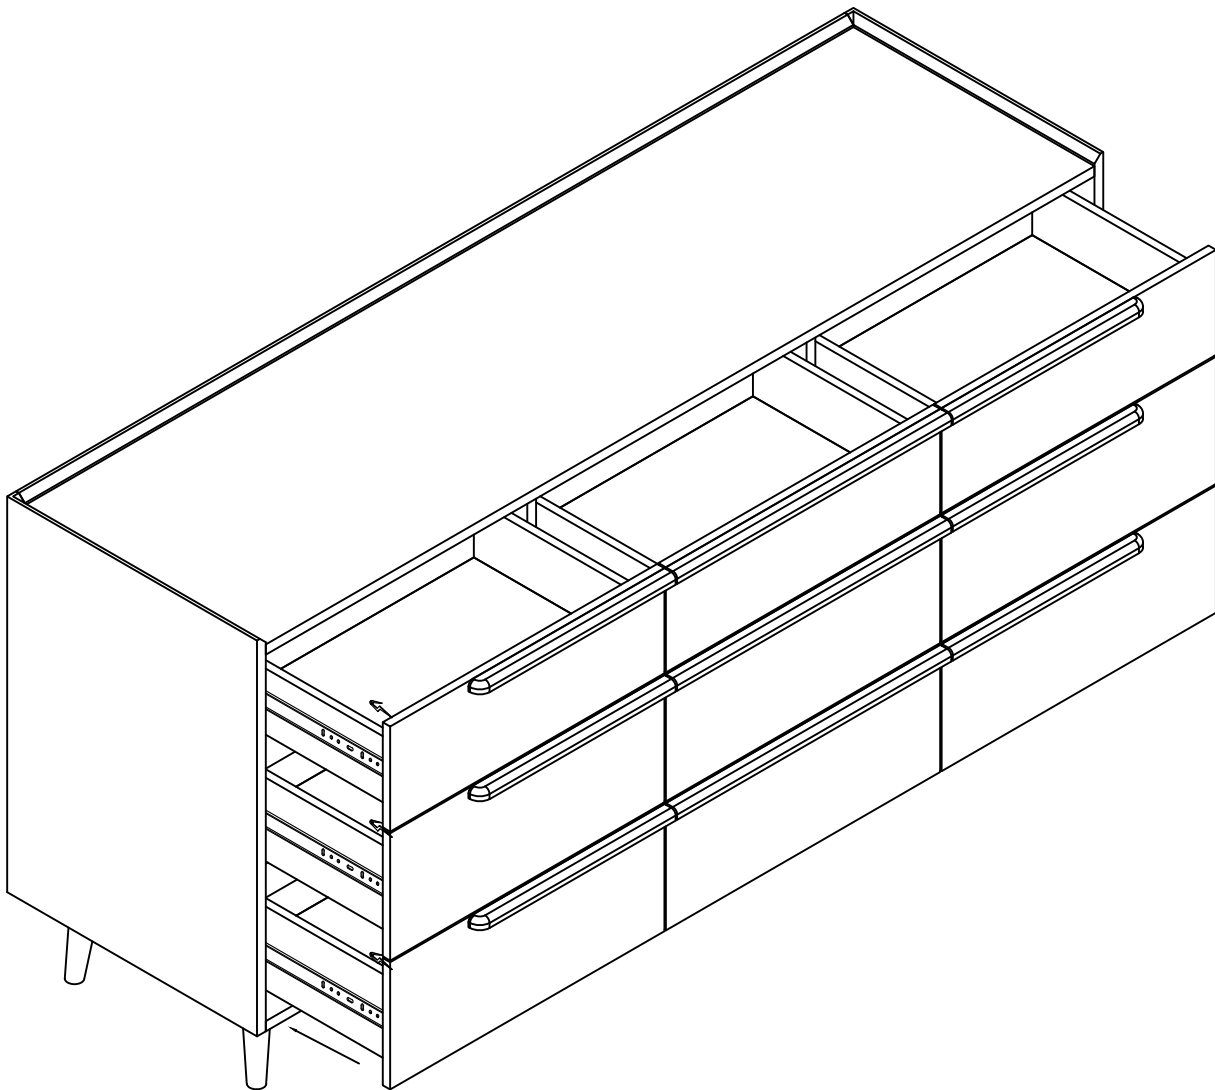

STEP16

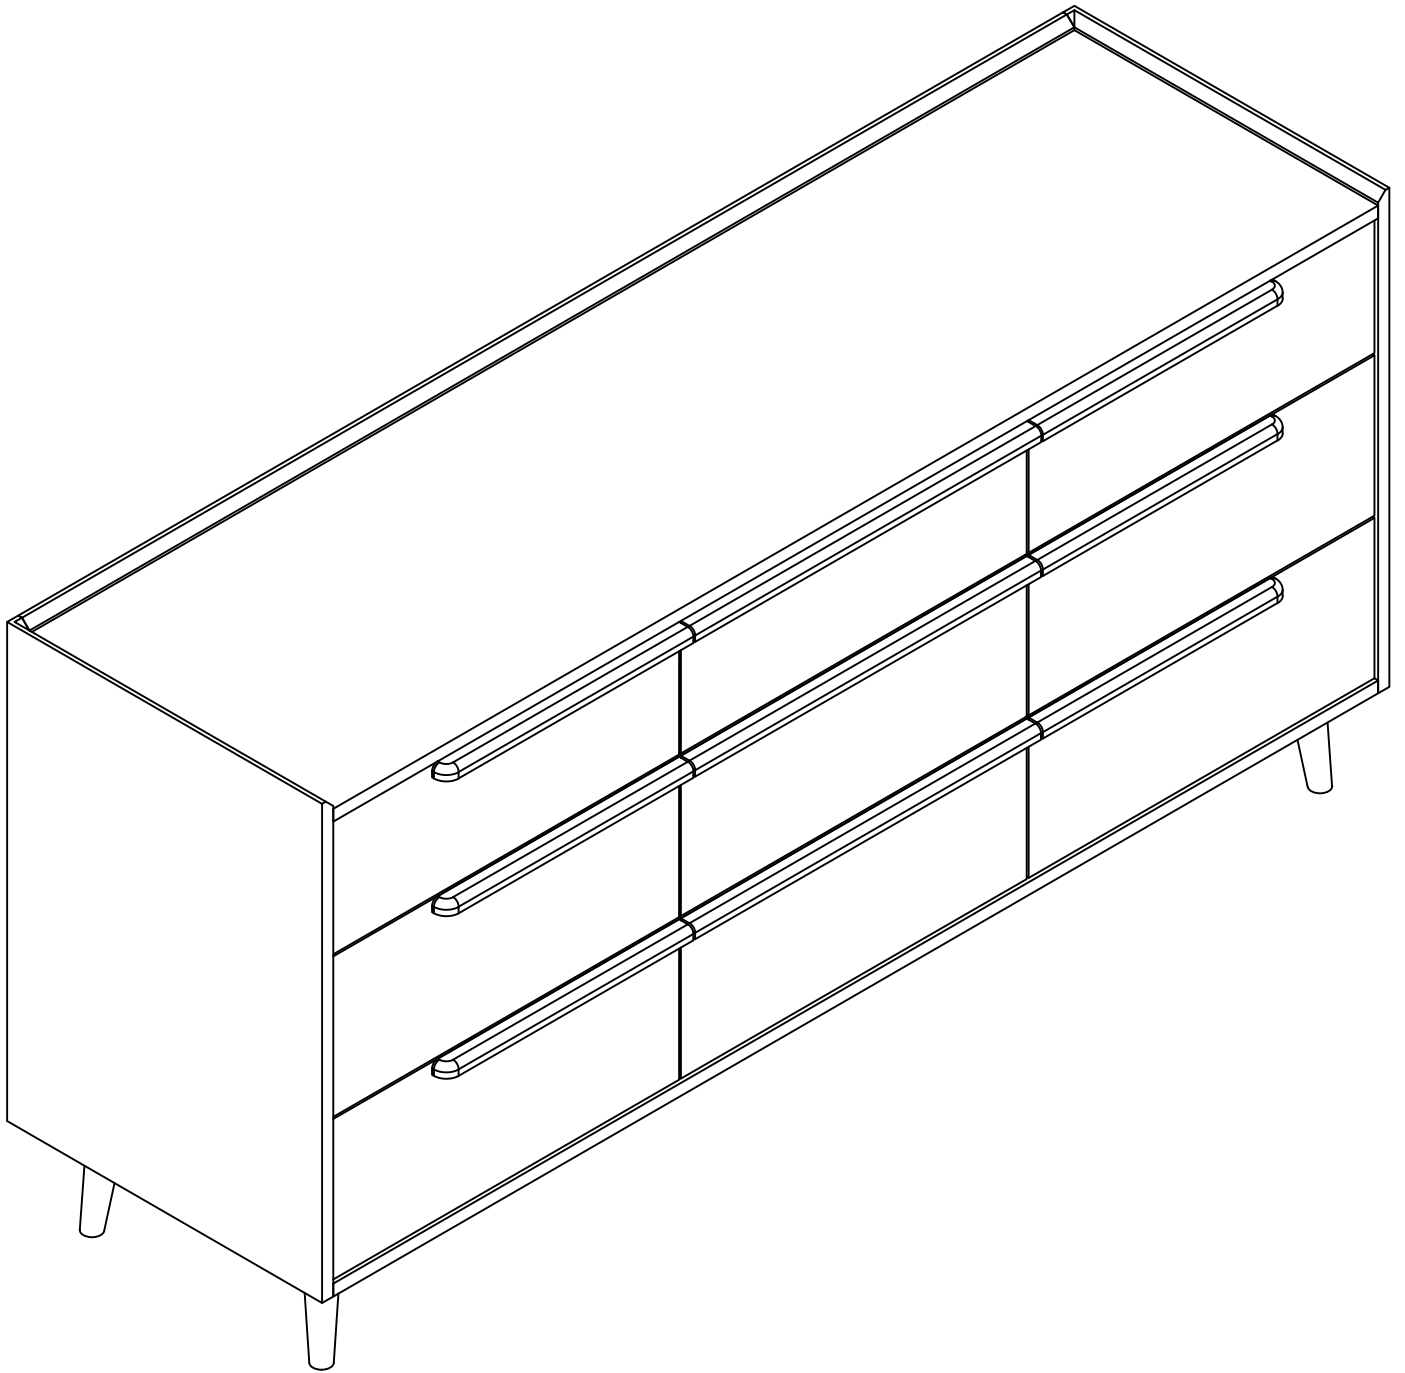

Project installation completed