



INSTALLATION INSTRUCTIONS

PART No.

FB21119

Jeep® '18-Current JL Wrangler
Tail Light Guards



REQUIRED TOOLS

T40 Torx Bit
3mm Allen Key
8mm Wrench
Flat Head Screwdriver

KIT CONTAINS

Tail Light Guard (Front Left)
Tail Light Guard (Front Right)
Tail Light Guard (Rear)
Button Head Bolt
Serrated Lock Nut

QTY

1
1
2
10
10


1) ACCESS THE TAIL LIGHT

To make the installation easier, we recommend you remove your soft top window panels. It's not necessary, however.

Turn off your vehicle.



With a flat head screw driver, remove the tail light bolt cover, located just above each tail light in the interior panel.

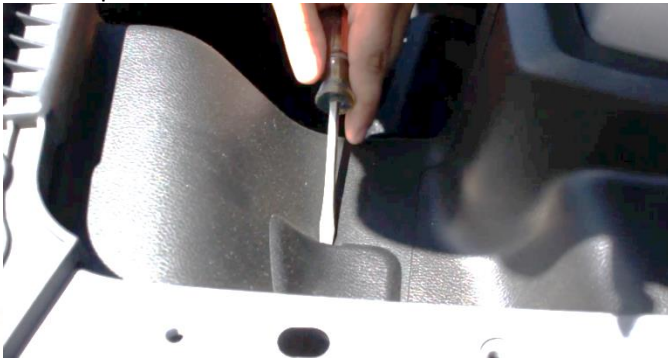

2) REMOVE THE TAIL LIGHT

With a T40 Torx, remove the plastic tail light retaining bolt, while supporting the light with the other hand.




Disconnect the light from power by pulling down on the red tab, pinching the white tab, and pulling away.



3) **INSTALL THE GUARDS**

With the corresponding front guard, place the tail light into it so that the 3 bolt holes cover the larger, plastic face and the Fishbone logo is readable.

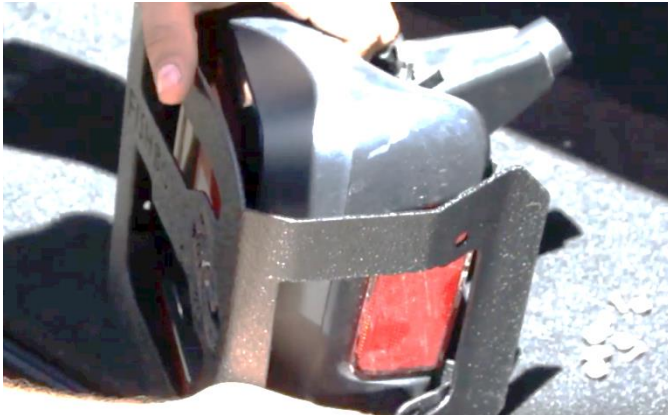


With a 3mm Allen key, secure the two plates to one another with 5 of the included bolts and serrated nuts. You may need to use an 8mm wrench if you have difficulty tightening them.




Repeat Steps 1-3 on the opposite side.

Place one of the rear plates over the back section so that it rests underneath the front plate.

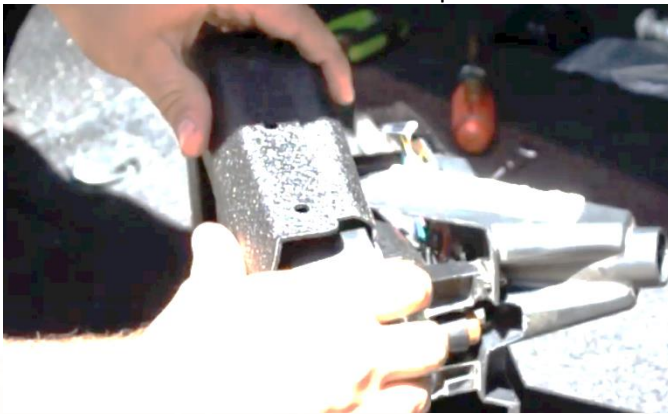

Take care to not trap the power cord under the plate.

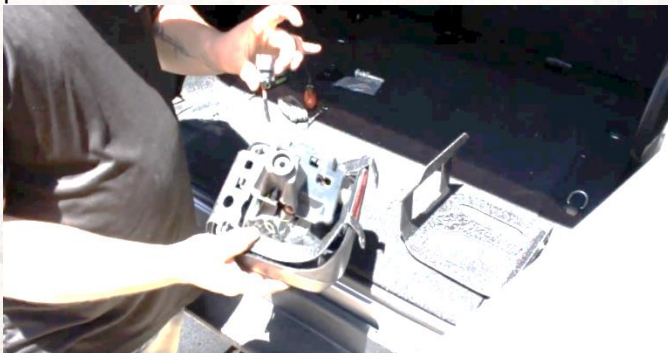

4) RESECURE YOUR VEHICLE

Begin reassembling your vehicle starting with reconnecting the light's power.



Resecure the tail light retaining bolt with a T40 Torx bit.

Resecure your hard or soft top.

5) ENJOY YOUR NEW FISHBONE OFFROAD TAIL LIGHT GUARDS!

