



# INSTALLATION INSTRUCTIONS

**PART No.**

**FB21259**

**07-13 Toyota® Tacoma & 2015+ Ford® F-150  
Bed Storage Rack**



## REQUIRED TOOLS

Utility Knife/Scissors  
Ratchet  
19MM Socket  
19MM Wrench  
8MM Allen Wrench  
Help of a Friend

## Thread Locker

## KIT CONTAINS

Side Plate (Left & Right)  
Center Plate  
Steel Clamp  
M12 Washer  
M12 Button Head Bolt  
M12 Carriage Bolt  
M12 Hex Bolt  
Foam Pad (Long)  
Foam Pad (Short)  
M12 Lock Washer  
M12 Hex Nut

## QTY

1ea  
1  
2  
16  
6  
4  
4  
2  
2  
14  
10

2125900

## INSTALLATION INSTRUCTIONS


**PART No.**

**FB21259**

**07-13 Toyota® Tacoma & 2015+ Ford® F-150  
Bed Storage Rack**

**1) PREPARE**

Prior to assembly, apply the adhesive foam padding to each of the Side Plate brackets. Flip the plates over, exposing the brackets as shown, and apply one long and short foam strips to the long and short ends of the bracket.

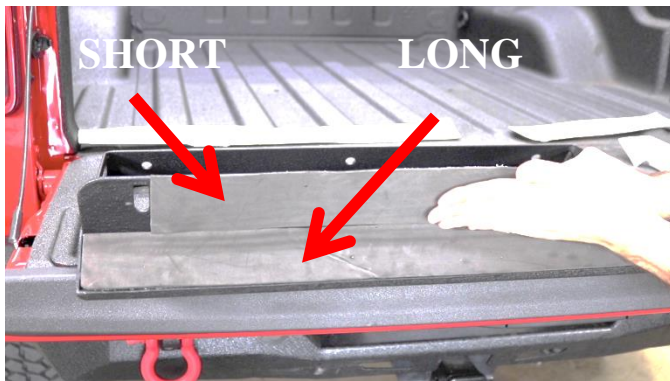

Trim away excess foam as needed.

**2) ASSEMBLE THE RACK**

The front of the rack is indicated by our signature plate on the Center Rack, and the orientation of the side plates is indicated by the piranha logo resting closest to the vehicle's cab. [See Below].



Using 6 of the included button head bolts, washers, lock washers, and hex nuts, loosely assemble the Side Plates to the Center Plate. They will be tightened in the last step.





**INSTALLATION INSTRUCTIONS**

**PART No.**

**FB21259**

**07-13 Toyota® Tacoma & 2015+ Ford® F-150  
Bed Storage Rack**



**3) INSTALL THE RACK**

With the help of a friend, lift the Rack onto the bed as desired.

Push the Clamp high into the vehicle's rail, so that it grips the steel flange, and tighten down the bolts with a 19mm socket.



With a Steel Clamp, 2 carriage bolts, washers, lock washers, and hex nuts, insert the bolts into the Clamp as shown, and rotate it behind the Rack bracket and into place.







## INSTALLATION INSTRUCTIONS

**PART No.**

**FB21259**

**07-13 Toyota® Tacoma & 2015+ Ford® F-150  
Bed Storage Rack**

**4) TIGHTEN DOWN**

With the brackets secured and aligned, secure the Center and Side Plates together with an 8mm Allen and a 19mm wrench.



**ENJOY YOUR NEW FISHBONE OFFROAD BED STORAGE RACK!**

