

FISHBONE
OFFROAD



INSTALLATION INSTRUCTIONS

PART No.

FB21273

**Universal for Utility Racks
Hi-Lift Jack Mount Kit**



VIDEO AVAILABLE



REQUIRED TOOLS

3/4 Wrench

KIT CONTAINS

Spacer 1/2"

Spacer 1"

Spacer 1.5"

M12-1.75 x 100MM Bolt

M12-1.75 x 110MM Bolt with Lock Hole

M12 Split Lock Washer

M12 Flat Washer

Knobs

QTY

1

1

1

1

1

2

2

2

INSTALLATION INSTRUCTIONS

PART No. FB21273 Universal for Utility Racks Hi-Lift Jack Mount Kit

1) MEASURE

Install the supplied M12 bolt (without hole) and flat washer onto one side of your bed rack (Side 1).

Install the 1" spacer onto the bolt followed by a lock washer and nut.




Repeat this on the opposite side using the 1.5" spacer (Side 2).



2) INSTALL JACK

Install Your Hi-Lift Jack on, with the bottom of the jack, Side 2 of the vehicle followed by the 1/2" spacer.

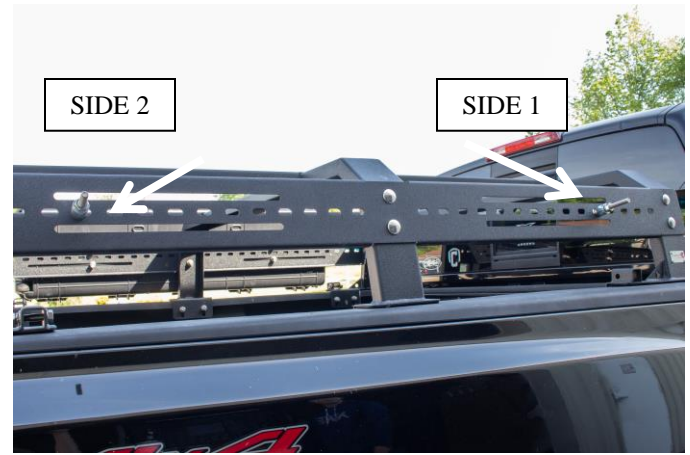

Install both threaded knobs to secure your Hi-Lift Jack to your bed rack.

