




INSTALLATION INSTRUCTIONS

PART No. FB21327/ FB21328 &
FB21308/ FB21309

Toyota® 2016+ Tacoma
Bedside Molle Panels – 5’ & 6’ Bed

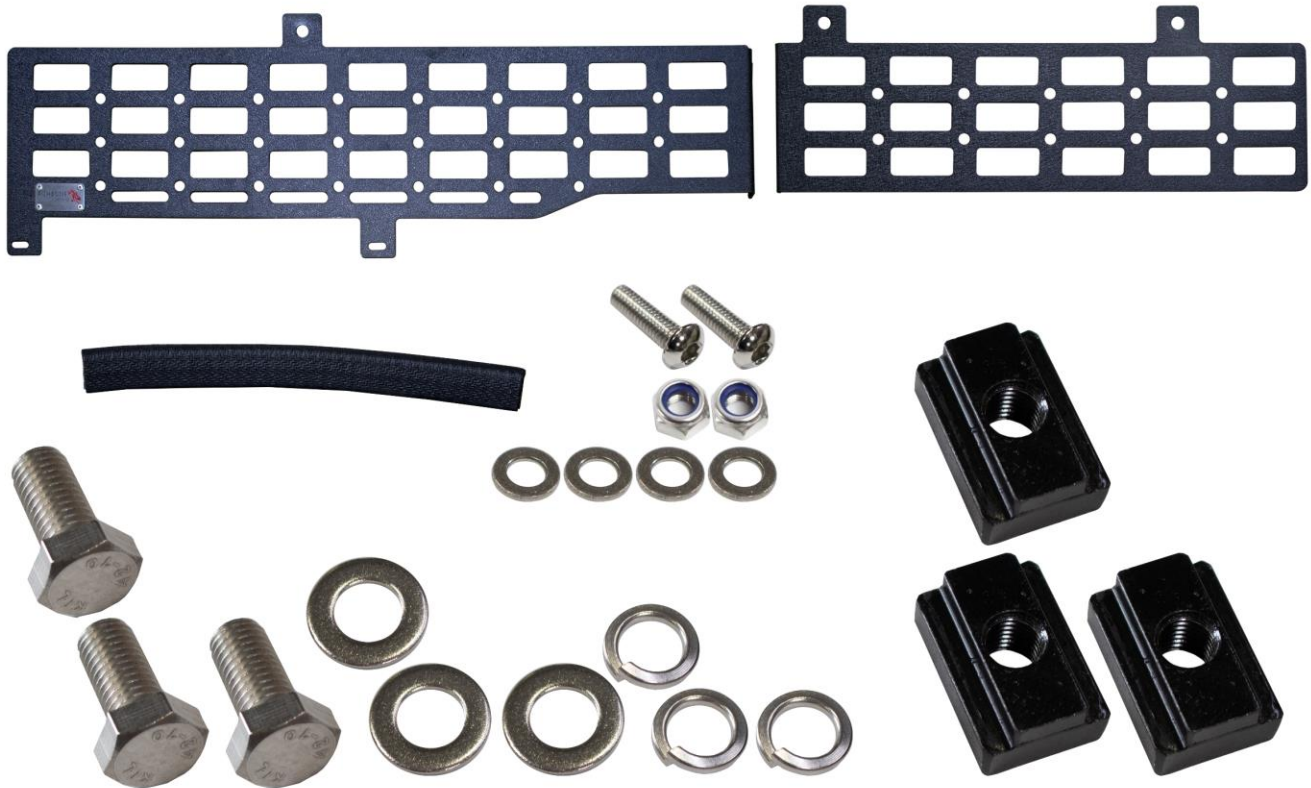

REQUIRED TOOLS

19mm Socket
4mm Allen
10mm Wrench
T-30 Torx Bit

FB21327 & FB21308-

Driver Side Only:

M6 Nutsert Tool
Pencil
23/64" Drill Bit

KIT CONTAINS

Molle Panels (Forward/Rear)
M12 Hex Bolt
M12 Flat Washer
M12 Lock Washer
T-Nut
M6 Button Head Bolt
M6 Flat Washer
M6 Nyloc Nut
Rubber Gasket
M6 Nutsert

QTY

1ea
3
3
3
3
2
4
2
1
2

INSTALLATION INSTRUCTIONS

PART No.


Toyota® 2016+ Tacoma Bedside Molle Panels – 5' & 6' Bed

ASSEMBLE THE PANEL

Begin by assembling the panels by placing the included rubber gasket over the larger inner tab.



Next, secure the two panels with the 2 included bolts, washers, and nuts with a 10mm socket and 4mm allen key.

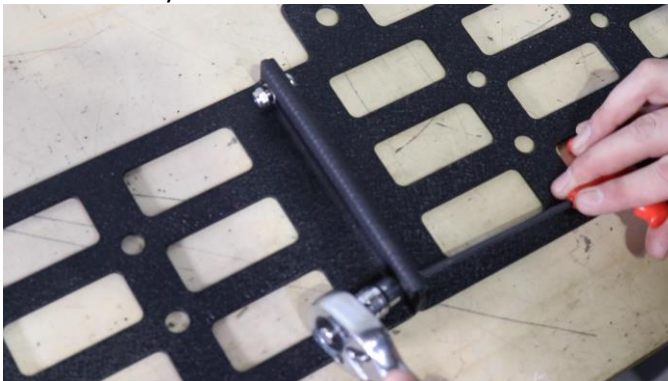


PREPARE YOUR VEHICLE BED

Unclip your trail rail stopper and insert the 3 included T-Nuts into it.




NOTE: The Driver Side (FB21327 & FB21308) and Passenger Side (FB21328 & FB21309) install differently depending on the options your vehicle came with.

On the Passenger Side only – FB21328 & FB21309:
With a T-30 torx bit, remove the first and third bolt from the bed accessory panel. For 6' beds, you will need to remove the top bolt from the Tie Down point located on each side near the cab. Retain these bolts as they will be reused in the next step.

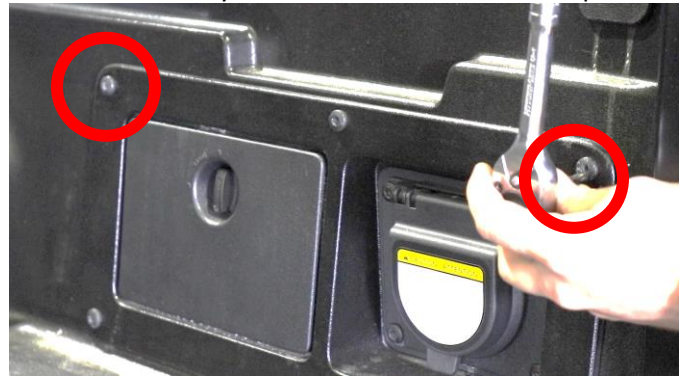

If your vehicle came with a second accessory panel on the Driver side, repeat the above step. Otherwise:

On the Driver Side only – FB21327 & FB21308:
Hold the panel with our signature plate up to the bed.

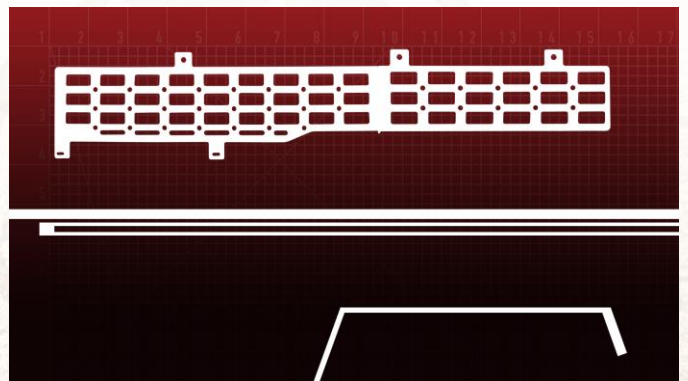


INSTALLATION INSTRUCTIONS


PART No.

Toyota® 2016+ Tacoma
Bedside Molle Panels – 5' & 6' Bed

Mark the location of the lower tabs onto the bed wall.

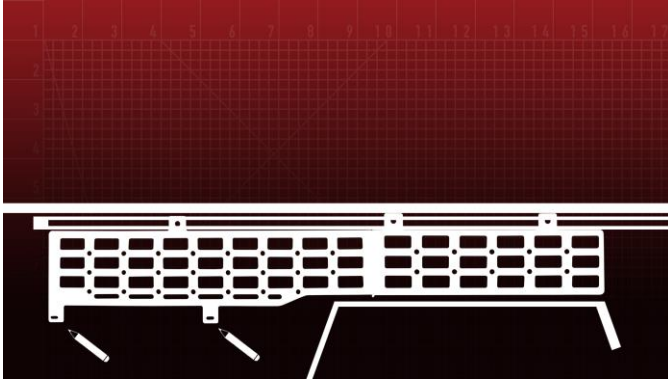

With a 23/64" drill bit, carefully drill these points. With a nutsert tool, install the included nutserts into these holes.

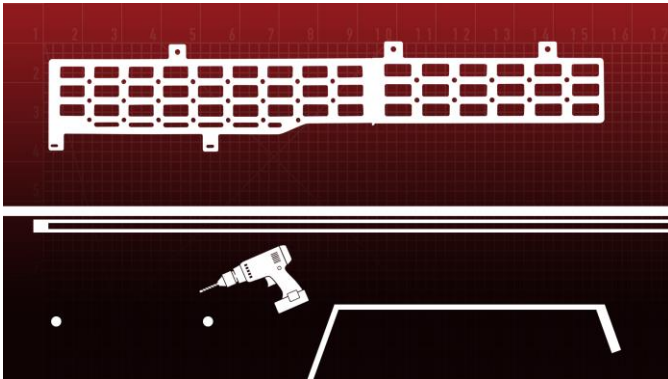

INSTALL THE PANEL(S)

Hold the panel up to the bed and align the T-Nuts to the brackets. With the included M12 bolts, washers, and a 19mm socket, secure the panel to the T-Nuts. Finally, with the 2 T-30 torx bolts (3 T-30 Torx bolts on 6' beds), secure the remaining brackets to the bed accessory panel or nutserts.

