




INSTALLATION INSTRUCTIONS

PART No.

FB21357
22+ 6thGen Ford Bronco
Foot Peg

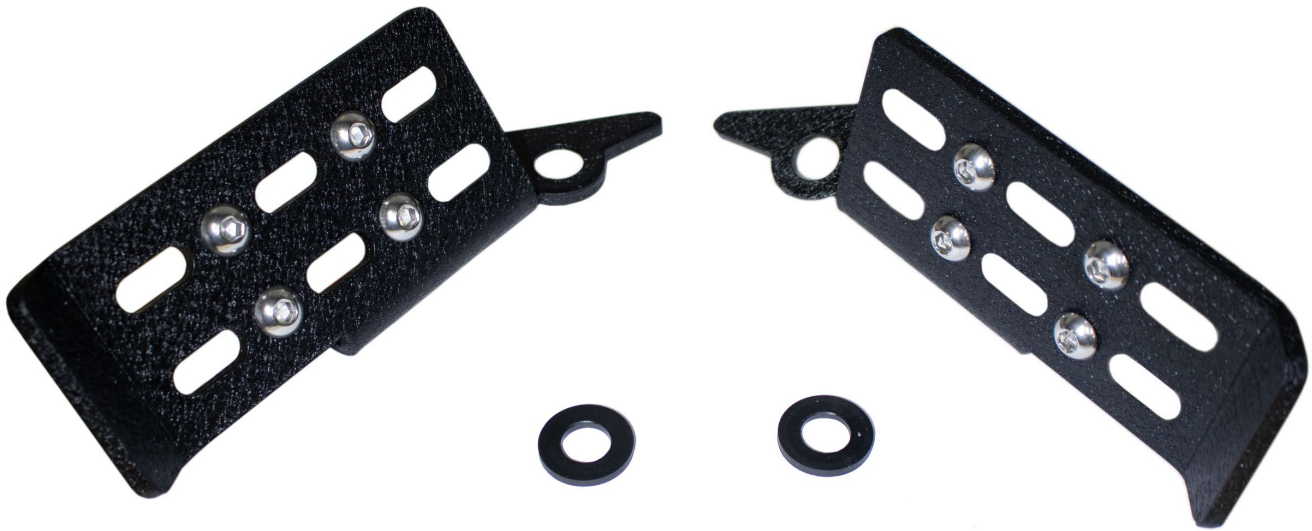

REQUIRED TOOLS

13mm Socket

KIT CONTAINS

Foot Peg (Driver/Passenger)
Nylon Washer

QTY

1ea
2

2135700

INSTALLATION INSTRUCTIONS

PART No.

FB21357

**22+ 6thGen Ford Bronco
Foot Peg**

1) UNINSTALL DOORS

Open the vehicle doors and with a 13mm socket, remove the 2 hinge bolts, followed by disconnecting the power harness.



Remove the door and place the door carefully aside.

2) INSTALL FOOT PEG

Place the side specific peg over the lower hinge socket followed by one of the included nylon washers, and secure it by reusing the factory bolt, with a 13mm socket.



Adjust and tighten down as desired.

