



INSTALLATION INSTRUCTIONS


PART No.

FB22003

**Jeep® JK Wrangler
Front Fullwidth Winch Bumper w/ LED's**



VIDEO AVAILABLE

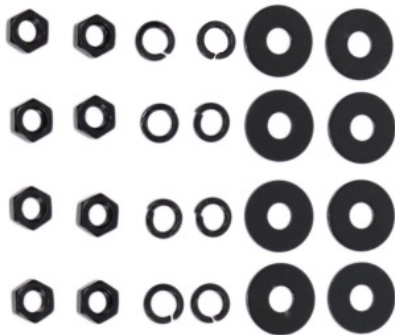

REQUIRED TOOLS

16mm Wrench

KIT CONTAINS

M10 Lock Washer

M10 Flat Washer

M10 Nut

D-Rings

QTY

8

8

8

2



2200300

INSTALLATION INSTRUCTIONS

PART No.

FB22003

Jeep® JK Wrangler Front Fullwidth Winch Bumper w/ LED's

1) REMOVE YOUR FACTORY BUMPER

Begin by removing your factory bumper. Ensure you disconnect your factory fog lights before you pull your bumper away.

2) PREP YOUR NEW BUMPER FOR INSTALL

Before installing your bumper on your Jeep, we suggest attaching your winch and fairlead (if applicable).

INSTALL YOUR FAIRLEAD AND WINCH

We recommend installing the fairlead first as you'll have access to the bolts at this time. Follow the instructions that came with your winch to install the fairlead and winch body to the pre-drilled holes on your new bumper.



3) INSTALL YOUR BUMPER

2 PERSON LIFT



WITH THE WEIGHT OF THE WINCH AND BUMPER, IT IS HIGHLY ADVISED TO HAVE HELP WHEN INSTALLING THE BUMPER!



With the help from a second pair of hands, lift the bumper up to the frame of the Jeep and insert the bumper studs into the frame. Using one (1) M10 nut, lock washer, and flat washer per stud, secure the bumper to the Jeep.

4) MOUNT THE SUPPLIED D-RINGS.



5) RUN YOUR WIRING

Wire in your new LED lights by splicing them into your old fog light wiring, or wire them to their own dedicated switch.

Wire your winch according to the winch manufacturer's instructions.

6) ENJOY YOUR NEW FISHBONE OFFROAD BUMPER!