



# INSTALLATION INSTRUCTIONS

**PART No.**

**FB22388**

**16-18 Chevy/GMC 1500  
Front Winch Bumper**



**VIDEO AVAILABLE**



### REQUIRED TOOLS

15mm Socket  
Screwdriver  
Allen Wrenches

Help of a friend

### KIT CONTAINS

Chevy Front Bumper  
Light Pod Mount  
M6 Screw  
M6 Hex Nut  
M4 Bolt

### QTY

1  
2  
8  
8  
8

2238800

## INSTALLATION INSTRUCTIONS

**PART No.**

**FB22388**

### 16-18 Chevy/GMC 1500 Front Winch Bumper

Install your sensors (if applicable) and winch at this time.

**1) REMOVE EXISTING BUMPER**


Begin removing your vehicle's existing front bumper, sensors, and grille. We show how to remove and disassemble your factory bumper over at

[www.YouTube.com/FishboneOffroad](http://www.YouTube.com/FishboneOffroad)



**2) ASSEMBLE**

Depending on the type of pod light you intend on installing, will dictate whether you use the light pod brackets or not. Flush mounted lights will be mounted normally, whereas side mounted LED will use the brackets.

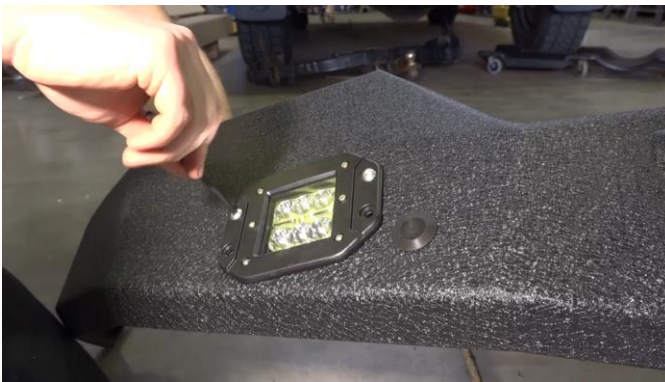

**3) INSTALL**

With the help of a friend, lift the bumper up to the frame secure it with the factory bolts with a 15mm socket.



Reinstall your grille.

**Optional:** Cut or remove your mudflaps to help improve the aesthetic of the vehicle.

