




INSTALLATION INSTRUCTIONS

PART No.

FB23115

**Jeep® YJ Wrangler
Rock Sliders**

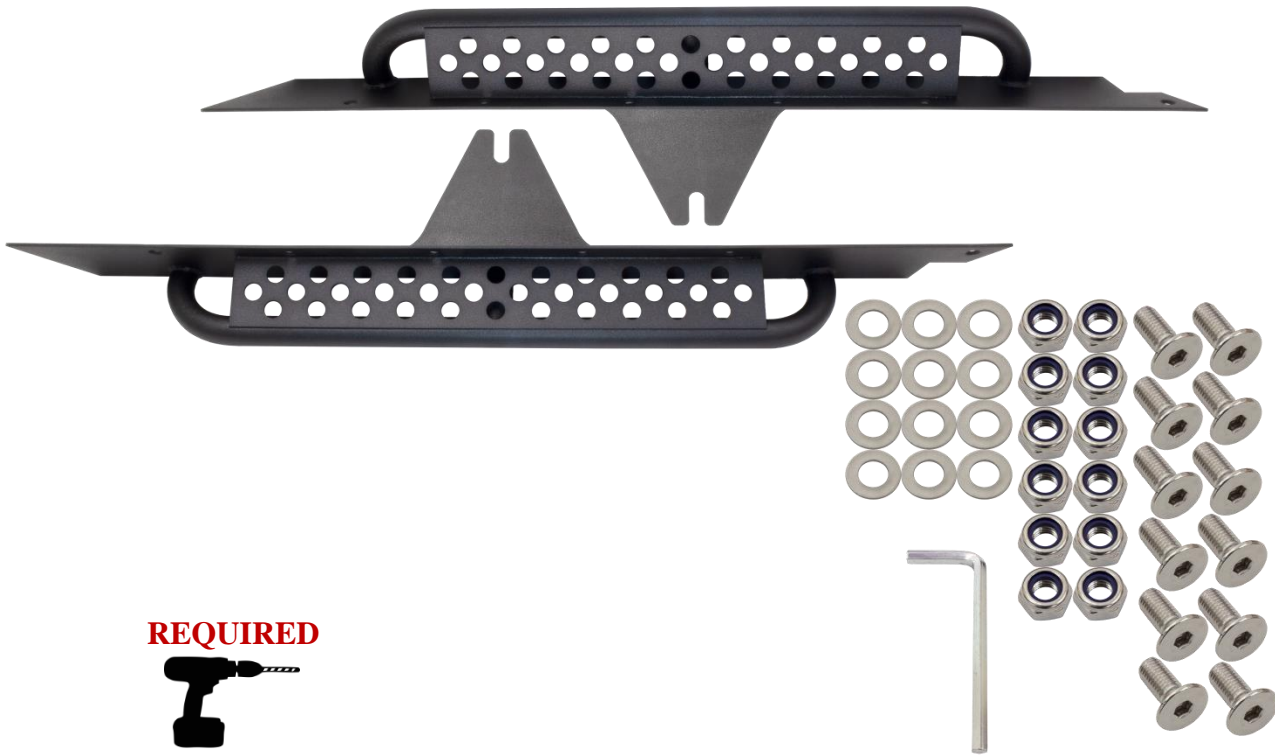

REQUIRED



REQUIRED TOOLS

- 16mm Socket
- 17mm Socket
- 3/8" Socket
- Drill
- 7/16" Drill Bit
- Pencil/Marker
- Hole Punch
- C-Clamp
- Body Clip Tool
- Jack & Block

KIT CONTAINS

- M10 Stainless Flat Washer
- M10 Stainless Nylon Hex Nut
- M10 Stainless Countersunk Screw
- Rock Slider (Left & Right)
- Allen Wrench

QTY

- 12
- 12
- 12
- 1ea
- 1

INSTALLATION INSTRUCTIONS

PART No.

FB23115

**Jeep® YJ Wrangler
Rock Sliders**

1) REMOVE YOUR OEM SIDE STEPS OR SLIDERS

Begin by removing your factory fender flare extensions with a 3/8" Socket and Body Clip Remover tool.



2) REMOVE FACTORY HARDWARE AND LIFT BODY

Remove the three bolts holding the body to the frame. Use a 16mm socket to remove these bolts.



In the approximate location shown above, use a jack to lift your body away from the frame. **You only need to lift a small distance to allow enough room to slide the new rock slider in place.**

3) INSTALL YOUR NEW ROCK SLIDERS

Slide the slotted ends of the slider up between the frame and body mount and lower the frame back down.



C-Clamp the slider to your body and ensure it rests flush.



Using something to write with, mark the positions of the bolt holes onto your Jeep's body that will need to be drilled away.



Remove the slider.

4) **DRILL YOUR JEEP!**

Open your door and pull back any carpet under the door sill. Ensure there is nothing in the way when you drill into this area from the outside.

Using a hole punch and a 3/8" drill bit, enlarge the pilot holes for the supplied hardware.



Using some silicon or paint, touch up the sheet metal you just drilled through to prevent rust. We recommend using a Q-tip for application.

5) **INSTALL THE SLIDER**

Replace the slider by following the previous steps and insert the M10 bolts and secure them with a washer and nut. Using the included allen and a 17mm socket, tighten each bolt from inside your Jeep. The front bolt will be accessed from your engine bay.



You may now reinstall your body mount bolts.

6) **RINSE AND REPEAT!**

Repeat these steps for the opposite side of your Jeep.

7) **ENJOY YOUR NEW FISHBONE OFFROAD ROCK SLIDERS!**

