



INSTALLATION INSTRUCTIONS

PART No.

FB23349

**Ford® 6thGen Bronco
Side Steps**



REQUIRED TOOLS

13mm Socket
15mm Socket

KIT CONTAINS

Driver Step
Passenger Step

QTY

1
1


2334900

1) PREPARE YOUR VEHICLE

If your vehicle has factory side steps installed, you can easily remove them with a 13mm socket.



With a 15mm socket, remove the 2 nuts from the front and rear body mount brackets.

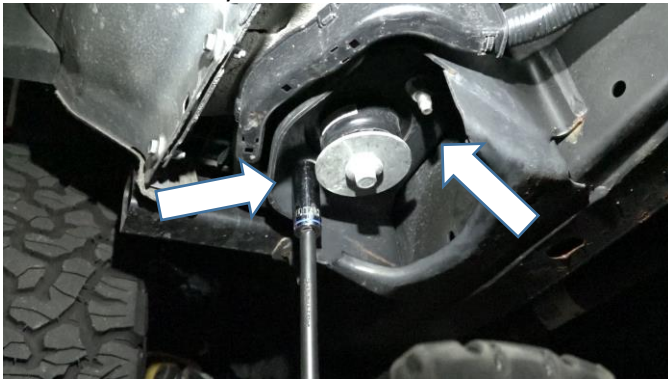

2) INSTALL THE STEPS

The driver and passenger side are oriented based off the body mount bracket shapes.

With the help of a friend, lift the step's bracket up into the body mounts and over the bolt studs. Then with a 15mm socket, replace the nuts removed in Step 1.