

**FISHBONE**  
OFFROAD



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25240**

**Jeep® '07-'18 Current 2 Door JK Wrangler  
Tub Rail Tie Downs**



### REQUIRED TOOLS

13MM Socket  
Ratchet  
Drill  
7/16" Drill Bit

### KIT CONTAINS

JK Tub Rail Tie Down (Left & Right)  
Hardtop Knobs  
M8 Flat Washer  
M8 Hex Nut

### QTY

1 ea  
4  
8  
4

#### 1) REMOVE TUB ACCESSORIES

Prepare the installation area by removing any accessories from your tub rails, including our storage racks, bins, and any hardtop Torx bolts.




Depending on your preference or setup, the Tie Down will sit on top of any accessory, meaning the included knobs will secure it and anything extra.



#### 2) TIE DOWN ORIENTATION

Determine the orientation you'd like for the Tie Downs, as they're driver and passenger side specific, but can be swapped by rotating them to face inboard or outboard.

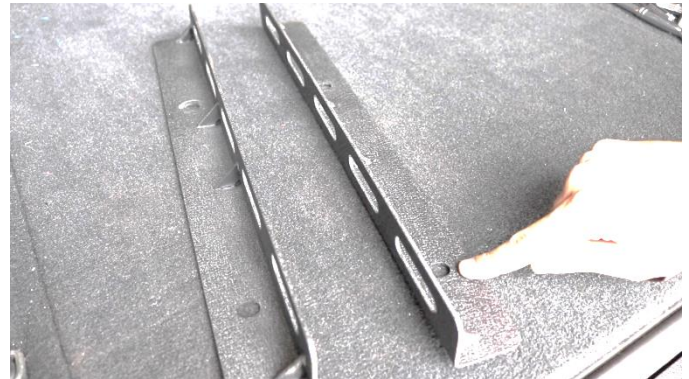

#### 3) MARK & DRILL

Place the Ties over the rear most tub rail holes. With a marker, mark the location of the Tie's forward most hole location onto your hardtop and tub rail. With a 7/16" drill bit, drill a hole into this point through both your hardtop and rail by creating a pilot hole and working up to the required size.

#### 4) INSTALL

Place all your desired accessories onto the rail with the Tie Down finally on top. With 2 of the included knobs secure the Tie to the tub rail. With 2 more knobs, washers, and hex nuts, secure the forward drilled holes with a 13mm socket.



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25240**

**Jeep® '07-'18 Current 2 Door JK Wrangler  
Tub Rail Tie Downs**



If you own a Soft top, you will use all included hardware to secure the Ties.

Repeat on the opposite side.

**5) ENJOY YOUR NEW FISHBONE OFFROAD TUB RAIL TIE DOWNS!**

