

## INSTALLATION INSTRUCTIONS

**PART No.**


**FB25314**

**Jeep® XJ Cherokee  
Rear Seat Hi-Lift Jack Mount**

Driver Side



Passenger Side

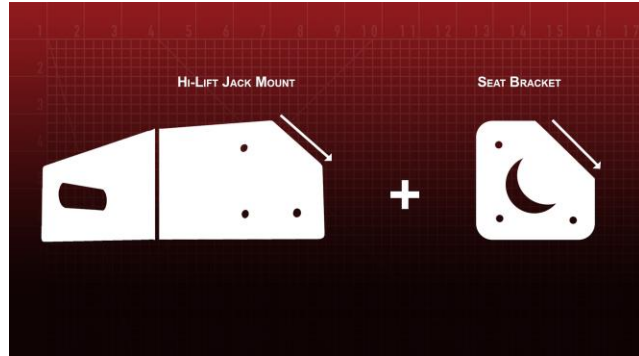

**REQUIRED TOOLS**

- 8mm Socket
- Ratchet

**KIT CONTAINS**

- Mount Brackets (Left & Right)
- 2" Hex Bolt
- 1" Hex Bolt
- Flat Washer
- Lock Washer
- Wing Nut

**QTY**

- 1ea
- 1
- 2
- 3
- 3
- 3

**FITS UP TO 48" JACK**

**HI-LIFT JACK NOT INCLUDED**

### Jeep® XJ Cherokee Rear Seat Hi-Lift Jack Mount

#### 1) PREPARE YOUR SEAT

Open your vehicle and lay/push down the rear seat. Locate the seat rail bracket on each side, just below the seat belt hanger.



With an 8mm socket, remove the 3 bolts from each bracket, and set them aside to be used in the next step.



#### 2) INSTALL THE BRACKETS

The mounting brackets are driver and passenger side specific, and can be identified by the shape of their mounting plates (See diagram).

Place the mounting bracket under the seat bracket so that it sits in between the vehicle body and the plastic seat bracket. Reinstall the seat bracket with the mounting bracket with the 3 bolts previously removed, with an 8mm socket.



#### 3) INSTALL YOUR JACK

Begin installing your jack. The foot will be installed on the passenger side with the included 1" bolts, washers, and lock washers. Place the foot onto the bracket until the holes line up with one another. Push the hardware through the plate and foot and secure it with 2 of the included wing nuts.



Repeat this with driver side and the 2" bolt and washers, while setting either the bolt to length by sliding it through the rail, or by adjusting the length of the jack.

#### 4) ENJOY YOUR HI-LIFT JACK MOUNT