

## INSTALLATION INSTRUCTIONS

**PART No.**

**FB31456**

**Jeep® JL Wrangler & JT Gladiator  
JL & JT Elite Fender LED Turn Signal**



### REQUIRED TOOLS

3mm Allen  
8mm Wrench  
Philips Screwdriver

### KIT CONTAINS

FB61452 LED Turn Signal  
LED Retaining Bracket  
M5 30mm Button Head Bolt  
M5 Flat Washer  
M5 Lock Washer  
M5 Nut  
Power Wire

### QTY

2  
2  
4  
4  
4  
4  
2

**Note:** These instructions will **NOT** cover how to remove factory fenders or inner fenders, and will **NOT** cover how to install inner fenders. Instructions on how to do so are available on [www.FishboneOffroad.com](http://www.FishboneOffroad.com) , or [www.FishboneOffroad.tv](http://www.FishboneOffroad.tv) .



## INSTALLATION INSTRUCTIONS


**PART No.**

**FB31456**

**Jeep® JL Wrangler & JT Gladiator  
JL & JT Elite Fender LED Turn Signal**

**1) REMOVE**

Begin by removing any factory inner and outer fenders your vehicle currently has installed, and install your Elite Outer Fenders. We show how to remove your factory fenders over at [www.FishboneOffroad.tv](http://www.FishboneOffroad.tv) Please refer to the included installation instructions for **Part# FB23454F & FB33455F**.

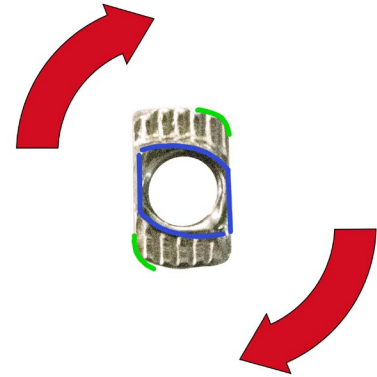

This helps the nut stay in place after installing. Insert (2) nuts into the rail, followed by rotating them clockwise.



**2) PREPARE**

Begin installing the hardware into the LEDs. The included nuts have a unique shape, and install into the LEDs rear rail in a specific way. Each angle of the plate shares the shape of its counter corner: pointed and rounded.



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB31456**

**Jeep® JL Wrangler & JT Gladiator  
JL & JT Elite Fender LED Turn Signal**

Loosely install the retaining brackets using the included bolts and washers with a Philips screwdriver. Be sure to plan out which LED will go on which side of the vehicle. The two flanges on the brackets will need to point up. Ensure the power wire points towards the inside of the engine bay. Connect the power wires to the LED base.



Ensure the light is centered, and tighten down the bolts from Step 2.

Finally, connect the light to the factory wiring harness.



### 3) **INSTALL TURN SIGNALS**

Open the hood of the vehicle, and run the power wire around the inner fender and up towards the top.



Insert the LED into the opening while being sure that the retaining flanges are on the outside of the fender brackets. Secure the brackets with the hardware that came with the Elite Fenders with a 3mm allen wrench and an 8mm wrench.