




INSTALLATION INSTRUCTIONS

PART No.

FB33130R

2018 – Current JL Wrangler
Rear Aluminum Inner Fenders

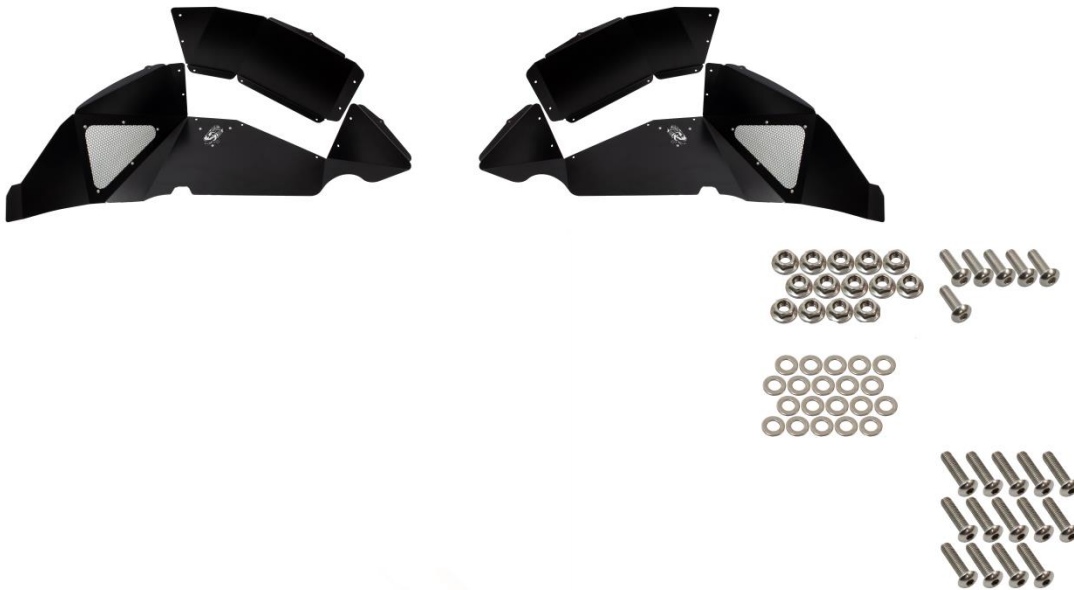

REQUIRED TOOLS

3mm Allen
10mm Socket
(2) 8mm Wrench
Drill
9/32" Bit

KIT CONTAINS

Rear Inner Fender Set (Driver/Passenger)

M5 16mm Button Head Bolt
M5 Stainless Washer
M5 10mm Button Head Bolt
M5 Stainless Flange Nut

QTY

1

6
20
14
14

1) PREPARE YOUR VEHICLE

Remove your vehicle's existing inner and outer fenders. Please visit Fishbone Offroad on YouTube for instructions on how to remove your OEM parts.




Within the driver side **rear** well, and with a 10mm socket, remove your fuel filler neck bracket bolt. Gently pull the neck loose and push it down below the stud. The passenger side doesn't need to be changed.




2) ASSEMBLE YOUR FENDERS

Loosely assemble your rear fender top and bottom using (7) 10mm button head bolts, washers, and flange nuts. With a 3mm Allen key, ensure the grate and plate hardware is secured before continuing.

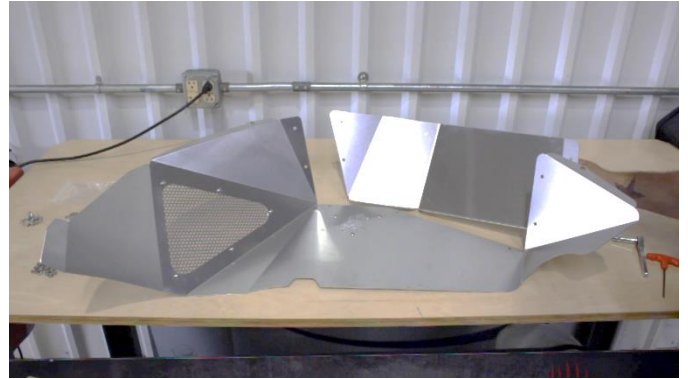

OPTIONAL 1: The accent grates and plates can be removed with a 3mm Allen key to be painted separately.

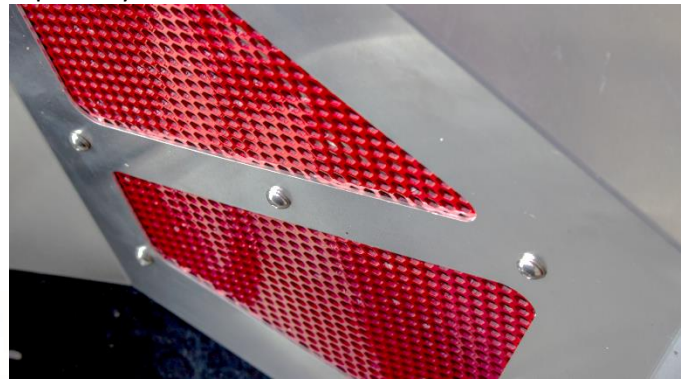

OPTIONAL 2: If your vehicle has Fishbone Offroad Tube Fenders (sold separately) installed, the rear most nutsert will need to be drilled out with a 3/8" drill bit.



3) INSTALL YOUR REAR FENDERS

Slide your inner fenders into the well and align the holes behind the body. With a 3mm Allen key and (3) 16mm bolts and washers, secure your fenders to the body.



Tighten all visible bolts with a 3mm Allen key.



Repeat on the opposite side.

4) REINSTALL YOUR OUTER FENDERS

Reinstall your outer fenders according to the manufacturer's instructions.

OPTIONAL: If your vehicle has Fishbone Offroad Tube Fenders, the rear inners and outsiders will share the rear most bolt hole. Using an M8 bolt and washer, secure the two to the body.



Repeat on the opposite side.

5) ENJOY YOUR NEW FISHBONE OFFROAD ALUMINUM INNER FENDERS!

