



REAR


**NOTE:**

IF YOU ARE INSTALLING OUR OUTER FENDER FLARES AS WELL, YOU WILL NEED TO **DRILL OUT** THE NUTSERT FROM THE REAR SET OF INNER FENDERS.

**NOTE2:**

IF YOU ARE INSTALLING OUR OUTER FENDER FLARES AS WELL, YOU WILL NEED TO INSTALL THE OUTER FLARES **FIRST**, FOLLOWED BY THE INNER LINERS.

THE REAR INNER LINERS WILL SHARE THE DRILLED HOLE WITH THE OUTER FLARES.

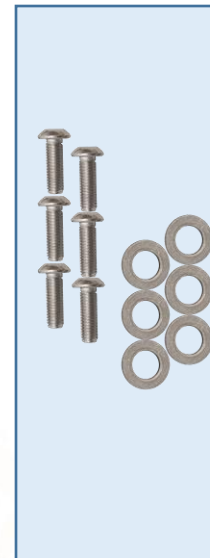

**REQUIRED TOOLS**

3mm Allen  
10mm Socket

**KIT CONTAINS**

Rear Inner Fender Set (Driver/Passenger)

**QTY**

1

**Rear Set:**

M5 20mm Button Head Bolt

6

M5 10mm Washer

6

#### 1) PREPARE YOUR VEHICLE

Remove your vehicle's existing inner and outer fenders. Please visit Fishbone Offroad on YouTube for instructions on how to remove your OEM parts.



Within the driver side rear well, and with a 10mm socket, remove your fuel filler neck bracket bolt.



Gently pull the neck loose and push it down below the stud. The passenger side doesn't need to be changed.



#### 2) INSTALL YOUR REAR FENDERS

Secure the fender with a 3 20mm bolts and 10mm washers behind the body.



Tighten all visible bolts with a 3mm Allen key.

Repeat on the opposite side.

#### 3) ENJOY YOUR NEW FISHBONE OFFROAD ALUMINUM INNER FENDERS!

