



INSTALLATION INSTRUCTIONS

PART No.

FB33193F

2018+ JL Wrangler & 2020+ JT Gladiator

Aluminum Black Powder Coated Front Inner Fenders



FRONT


NOTE:

IF YOU ARE INSTALLING OUR OUTER FENDER FLARES AS WELL, YOU WILL NEED TO **DRILL OUT** THE NUTSERT FROM THE REAR SET OF INNER FENDERS.

NOTE2:

IF YOU ARE INSTALLING OUR OUTER FENDER FLARES AS WELL, YOU WILL NEED TO INSTALL THE OUTER FLARES **FIRST**, FOLLOWED BY THE INNER LINERS.

THE REAR INNER LINERS WILL SHARE THE DRILLED HOLE WITH THE OUTER FLARES.

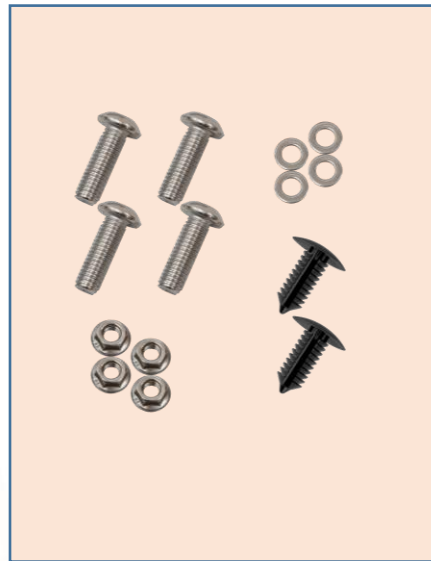

REQUIRED TOOLS

3mm Allen
10mm Socket

KIT CONTAINS

Front Inner Fender Set (Driver/Passenger)

QTY

1

Front Set:

M5 16mm Button Head Bolt	4
M5 Washer	4
M5 Flange Nut	4
Push Pin	2

1) PREPARE YOUR VEHICLE

Remove your vehicle's existing inner and outer fenders. Please visit www.FishboneOffroad.TV for instructions on how to remove your OEM parts.



Tighten all visible bolts with a 3mm Allen key.

Repeat on the opposite side.

2) INSTALL YOUR FRONT FENDERS

Note: The mesh and accent plates can be removed with a 3mm Allen key to be painted separately.

Slide your front inner fenders into the well and align the holes behind the body. With a 3mm Allen key secure your fenders to the body with the included hardware.



Align the front most panels with the top of the frame and use the included Push Pin to secure the tab into the top most frame hole, as shown.

3) ENJOY YOUR NEW FISHBONE OFFROAD ALUMINUM INNER FENDERS!

