

Rapsodo®

PRO


CAGE INSTALLATION

Assembly requires a 5.5mm Allen wrench.



STEP 1:

Before inserting the unit inside the cage, loosen all 4 bolts on the corners with your Allen wrench.

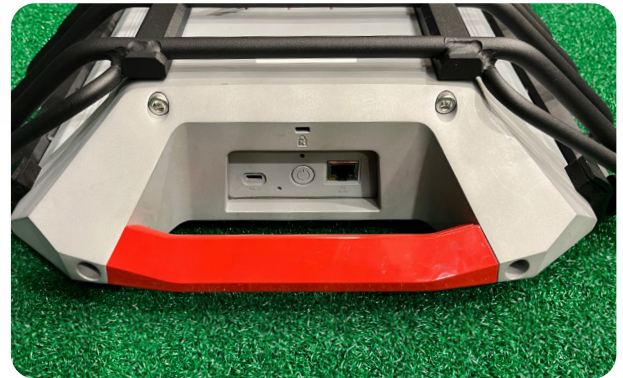


STEP 2:

Slide the Rapsodo PRO 3.0 into the protective cage from either side. Do not force the cage if the screws are not loose enough, as this could damage the rubber stoppers.



STEP 3:

Tighten all 4 bolts on the corners of the cage until the rubber stoppers are securely touching the PRO 3.0 unit. Do not over tighten the bolts as this could damage the unit.

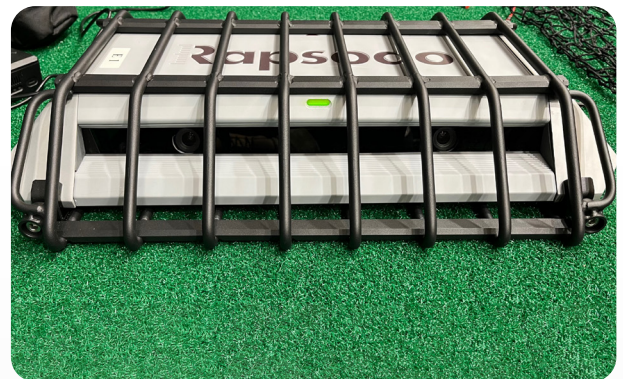

STEP 4:

Make sure all 4 corners are fastened and the unit is completely covered by the cage. Make sure the LED light is centered in the middle of the cage and lenses are between the bars. No lights or lenses should be covered.

If you have any questions, please reach out to support@rapsodo.com.