


TOREF CONCEPTS GUIDE

HOW TO ATTACH SLING TO BUTTSTOCK WITHOUT HARDWARE



HOW TO ATTACH SLING TO ANY TYPE OF ATTACHMENT POINT & HARDWARE

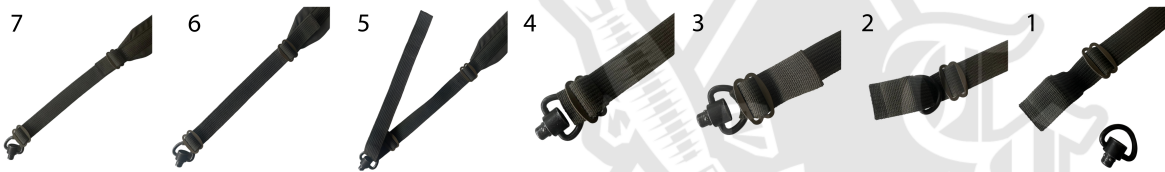

ATTACHMENTS



ADAPTERS & ATTACHMENTS POINTS



Built-in attachment

Requirements

A weapon with a basic installed attachment

Steps

Ensure the attachment is securely fastened
Attach the sling through the front attachment / iron sight gas block and secure it with sliders
Attach the sling through the stock hole and secure it with sliders
Adjust the sling length and check the connection

Paracord loops attachment

Requirements

4 pieces of paracord, 20-25 cm each

Steps

Tie 4 paracord loops
Attach 2 loops to the front part of the weapon
Attach 2 loops to the rear part at the stock
Thread the sling through the loops and secure it with sliders

QD/HK Hook Attachment

Requirements

Weapon with compatible mounts
Sling with QD/HK Hook

Steps

Ensure the QD/HK Hook mounts are working properly
Note Avoid using low-quality parts
Attach the sling to the front and rear hooks
Check the connections to prevent accidental detachment

חיבור רצועה לחיבורים מובנים

מה דרוש

נשק עם חיבורים בסיסיים המותקנים

שלבים

ודאו שהחיבור מחוזק כראוי
השחילו את הרצועה דרך החיבור הקדמי וקבעו עם סליידרים
השחילו את הרצועה דרך חור בקת וקבעו עם סליידרים
כוונו את אורך הרצועה ובדקו את החיבור

חיבור רצועה עם פארקורד

מה דרוש

חתיכות פארקורד 20-25 ס"מ x 4

שלבים

קשרו 4 לולאות פארקורד
חברו 2 לולאות בחלק הקדמי של הנשק
חברו 2 לולאות בחלק האחורי בקת
השחילו את הרצועה דרך הלולאות וקבעו עם סליידרים

חיבור רצועה עם QD/HK Hook

מה דרוש

נשק עם תושבות מתאימות
חיבורי 2 x QD/HK Hook

שלבים

ודאו שתושבות וחיבורי QD/HK Hook עובדות כראוי
הערה הימנעו משימוש בחלקים ללא תקן
חברו את הרצועה לקרבינים הקדמיים והאחוריים
בדקו את החיבורים למניעת ניתוק