

RX62000 & RX62500

Fitting Instructions



Thank you for choosing Relax a quality
Australian manufactured product

Fitting Reef 450 & Reef 550:

Due to the stress on cabin walls, the hold up bracket is positioned so that the pole is straight up and never leaning out.

Mark the position of the locking bracket and drill the centre.

Nylon packers are supplied if locking bracket does not pick up main tube.

Flybridge Fitting:


If you are fitting the brackets to your flybridge, you may choose to use the lower hole on the main tube, to set the poles lower to the water.

Feet Packers:

Feet packers are recommended to be used on alloy boats.

RX60502-SET - 10mm Black Packers

RX60500-SET - 10mm White Packers

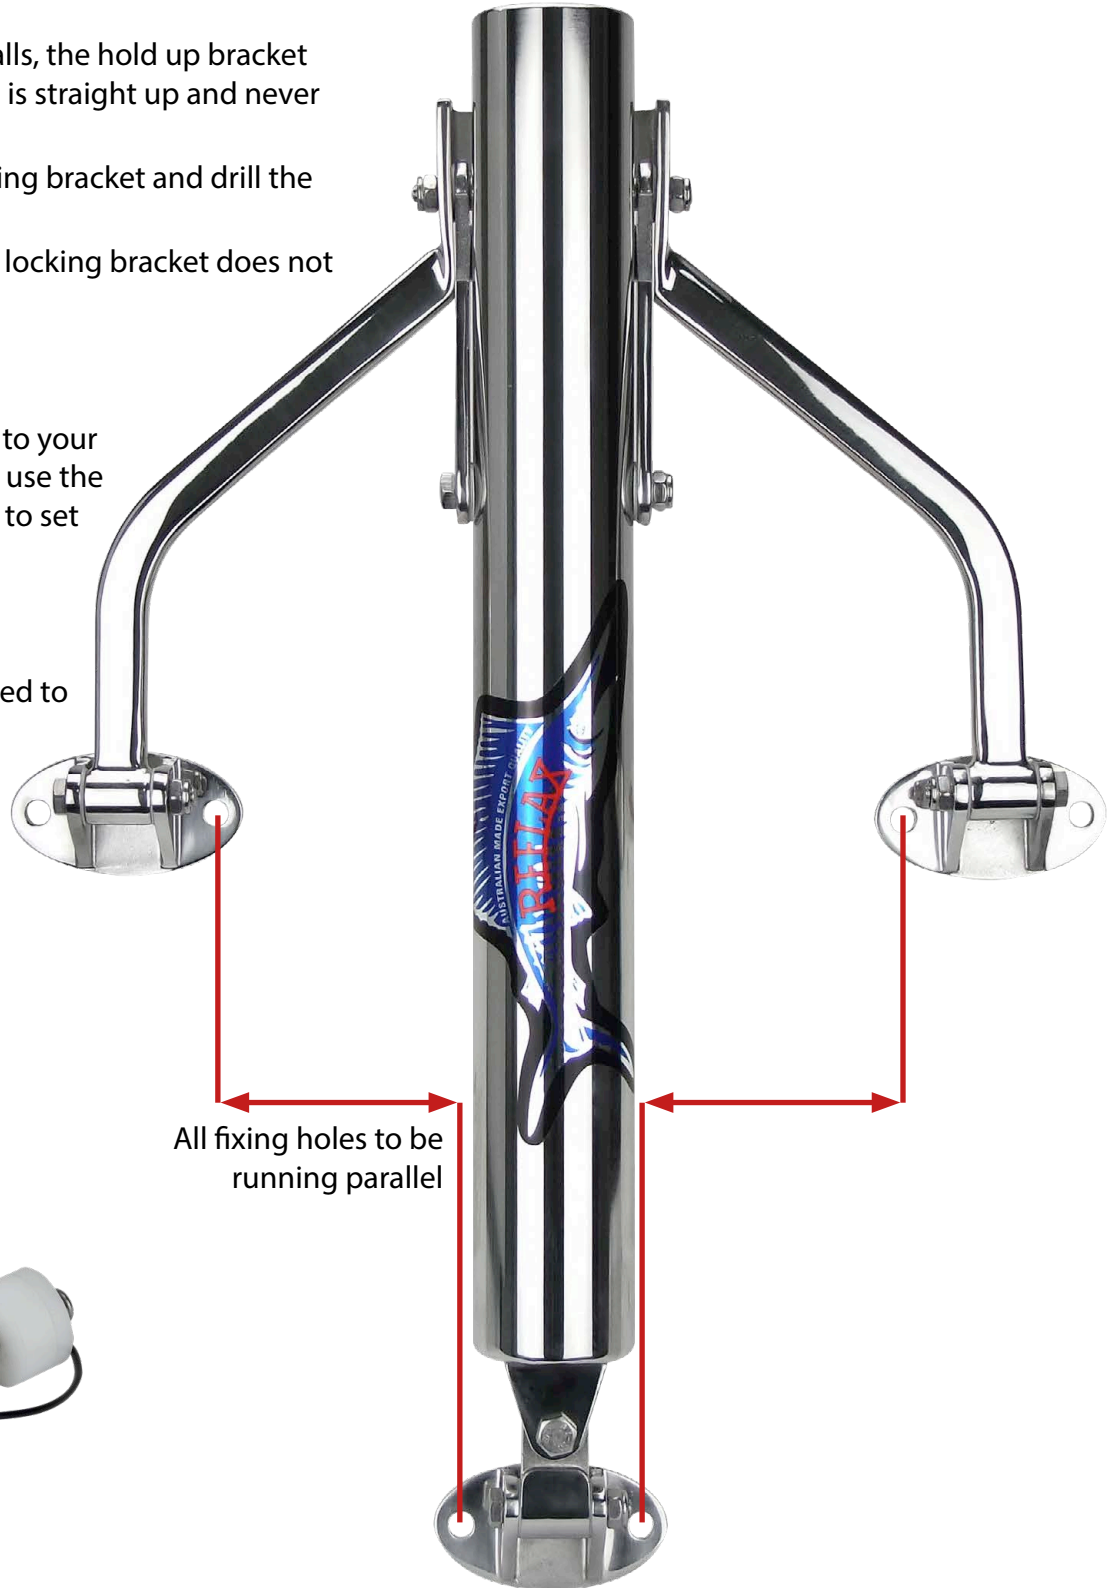

REELAX MARINE & GAME FISHING

2/10 Glasson Drive Bethania, Qld 4205

07 3445 0486

www.reelax.com.au

Follow us on: 