




Installation Instructions

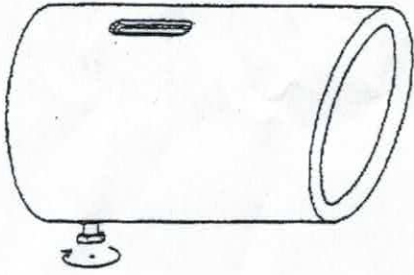

1. Ensure bolt is loosened before fitting chromed exhaust tip as to allow installation over tailpipe.

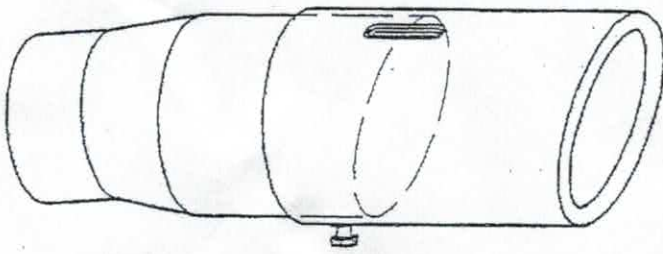

2. Position chromed exhaust tip over tailpipe with bolt facing down.

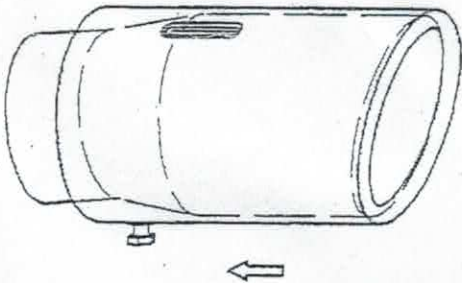


3. Slide chromed exhaust tip over tailpipe towards the muffler until the rolled edge of the chromed exhaust tip contacts the tip of the tailpipe.



Note

Due to chromed exhaust tip design, reasonable force is required to slide chromed exhaust tip over tailpipe

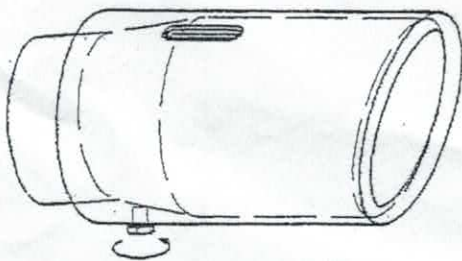

4. While maintaining chromed exhaust tip in this position, tighten bolt until contact occurs with tailpipe.



Caution

Bolt should be tightened to 5Nm. Note, do not over tighten, overtightening may cause damage to tailpipe.

5. Ensure that chromed exhaust tip is securely fitted to prevent rattle between chromed exhaust tip and tailpipe



Caution

Failing to follow the above installation instructions may result in non-conformance to relevant Australian Design Rules.