



1: Unwind Jack and lay in wheel well



2: Fold packing from jack box and place over top part of Jack

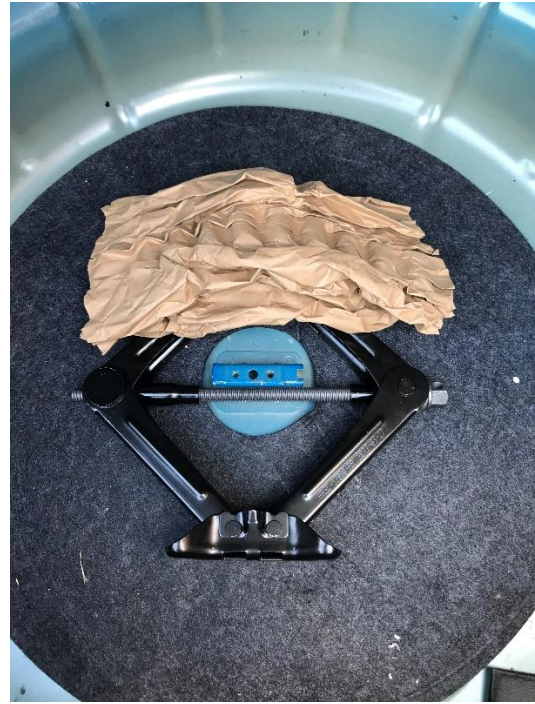

3: Place jack handle between tyre and wheel well

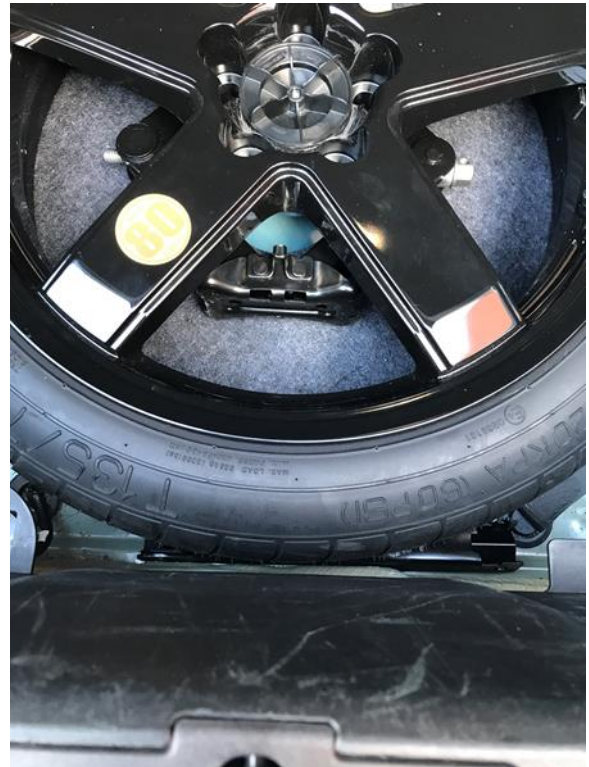

4: Tighten up retainer from Compressor

The packaging when folded will prevent jack from moving around, we suggest getting a piece of high density foam later on if not happy with the look.