

Installation Instructions #UTL-1000 or #UTL-2000 Universal Tail Light wiring harness

State Requirements!

When it comes to tail-lights some states have requirements as to how high they have to be mounted. Check your state requirements before mounting.

This universal tail-light wiring harness will work with every car being towed on the market today, or be used on any trailer.


Each L.E.D. strip mounts under the rear bumper with provided 2 sided tape. Then fasten the wire up to the bottom of car or trailer chassis with provided zip ties. Keep in mind the wire is longer than the car/trailer. But make sure the wires are long enough to hook into the back of your motorhome/truck before mounting the excess wires up under the front of the car or trailer.



NSA RV Products, Inc. 445 W. Lincoln Rd. Iola, KS 66749 620-365-7714

www.nsarvproducts.com sales@nsarvproducts.com

Rear of car/trailer

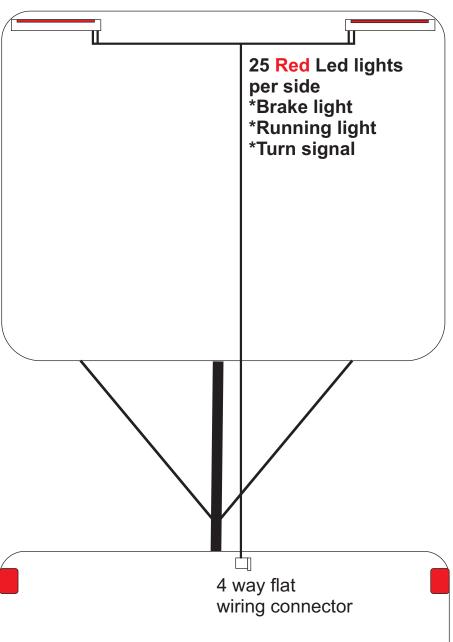

Motorhome/truck