


# Floor to Ceiling Grab Pole Fitting & Instructions




Measure the required grab pole length & cut from the top downwards



Mark poles bottom position

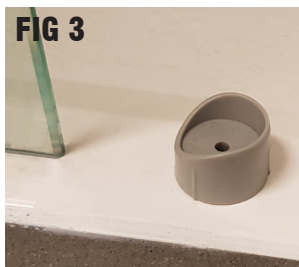

Chamfered bottom fixing

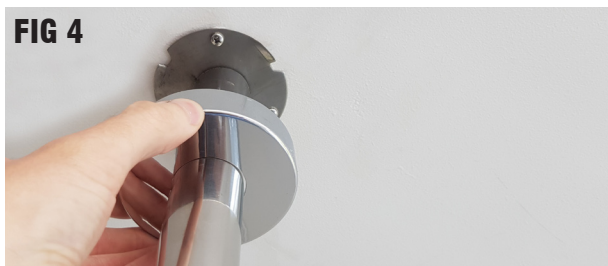

Slide the top cover up to the ceiling rose & turn anti-clockwise to lock




Ensure the rubber spacers are inserted in the lugs & secure to the shower screen.

<b>1.</b>	Measure from the top surface of the shower tray / floor to the ceiling. <b>FIG 1 solid red line.</b>
<b>2.</b>	Deduct approx 5mm off your measurement & cut the Grab Pole to this size. You <b>MUST</b> cut the Grab Pole from the top down. <b>FIG 1 dashed red line.</b>
<b>3.</b>	Place the ceiling rose top fixing into the top of the Grab Pole.
<b>4.</b>	Offer the Grab Pole up to the glass screen ensuring the Grab Pole lugs are fully engaged onto the shower screen. Using a pencil mark around the poles base & the 3 x hole positions in the ceiling rose top fixing.
<b>5.</b>	Remove the Grab Pole. Find the centre point for your bottom fixing, mark & pilot drill a hole into the shower trays top surface or floor using a suitable drill bit. <b>FIG 2</b>
<b>6.</b>	The Grab Poles bottom fixing has a chamfered side for easy fitting. Position the chamfered edge closest to the edge of the shower screen, apply a small amount of silicone sealant to the underside of the bottom fixing & then screw it into position using a suitable fixing. <b>FIG 3</b>
<b>7.</b>	Pilot drill 3 x holes into the ceiling to accept the top fixing ceiling rose. You <b>MUST</b> ensure you are using a suitable fixing to suit the ceiling substrate.
<b>8.</b>	Slide the top fixing cover onto the Grab Pole then insert the top fixing ceiling rose into the end of the Grab Pole. <b>FIG 4</b>
<b>9.</b>	Guide the bottom of the Grab Pole over the bottom fixing ensuring the Grab Pole lugs fully engage onto the shower screen.
<b>10.</b>	Align the top fixing ceiling rose & securely fix it into position.
<b>11.</b>	Slide the top fixing cover up to the ceiling and turn anti-clockwise to lock it in position. <b>FIG 4</b>
<b>12.</b>	Using a 5mm allen key secure the 3 x lugs onto the Grab Pole. Ensure the rubber spacers are inserted in the lugs to protect the glass as shown. <b>FIG 5</b>

## TECHNICAL SUMMARY

•	32mm diameter, stainless steel tube
•	Chrome plated, brass lugs. 8mm aperture, 80L x 34D x 34H
•	Pole height: 2500mm or 4000mm in length
•	Gap between grab pole & screen edge: 40mm
•	Projection from edge of shower screen to outer edge of pole: 72mm
•	Internal floor fixing & external ceiling fixing with 80mm diameter shroud

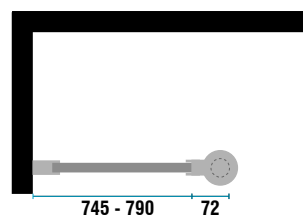

**PROJECTION: 800mm shower screen with grab pole illustrated.**